


Trainings ▾


Engine Views

The following illustrations contain information about engine components, filter locations, drain points, and access locations for instrumentation and engine controls. The information and configuration of components shown in these drawings are of a general nature. Some component locations will vary, depending on applications and installations.

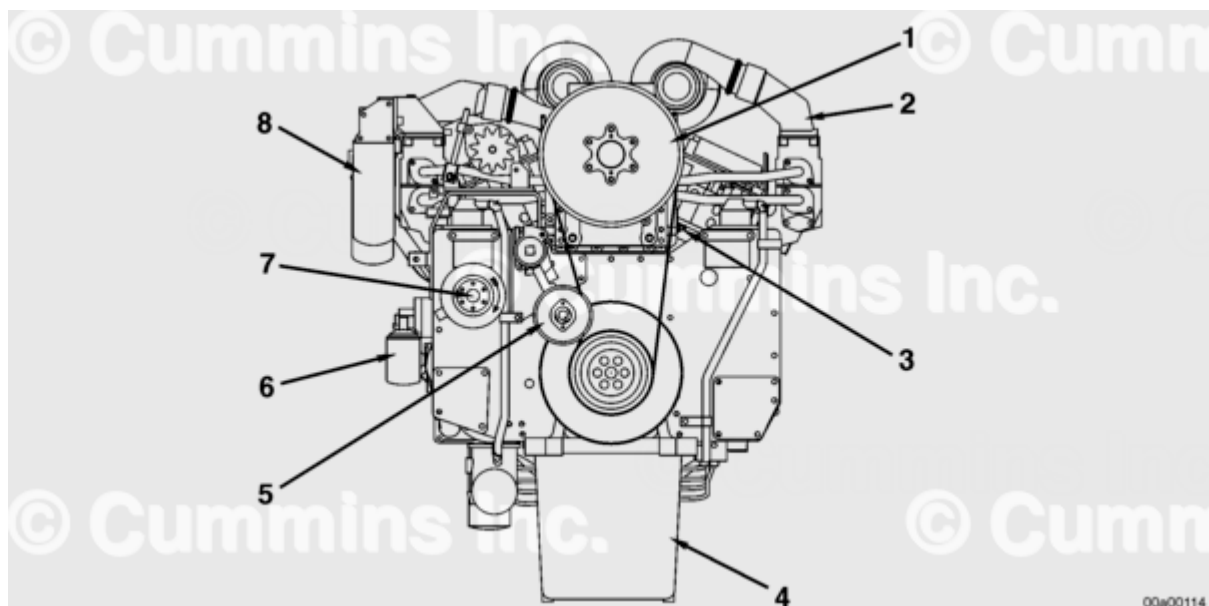

Front View - Aftercooled


1. Fan hub
2. Air crossover
3. Coolant temperature sensor
4. Oil pan
5. Fan idler tensioner pulley
6. Water filters
7. Accessory drive
8. Full-flow or combination oil filters.

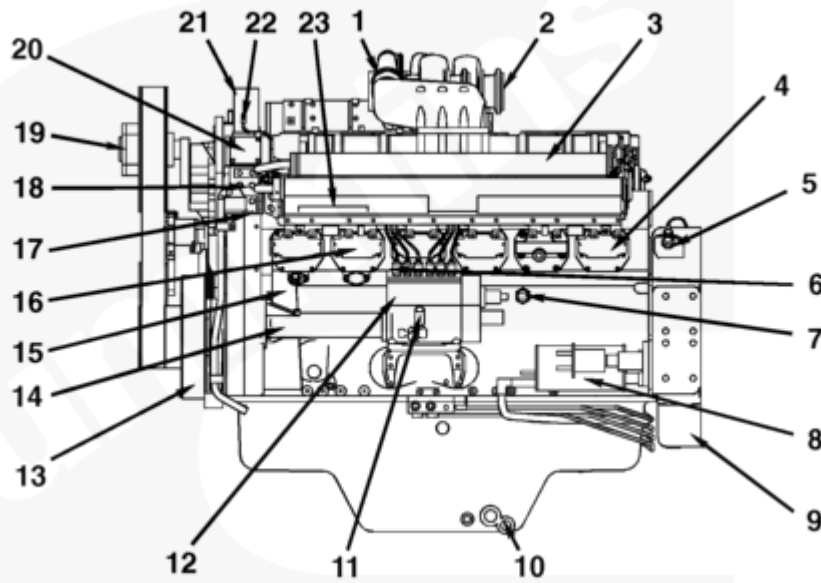

00a00111

Left View - Aftercooled


1. Turbocharger inlet connection
2. Turbocharger outlet connection
3. Aftercooler housing (intake manifold on charge air cooled engines)
4. Cam follower cover
5. Engine speed sensor (engine position sensor industrial engines)
6. High-pressure fuel supply lines
7. Oil pressure sensor
8. Prelubricating starter (industrial engines **only**)
9. Flywheel housing
10. Lubricating oil drain
11. Fuel lift pump
12. Fuel injection pump overflow valve
13. Vibration damper
14. Fuel pump drive
15. ECM (industrial **only**)
16. Industrial data link (J1587 and 2 6-pin Deutsch™ connectors, or J1939/J11587 left bank and 1 9-pin Deutsch™ connector)
17. Coolant temperature sensor
18. Crankcase breather
19. Fan hub
20. Thermostat housing
21. Water outlet connection
22. Water vent tubes
23. Engine dataplate.

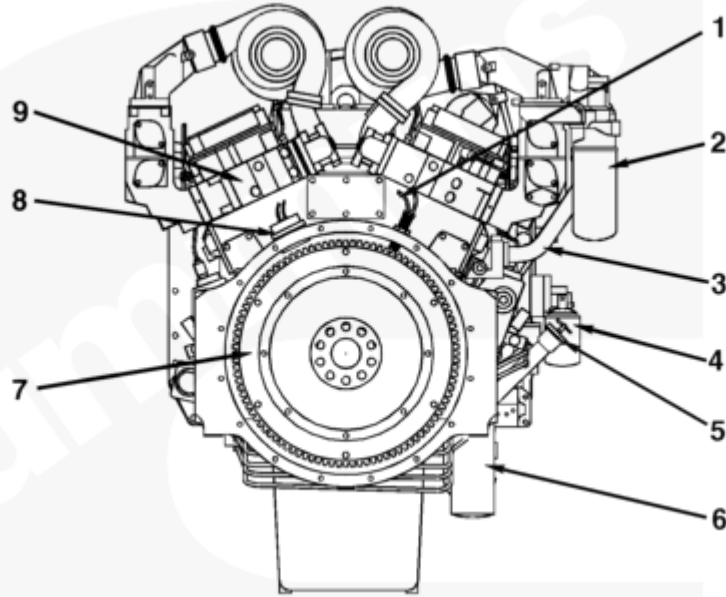

00a00113

Rear View - Aftercooled

1. Engine speed sensor (industrial)
2. Lubricating oil bypass filters (when equipped with full-flow oil filters)
3. Lubricating oil transfer tube
4. Water filters
5. Lubricating oil filler tube
6. Fuel filters
7. Flywheel
8. Engine position sensor (industrial)/engine speed sensor (generator-drive, generator set)
9. Cylinder head.

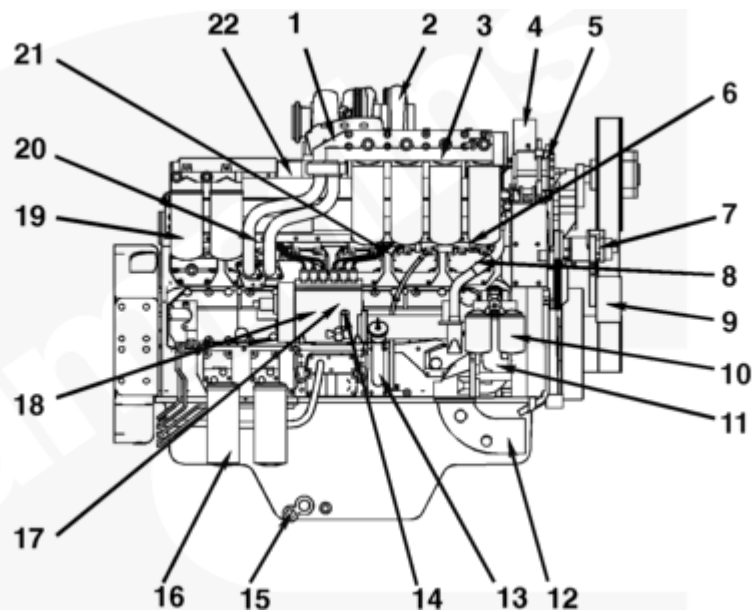


00a00110

Right View - Aftercooled

1. Air crossover housing
2. Turbocharger

3. Full-flow or combination oil filters
4. Water outlet connection
5. Lifting bracket
6. ECM (industrial **only**)
7. Fan belt idler assembly
8. Aftercooler water inlet tube
9. Fan belt idler pulley
10. Water filter
11. Water pump
12. Water inlet connection
13. Lubricating oil filler tubes
14. Fuel lift pump
15. Lubricating oil drain
16. Fuel filters
17. Fuel injection pump overflow valve
18. Fuel injection pump
19. Lubricating oil bypass filters (when equipped with full-flow oil filters)
20. Lubricating oil transfer tube
21. J1939 3-pin data link (industrial engines)
22. Air intake manifold.

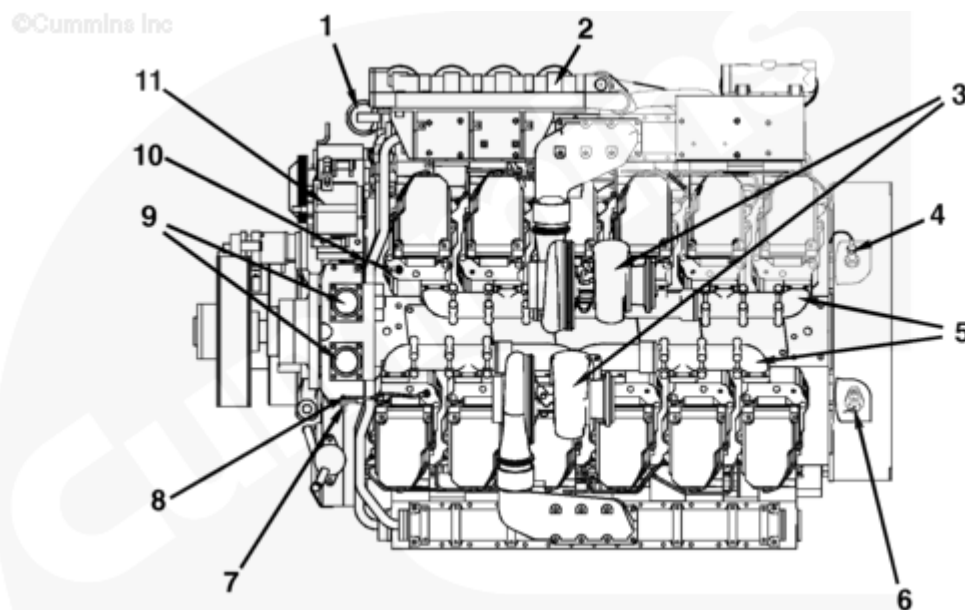

Top View - Aftercooled

00a00112

1. Water filter
2. Full-flow or combination oil filters
3. Turbochargers
4. Engine speed sensor (industrial)
5. Exhaust manifolds
6. Engine position sensor (industrial)/engine speed sensor (generator-drive, generator set)
7. Coolant temperature sensor
8. Water vent connection

- 9. Water outlet connection
- 10. Water vent connection
- 11. Alternator.

Last Modified: 16-Dec-2008
