


Trainings ▾

Preparatory Steps


Dual-Piston

Disconnect the burn solenoid connector from the Centinel™ wiring harness.

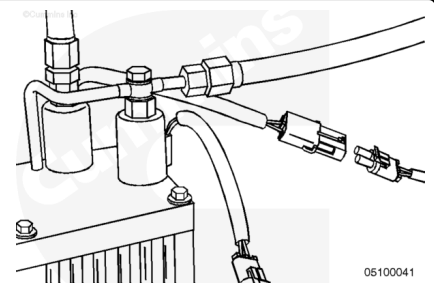


Remove the hose (1) from the top of the solenoid.

While holding the solenoid nut (3), loosen and remove the 3/8-24 SAE o-ring adapter (2).

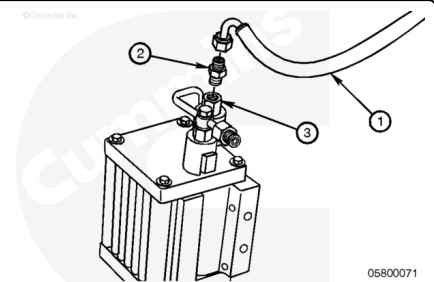


Single-Piston

Disconnect the burn solenoid connector from the Centinel™ wiring harness.

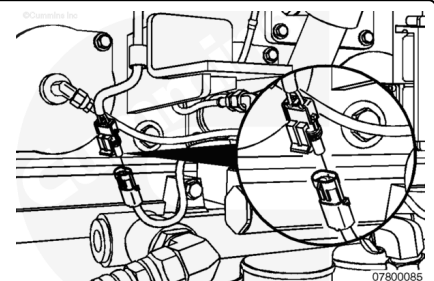

Remove the hose (1) from the top of the solenoid.

While holding the solenoid retaining nut (3), loosen and remove the 3/8-24 SAE o-ring adapter (2).

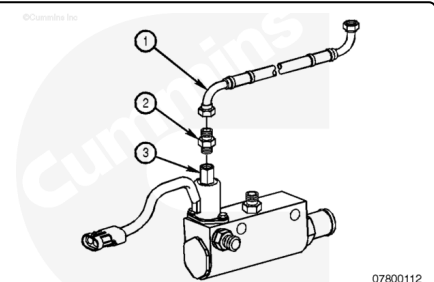

Remove


Dual-Piston

Loosen and remove the solenoid retaining nut (1).

Lift and remove the solenoid cover and solenoid coil (2) from the valve.

Remove the spring washer (3) and two washers/spacers (4) that were under the solenoid coil.

Remove the o-ring (5) from the solenoid mounting stem.

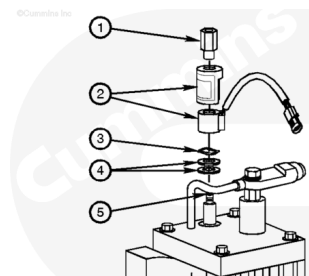

06800072


Single-Piston

Loosen and remove the solenoid retaining nut (1).

Lift and remove the solenoid cover and solenoid coil (2) from the valve.

Remove the spring washer (3) that was under the solenoid coil.

Remove the o-ring (4) from the solenoid mounting stem.

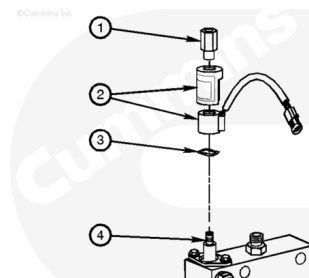

07800107

Install

Dual-Piston


Lubricate and install a new o-ring (5) on the solenoid mounting stem.

Install the two washer spacers (4) and the spring washer (3).

Place the new solenoid coil and cover (2) on the valve mounting stem.

Install the solenoid retaining nut (1) and tighten.

Torque Value: 5 n•m [44 in-lb]

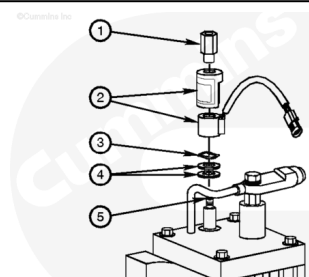

06800072

Single-Piston


Lubricate and install a new o-ring (4) on the solenoid mounting stem.

Install the spring washer (3).

Place the new solenoid coil and cover (2) on the valve mounting stem.

Install the solenoid retaining nut (1) and tighten.

Torque Value: 5 n•m [44 in-lb]

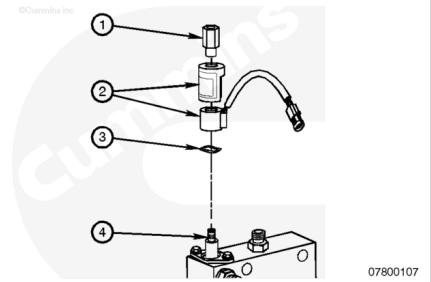

Finishing Steps


Note : Inspect the o-ring for damage. Replace if necessary.

Install the 3/8-24 o-ring adapter (2).


While holding the solenoid retaining nut (3), tighten the adapter.

Torque Value: 14 n•m [124 in-lb]

Install the hose (1) to the 3/8-24 o-ring adapter.

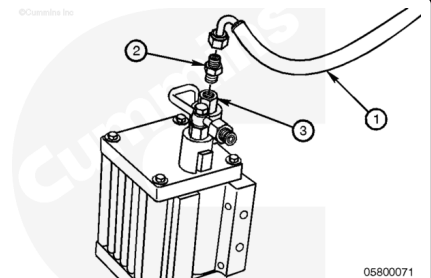

Connect the burn solenoid connector to the Centinel™ wiring harness.

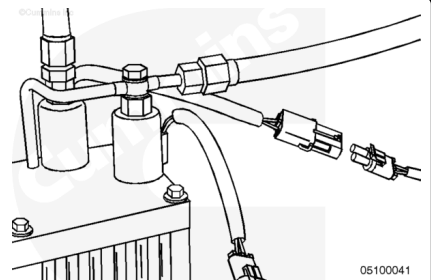

Single-Piston


Note : Inspect the o-ring for damage. Replace if necessary.

Install the 3/8-24 o-ring adapter (2).


While holding the solenoid retaining nut (3), tighten the adapter.

Torque Value: 14 n•m [124 in-lb]

Install the hose (1) to the 3/8-24 o-ring adapter.

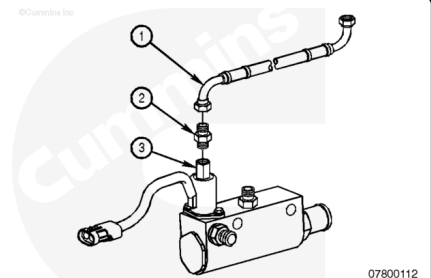

Connect the burn solenoid connector to the Centinel™ wiring harness.

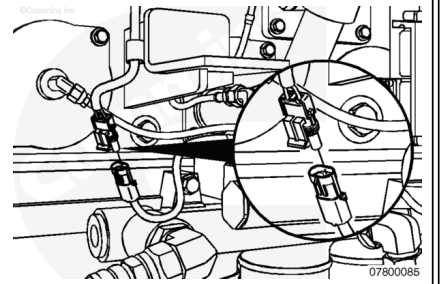

Last Modified: 20-Apr-2004
