

Trainings ▾

Preparatory Steps


Remove the Centinel™ control module. Refer to Procedure 019-130 (/qs3/pubsys2/xml/en/procedures/96/96-019-130-tr.html).

Disconnect the sensor connector from the wiring harness.



Remove

Remove the pressure sensor with a 1-1/4-inch deep well drive socket, Part Number 3823843, and a ratchet.

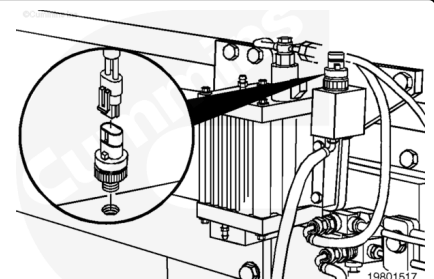


Install

Inspect the new sensor for an o-ring.

Install the new pressure sensor and tighten.

Torque Value: 14 n•m [124 in-lb]

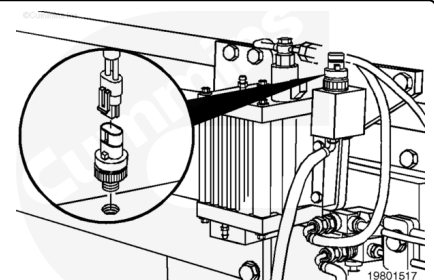


Finishing Steps

Install the Centinel™ control module. Refer to Procedure 019-130 (/qs3/pubsys2/xml/en/procedures/96/96-019-130-tr.html).

Connect the sensor connector to the wiring harness.

©Centinel Inc.

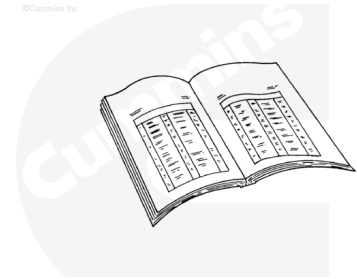

ck800wa

Last Modified: 22-Apr-2004
