


Trainings ▾

Remove


CELECT™ or CELECT™ Plus

Disconnect the wiring harness connector from the Centinel™ control module.

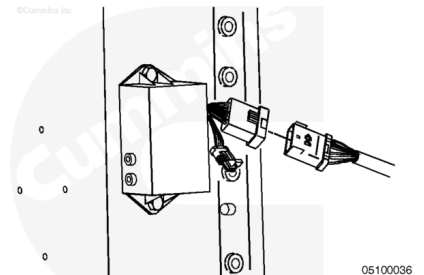


Remove the two capscrews that hold the Centinel™ control module to the make-up oil tank.

Remove the Centinel™ control module.

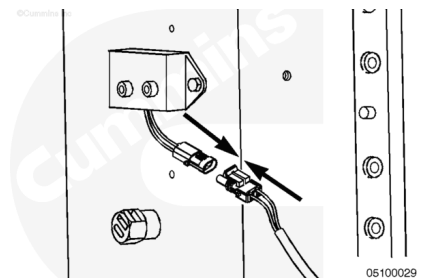


PT or STC


Remove the 28-pin connector to the Centinel™ control module.

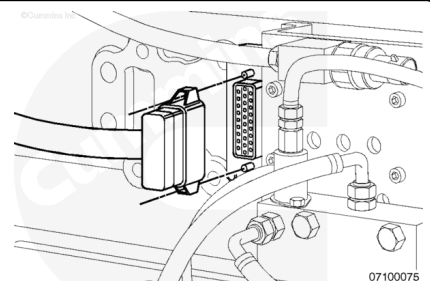

Remove the Centinel™ mounting bracket. Refer to Procedure 007-090 (</qs3/pubsys2/xml/en/procedures/96/96-007-090.html>).

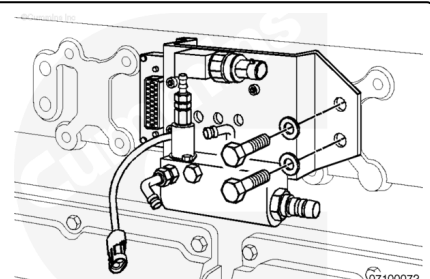


Remove the Centinel™ control module.

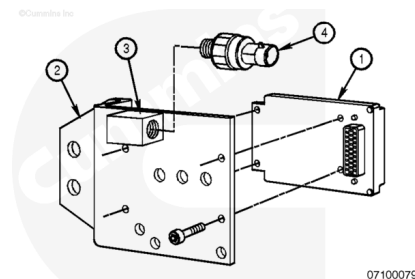

K19, K38, and K50 Engines


Disconnect the wiring harness connector from the Centinel™ control module.

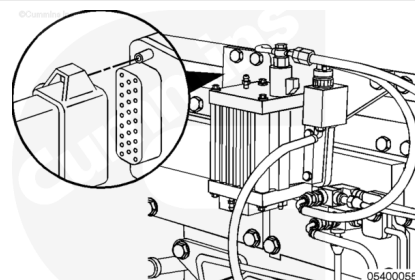

Note : Depending on the installation, it will possibly be necessary to remove the control valve and mounting bracket from the engine to remove the Centinel™ control module.

Remove the four capscrews that hold the Centinel™ control module to the mounting bracket.


Remove the Centinel™ control module.

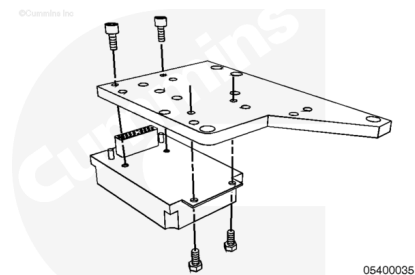

Install

⚠ CAUTION ⚠

To avoid damage to the Centinel™ control module, do not blow compressed air into the Centinel™ control module connector. Compressed air can contain moisture due to condensation.

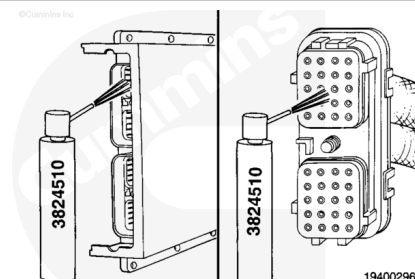


Use quick-dry electrical contact cleaner, Part Number 3824510, to remove all dirt and moisture from the Centinel™ control module connector port and the harness connector.

CELECT™ or CELECT™ Plus

Install the Centinel™ control module to the make-up oil tank.
Tighten the six capscrews.

Torque Value: 7 n•m [62 in-lb]

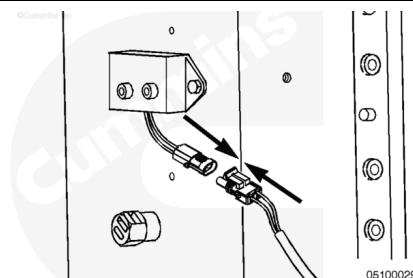


PT or STC

Install the Centinel™ control module (1) to the mounting bracket (2) with four 1/4-20 x 3/4-inch captive washer capscrews.

Tighten the capscrews.

Torque Value: 7 n•m [62 in-lb]

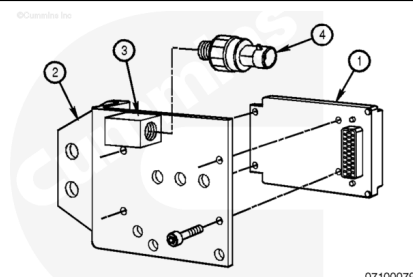


K19, K38, and K50 Engines

⚠ CAUTION ⚠

To avoid damage to the Centinel™ control module, make sure there is no grease or dirt between the Centinel™ control module and the mounting surface.

Install the new Centinel™ control module to the mounting bracket. Tighten the four capscrews.


Torque Value: 8 n•m [71 in-lb]

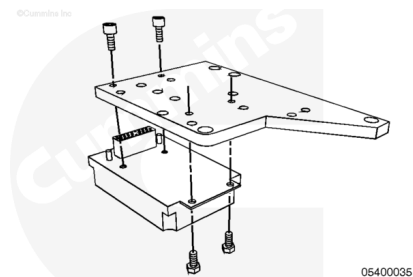

Finishing Steps

If necessary, install the Centinel™ control module mounting bracket. Refer to Procedure 007-090 (</qs3/pubsys2/xml/en/procedures/96/96-007-090.html>).

Install the wiring harness connector to the Centinel™ control module. Refer to Procedure 019-131 (</qs3/pubsys2/xml/en/procedures/96/96-019-131.html>).

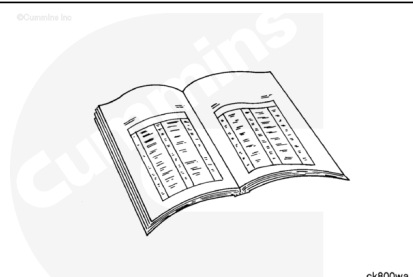

Last Modified: 22-Apr-2004