


Trainings ▾


Flow Diagram

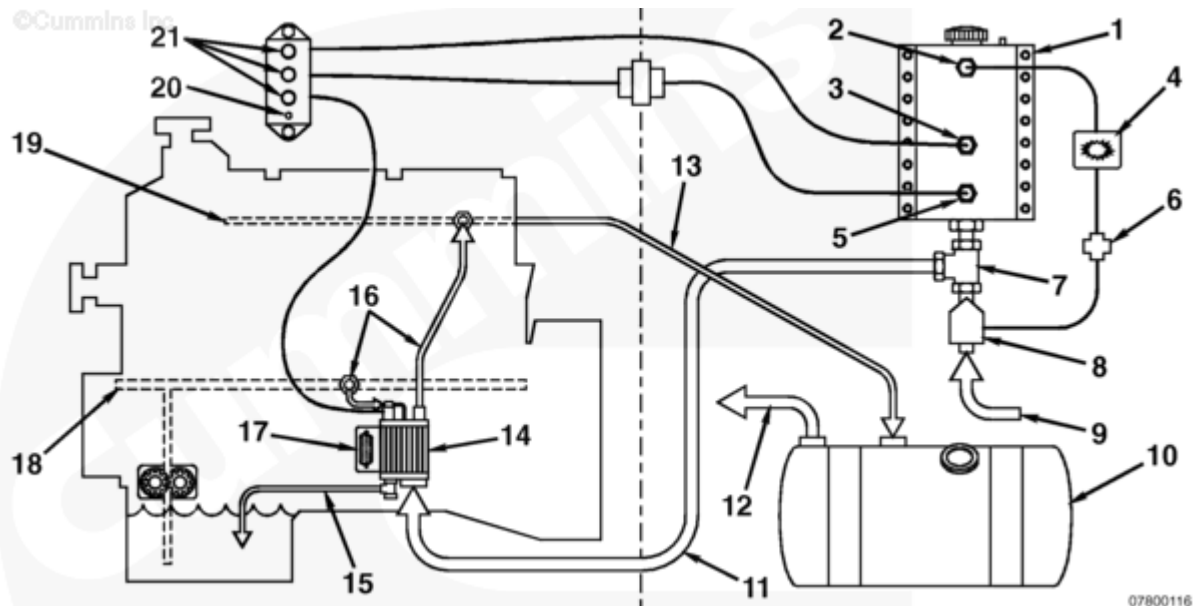


Centinel™ Continuous Oil Replacement System with Remote Fill Option (K19, K38 and K50 Only)

1. Make-up oil tank
2. Oil level sensor - full level
3. Oil level sensor - intermediate level
4. Electrical box with pressure interrupt switch
5. Oil level sensor - low level
6. Relay
7. Tee
8. Oil fill fitting and solenoid
9. Fresh make-up oil from quick-disconnect fitting
10. Vehicle fuel tank
11. Hose from tank to oil control valve
12. Fuel and lubricating oil blend to engine
13. Fuel and lubricating oil blend to fuel tank
14. Oil control valve
15. Fresh oil to pan
16. Used oil
17. Centinel™ control module
18. Main oil rifle

- 19. Return fuel line
- 20. Reset switch
- 21. System power, diagnostic, and indicator lights.

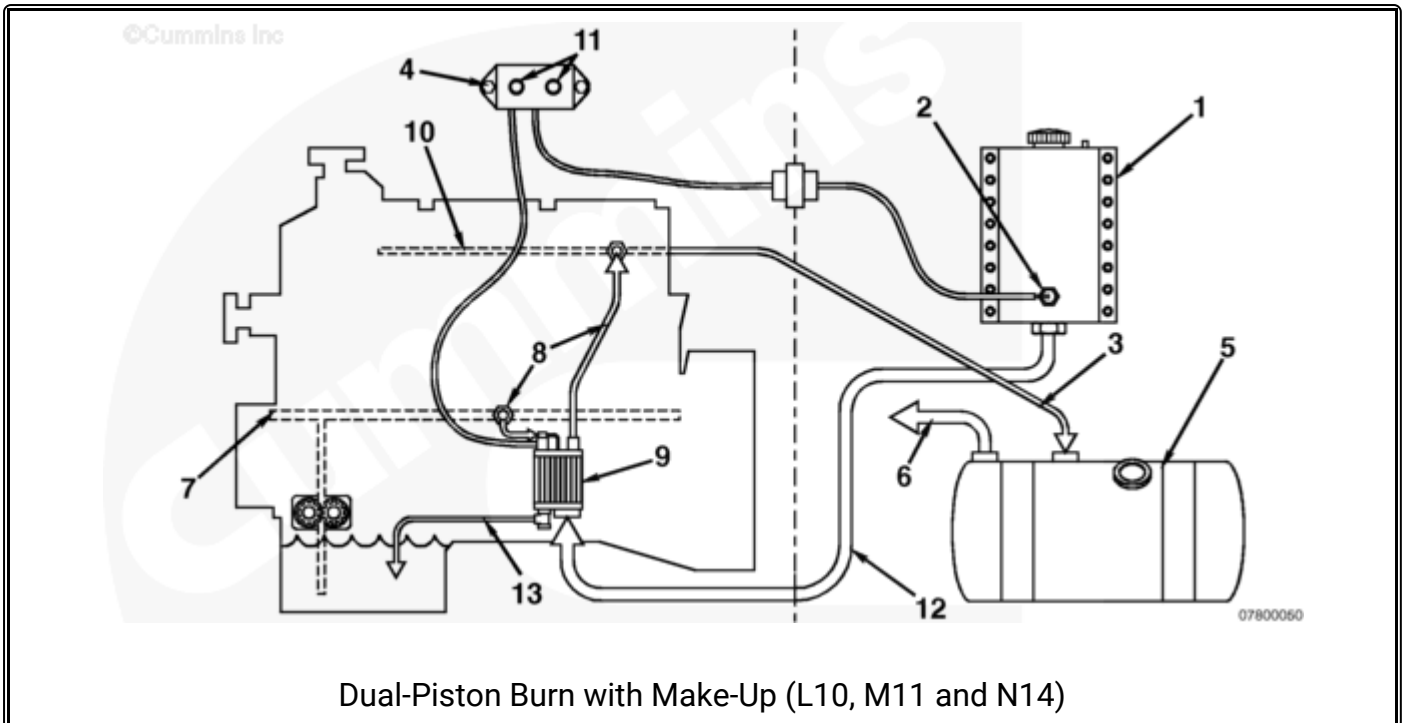


- 1. Make-up oil tank
- 2. Low oil level sensor
- 3. Fuel and lubricating oil blend to fuel tank
- 4. Centinel™ control module
- 5. Vehicle fuel tank
- 6. Fuel and lubricating oil blend to engine
- 7. Main oil rifle
- 8. Used oil
- 9. Oil control valve
- 10. Return fuel line
- 11. System power and diagnostic lights
- 12. Hose from tank to oil control valve
- 13. Fresh oil to pan.

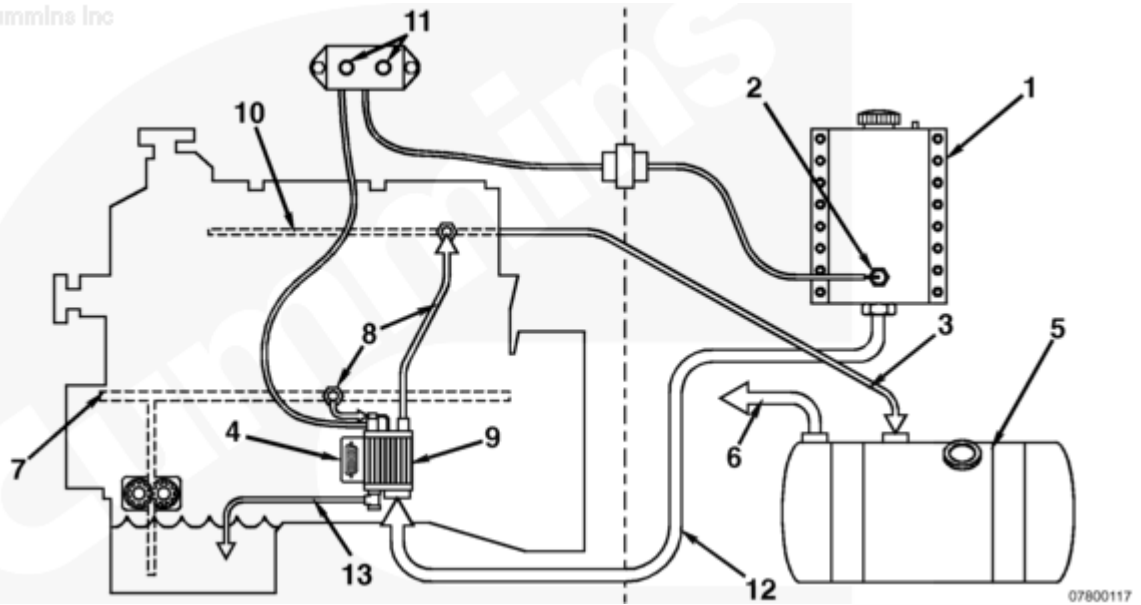

Dual-Piston Burn with Make-Up (K19, K38 and K50)


1. Make-up oil tank
2. Low oil level sensor
3. Fuel and lubricating oil blend to fuel tank
4. Centinel™ control module
5. Vehicle fuel tank
6. Fuel and lubricating oil blend to engine
7. Main oil rifle
8. Used oil
9. Oil control valve
10. Return fuel line
11. System power and diagnostic lights
12. Hose from tank to oil control valve
13. Fresh oil to pan.

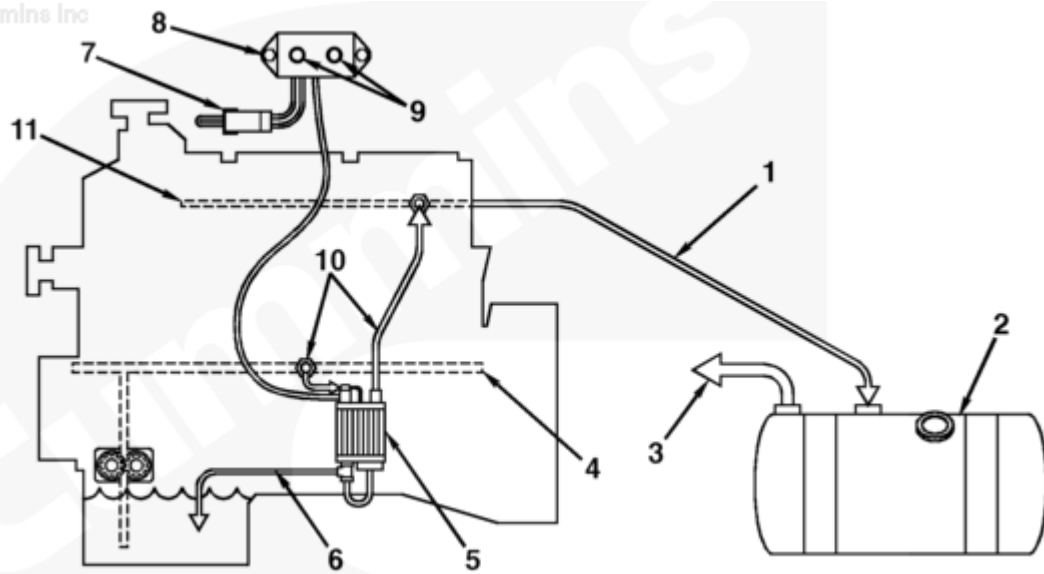

07800051

Dual-Piston Burn-Only (L10, M11 and N14)

1. Fuel and lubricating oil blend to fuel tank
2. Vehicle fuel tank
3. Fuel and lubricating oil blend to engine
4. Main oil line
5. Oil control valve
6. Engine oil return to oil pan
7. Make-up tank low oil level sensor jumper
8. Centinel™ control module
9. System power and diagnostic lights
10. Used oil
11. Return fuel line.

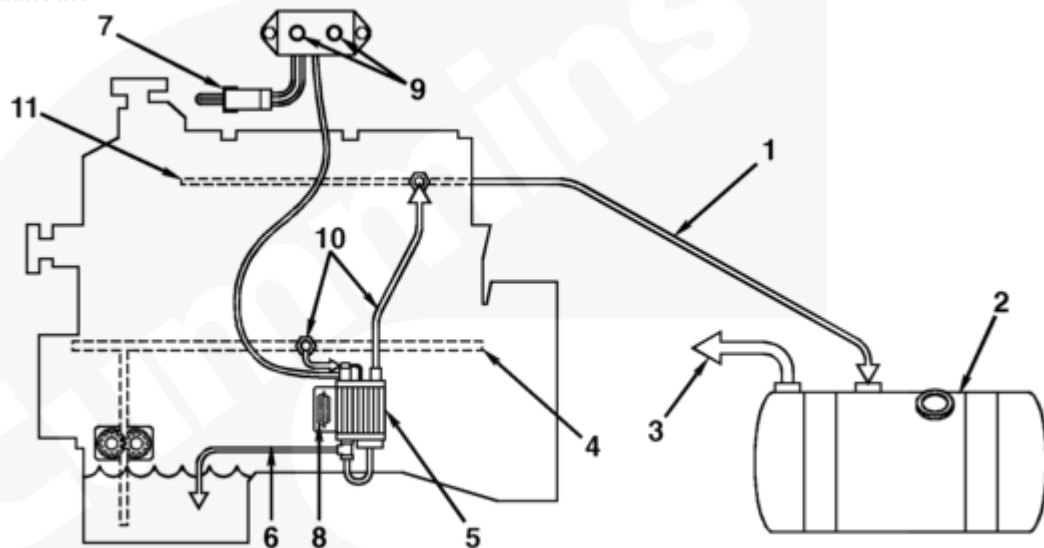


07800052

Dual-Piston Burn-Only (K19, K38 and K50)

1. Fuel and lubricating oil blend to fuel tank
2. Vehicle fuel tank
3. Fuel and lubricating oil blend to engine
4. Main oil rifle
5. Oil control valve
6. Engine oil return to oil pan
7. Make-up tank low oil level sensor jumper
8. Centinel™ control module
9. System power and diagnostic lights
10. Used oil
11. Return fuel line.


©Cummins Inc

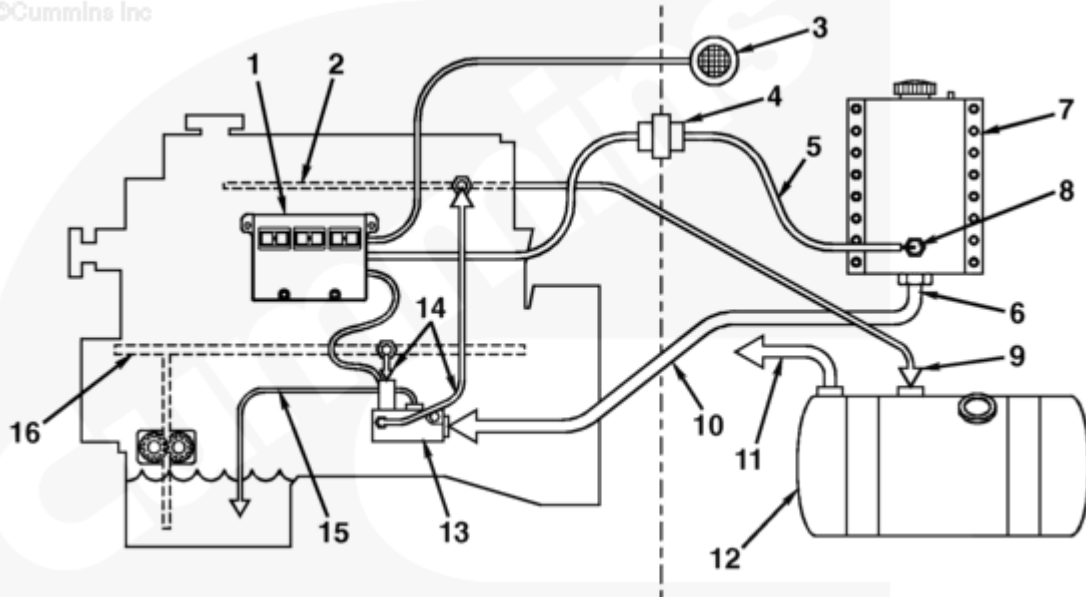

07800035

Single-Piston Burn with Make-Up (ISM)


1. Electronic control module
2. Return fuel line
3. Maintenance and fluids lamps
4. 31-pin OEM connector
5. Make-up tank wiring harness
6. Fresh oil to control valve
7. Make-up oil tank
8. Low oil level sensor
9. Fuel and lubricating oil blend to fuel tank
10. Hose from tank to oil control valve
11. Fuel and lubricating oil blend to engine
12. Vehicle fuel tank
13. Oil control valve
14. Used oil
15. Fresh oil to oil pan
16. Main oil rifle.

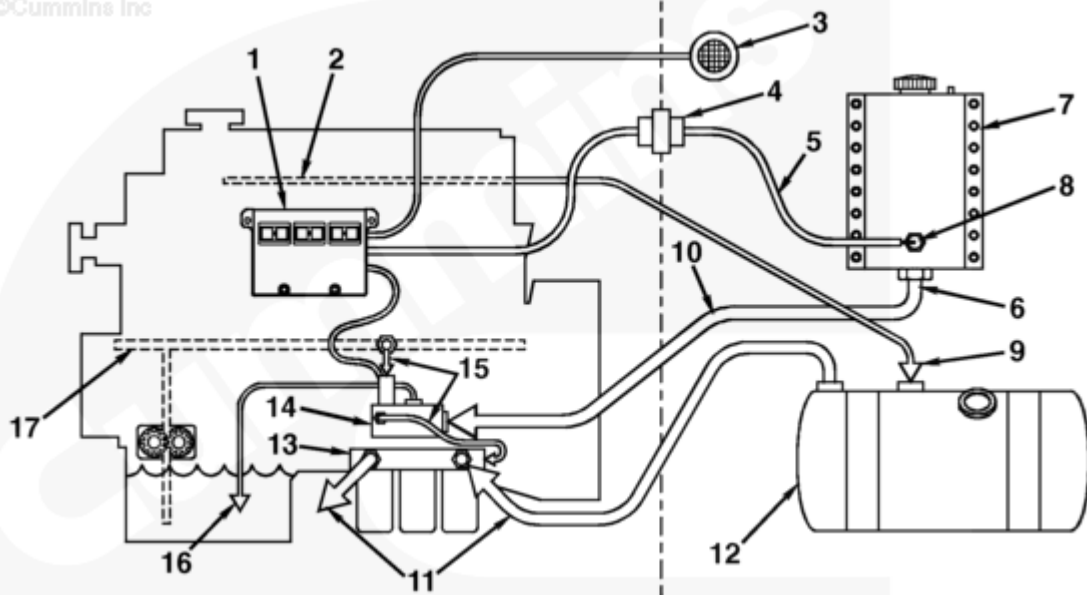

07800097

Single-Piston Burn with Make-Up (QSK45 and QSK60)


1. Electronic control module
2. Return fuel line
3. Maintenance and fluids lamps
4. 31-pin OEM connector
5. Make-up tank wiring harness
6. Fresh oil to control valve
7. Make-up oil tank
8. Low oil level sensor
9. Fuel and lubricating oil blend to fuel tank
10. Hose from tank to oil control valve
11. Fuel and lubricating oil blend to engine
12. Vehicle fuel tank
13. Fuel filter head
14. Oil control valve
15. Used oil
16. Fresh oil to oil pan
17. Main oil rifle.

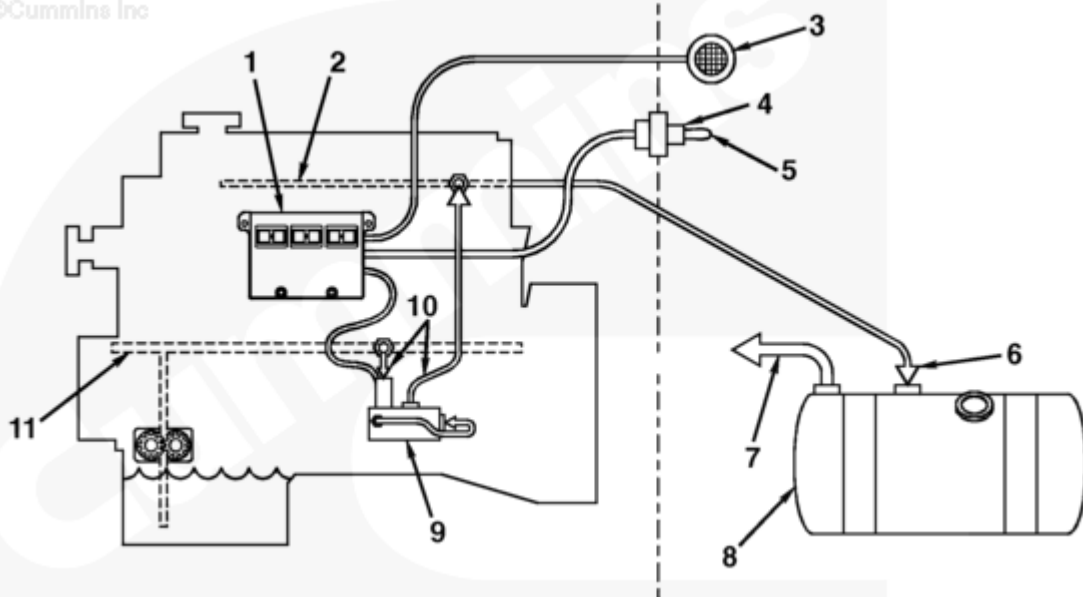

07800094

Single-Piston Burn-Only (ISM)


1. Electronic control module
2. Return fuel line
3. Maintenance and fluids lamps
4. 31-pin OEM connector
5. Low oil level sensor jumper
6. Fuel and lubricating oil blend to fuel tank
7. Fuel and lubricating oil blend to engine
8. Vehicle fuel tank
9. Oil control valve
10. Used oil
11. Main oil rifle.

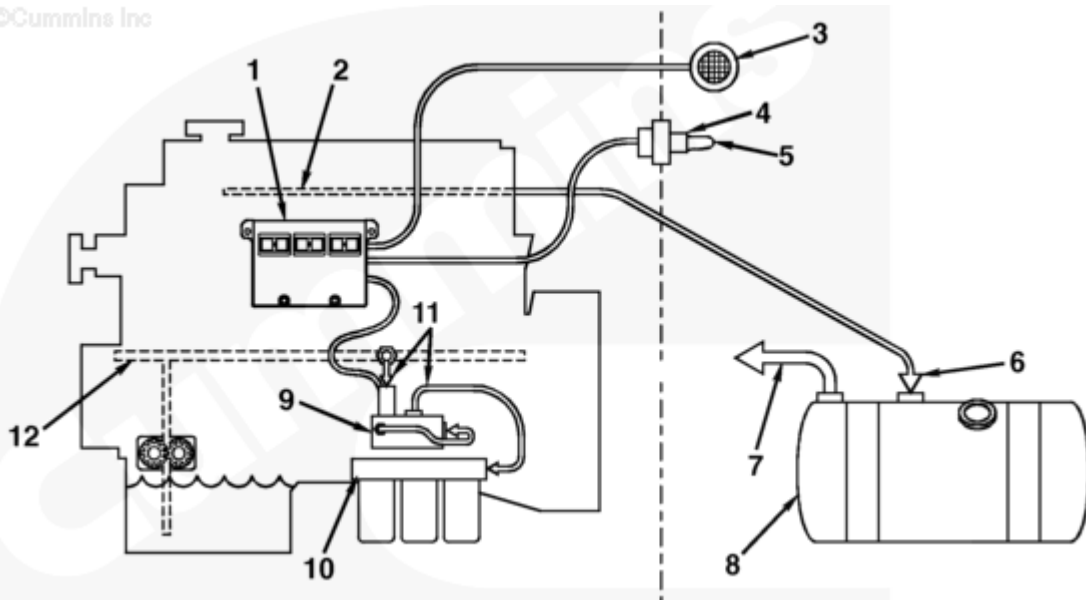


07800095

Single-Piston Burn-Only (QSK45 and QSK60)


1. Electronic control module
2. Return fuel line
3. Maintenance and fluids lamps
4. 31-pin OEM connector
5. Low oil level sensor jumper
6. Fuel and lubricating oil blend to fuel tank
7. Fuel and lubricating oil blend to engine
8. Vehicle fuel tank
9. Oil control valve
10. Fuel filter head
11. Used oil
12. Main oil rifle.

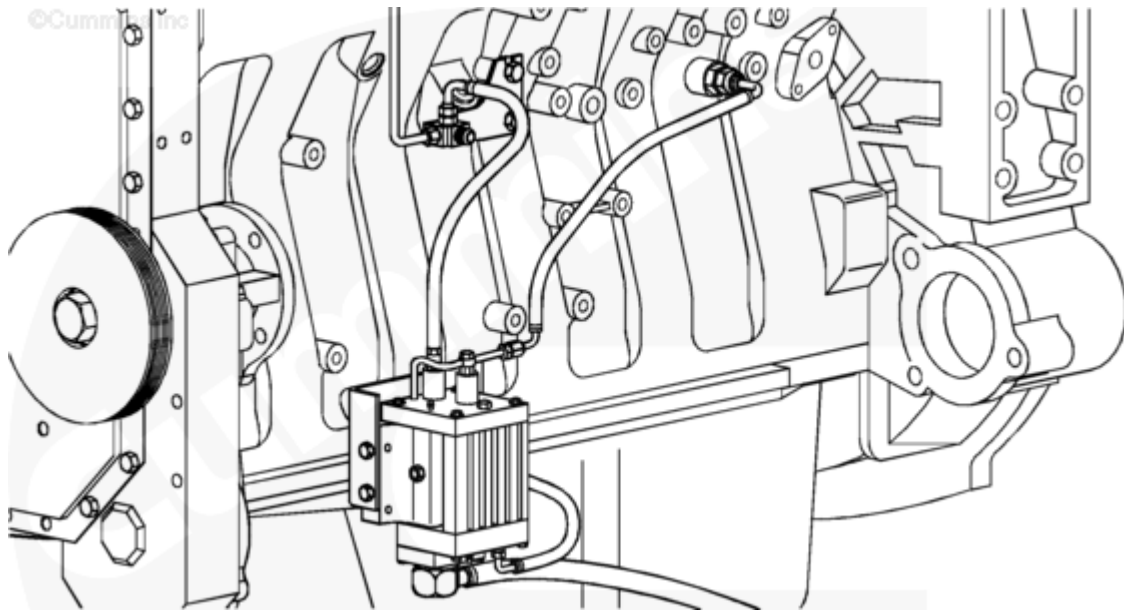


L10 and M11 Centinel™ Installation Locations (Burn with Make-Up)

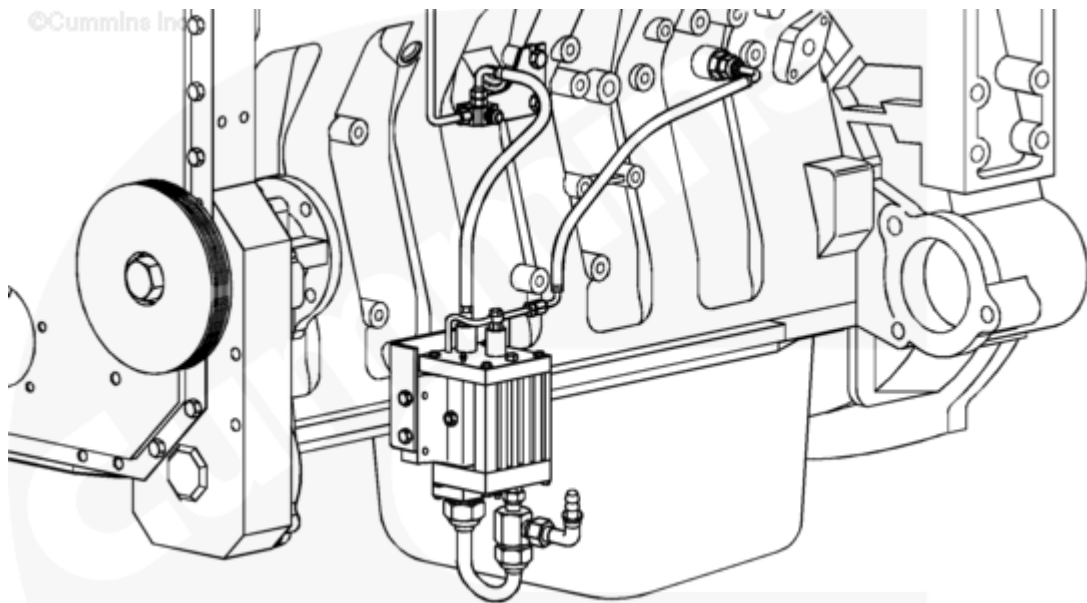


L10 and M11 Centinel™ Installation Locations (Burn-Only)

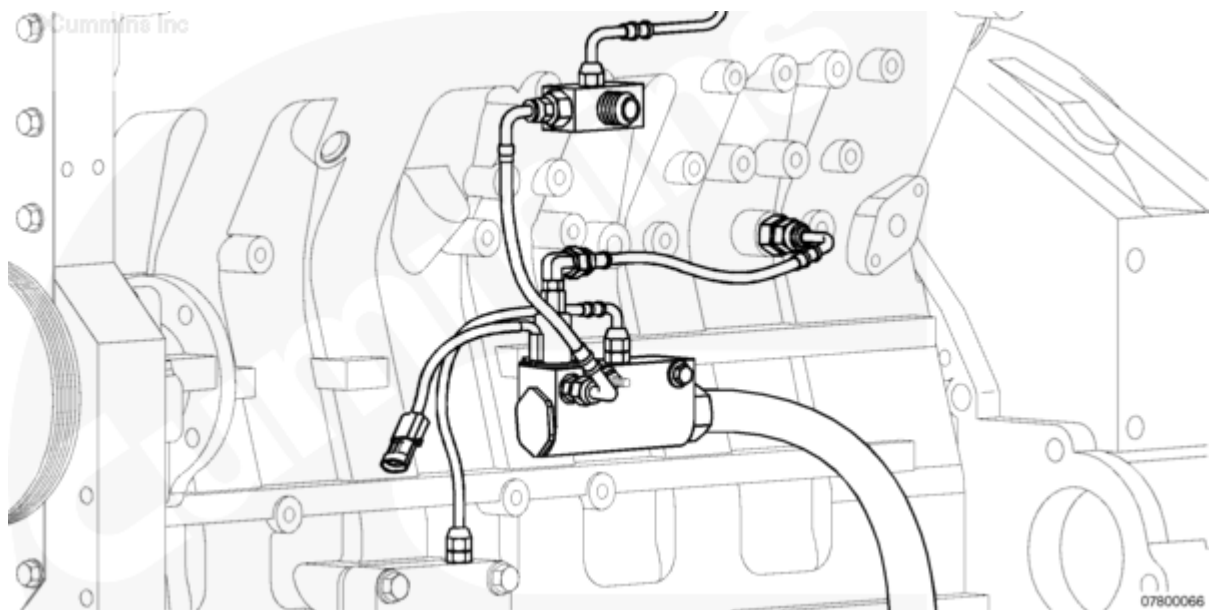

ISM Centinel™ Installation Locations (Burn with Make-Up)

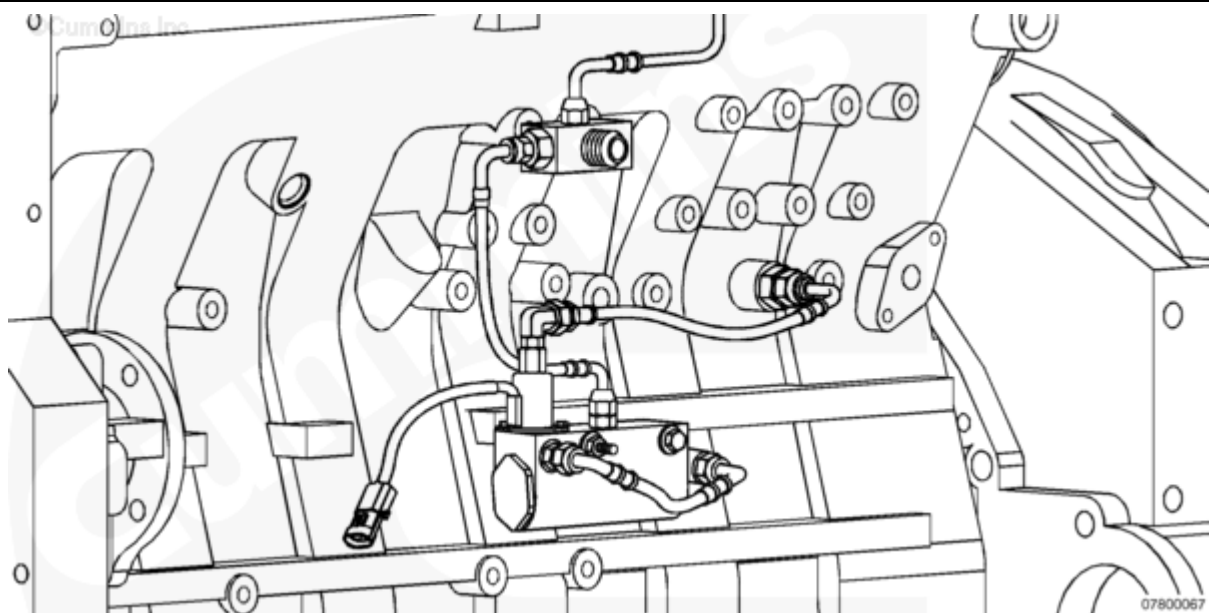


ISM Centinel™ Installation Locations (Burn-Only)

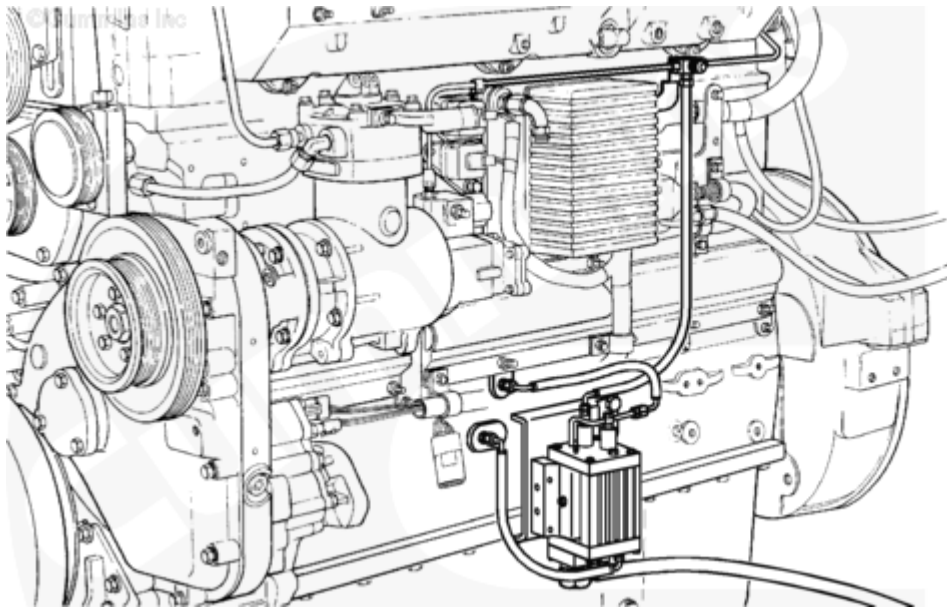


07800072

N14 Centinel™ Installation Locations (Burn with Make-Up)

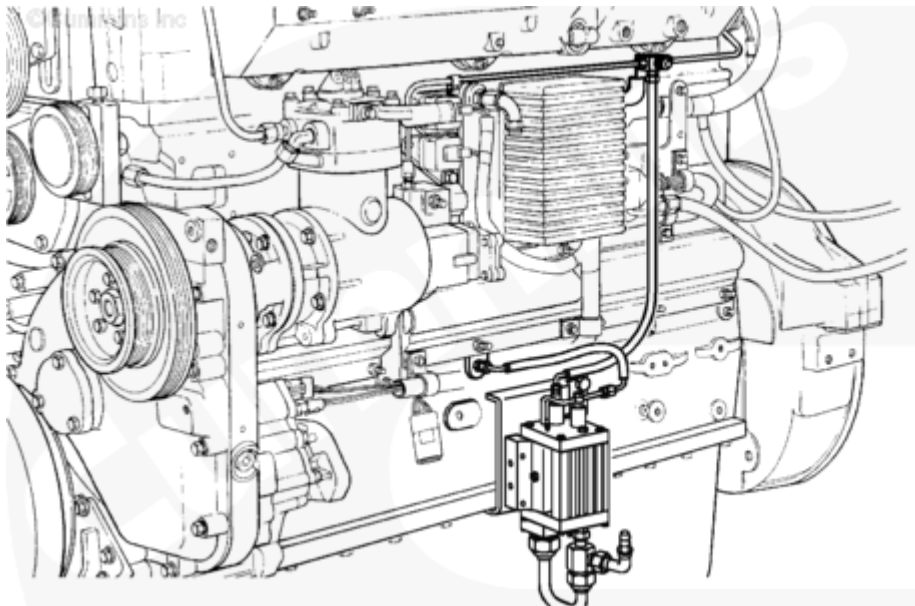


07800073

N14 Centinel™ Installation Locations (Burn-Only)

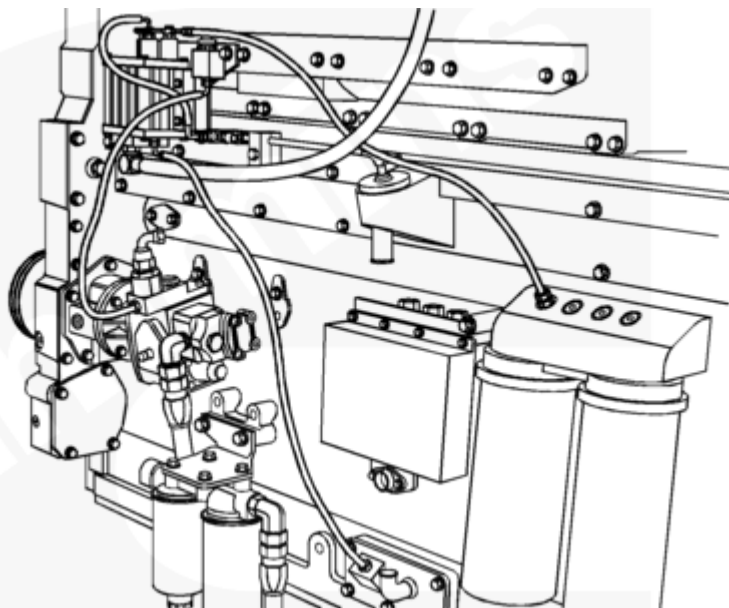


07800068

K19 Centinel™ Installation Locations (Burn with Make-Up)

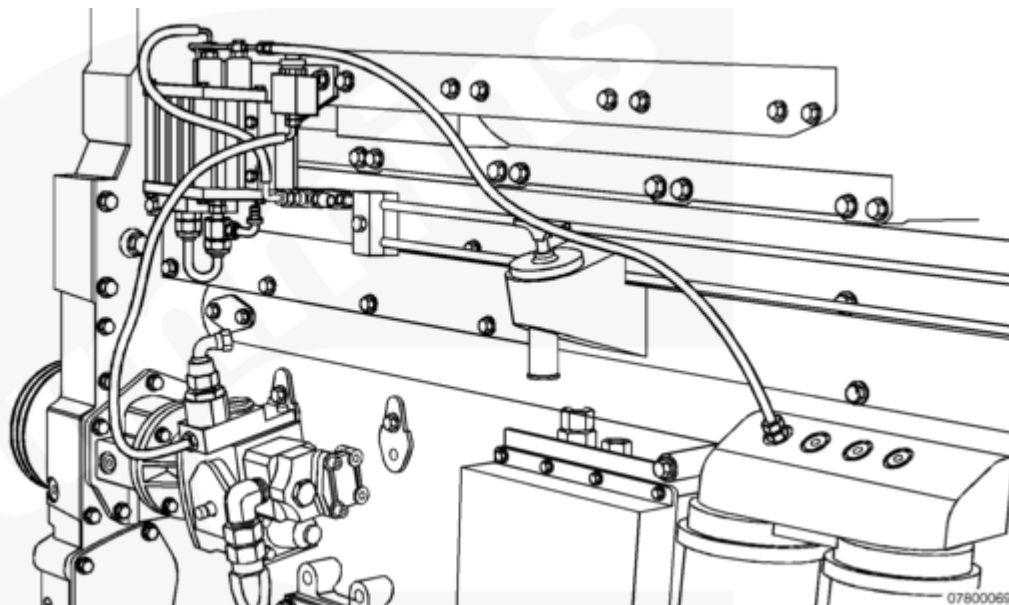


07800069


K19 Centinel™ Installation Locations (Burn-Only)

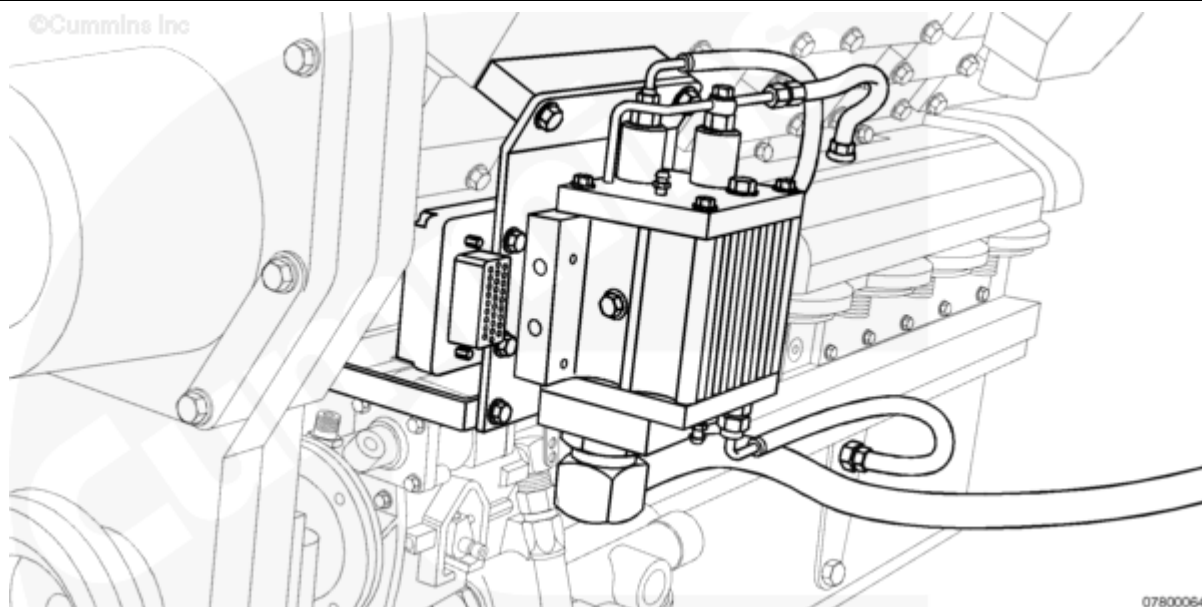


K38 and K50 Centinel™ Installation Locations (Burn with Make-Up)

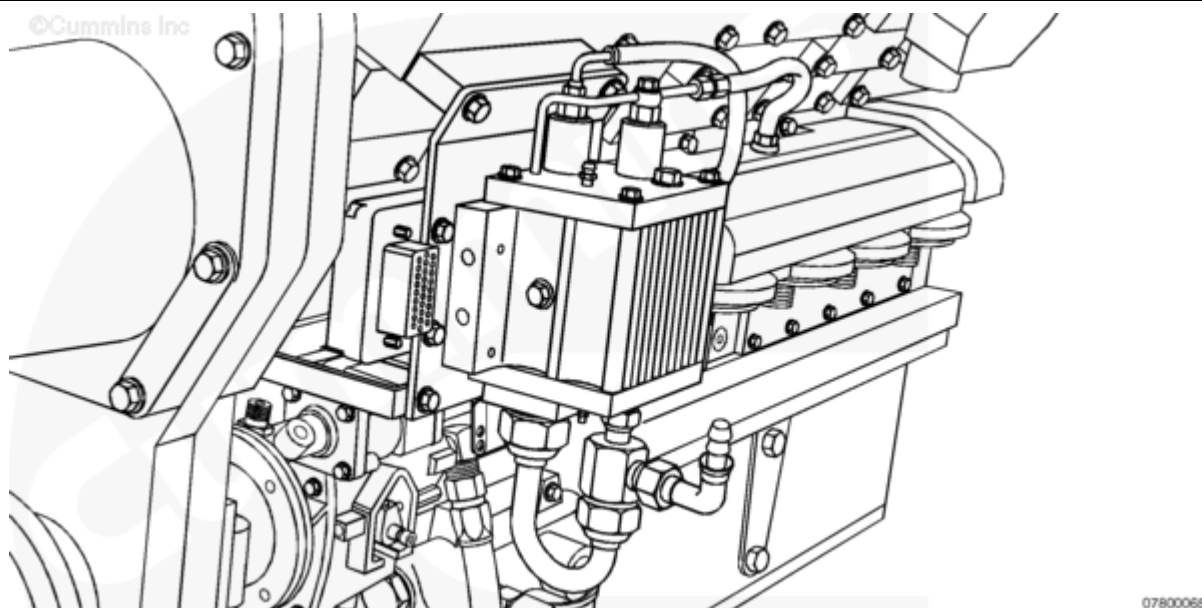

K38 and K50 Centinel™ Installation Locations (Burn-Only)

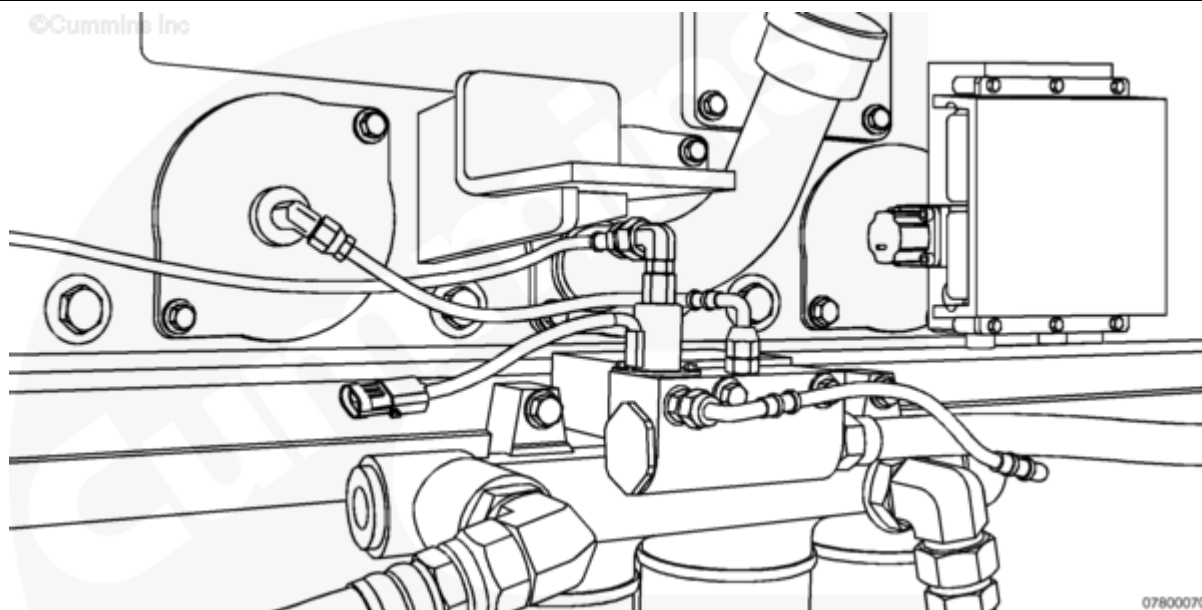


QSK45 and QSK60 Centinel™ Installation Locations (Burn with Make-Up)

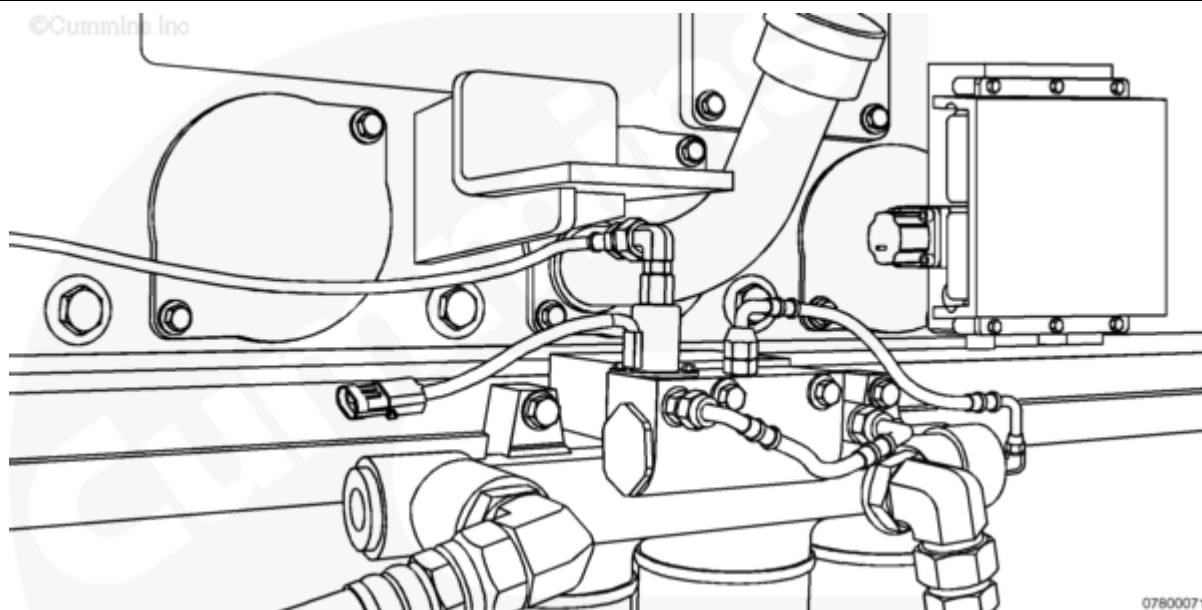

QSK45 and QSK60 Centinel™ Installation Locations (Burn-Only)

Wiring Diagram

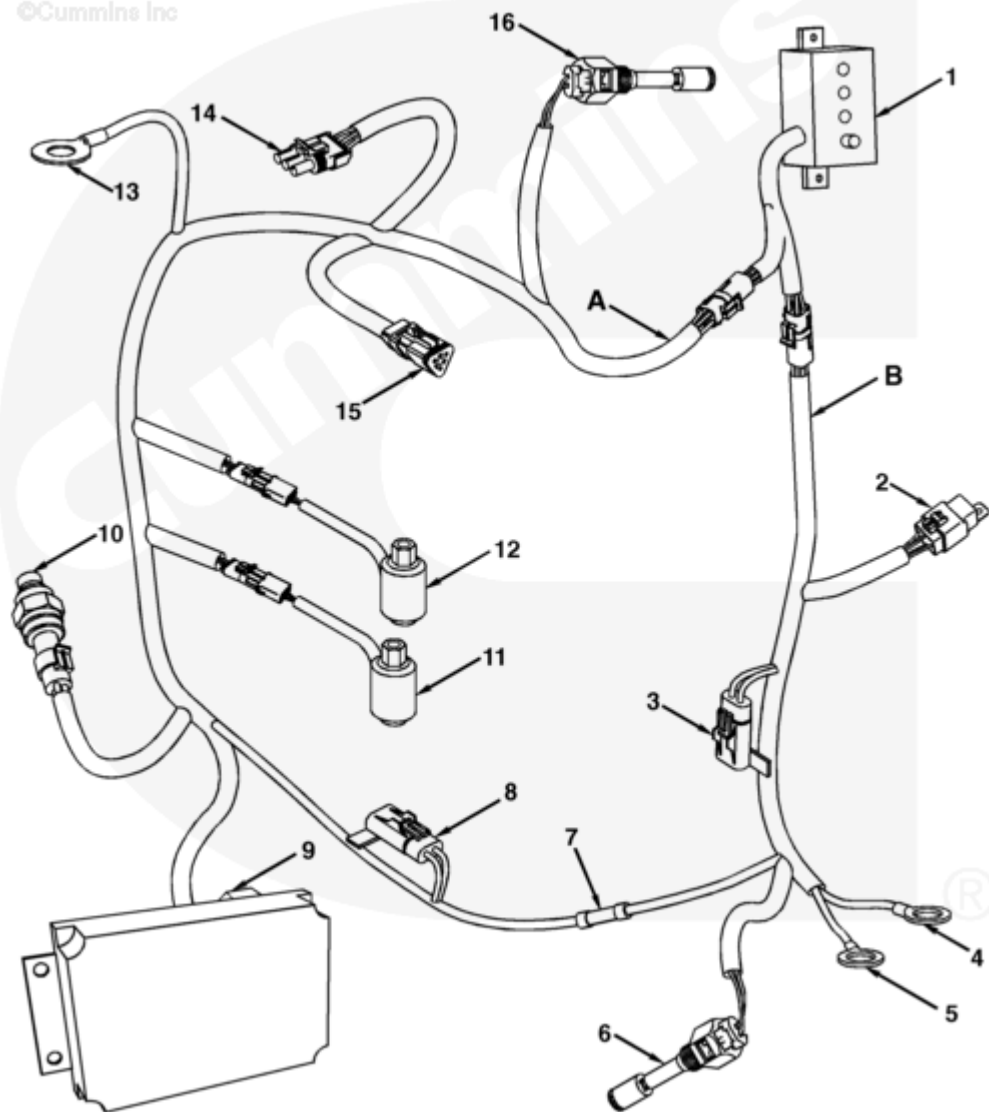

07900114


Remote Fill Harness Diagram

1. System power, diagnostic, and indicator light box
2. 24-VDC relay
3. Battery power fuse
4. Ground
5. Battery power in
6. Oil level sensor - full level
7. Butt splice 18-AWG heat-shrinkable disconnect from fuel shutoff solenoid
8. Battery power fuse
9. Centinel™ control module
10. Fuel rail pressure sensor
11. Oil burn solenoid
12. Oil make-up solenoid
13. Ground
14. Service mode plug
15. Datalink service tool
16. Oil level sensor - low level.

- A. High-horsepower Centinel™ harness
- B. Remote fill harness.


©Cummins Inc

Remote Fill Solenoid Wiring Diagram

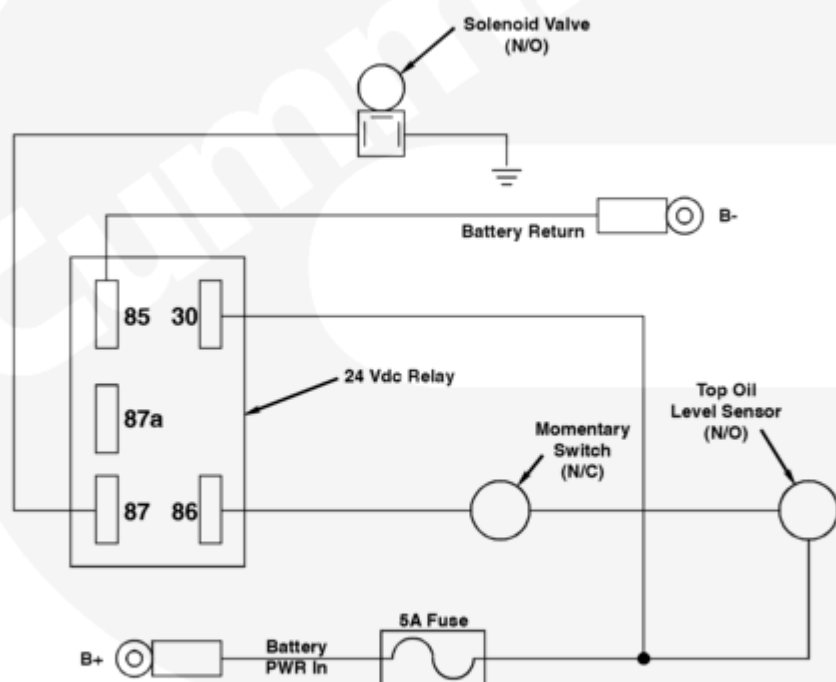


07800115

Remote Fill Solenoid

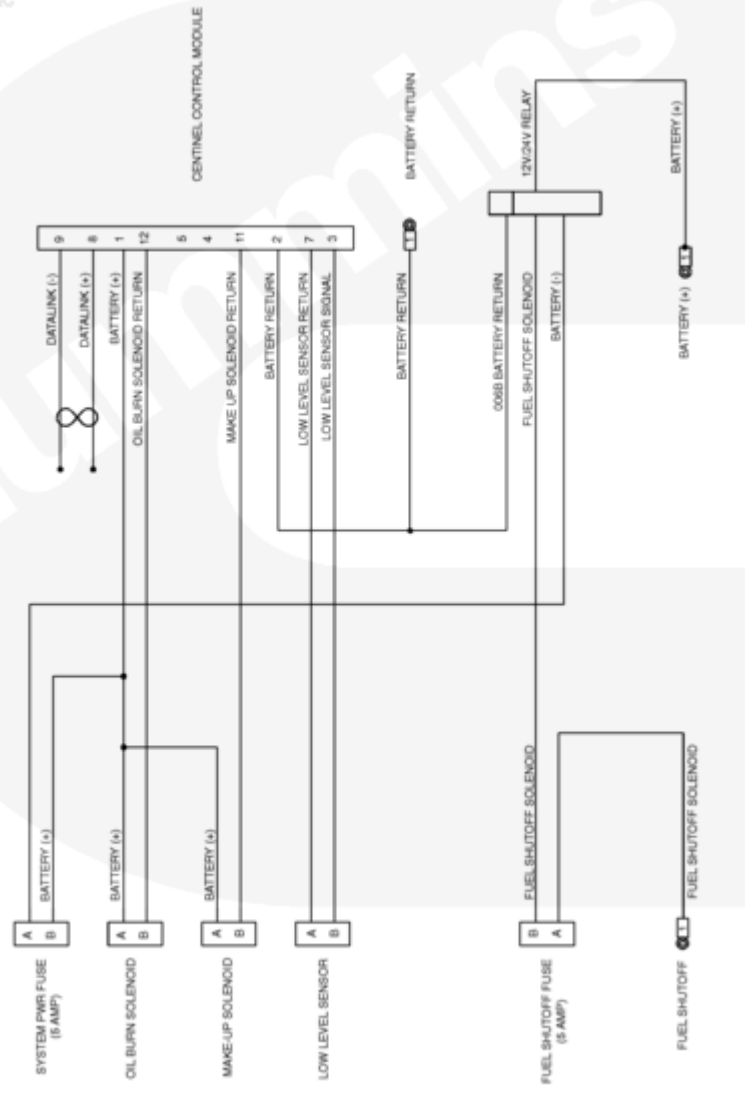


06800068

CELECT™, L10 and M11

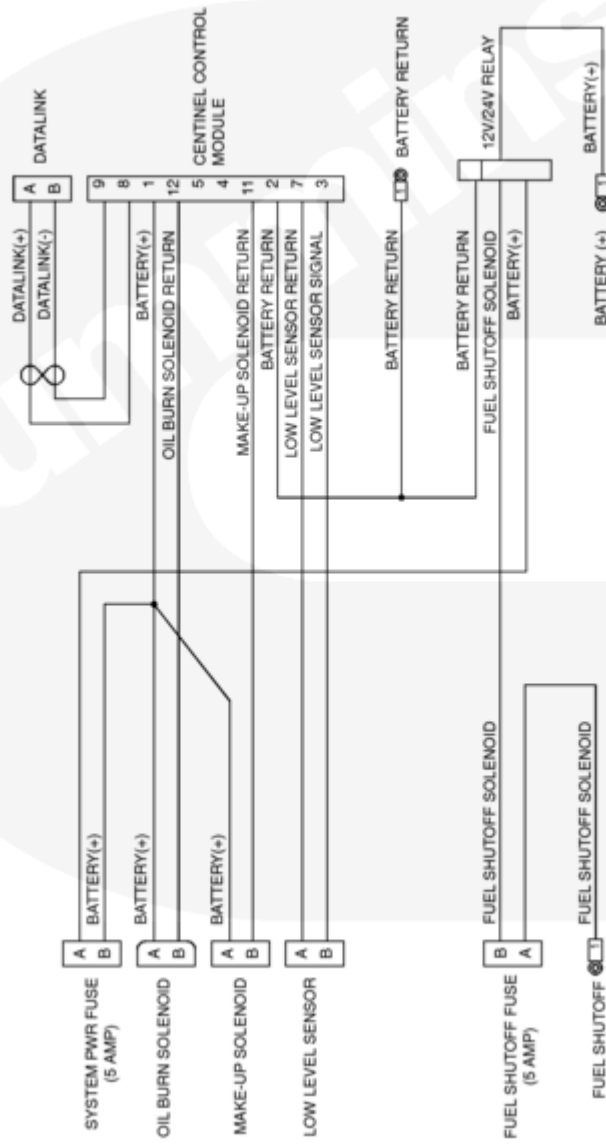


05800069

CELECT™ Plus, L10 and M11

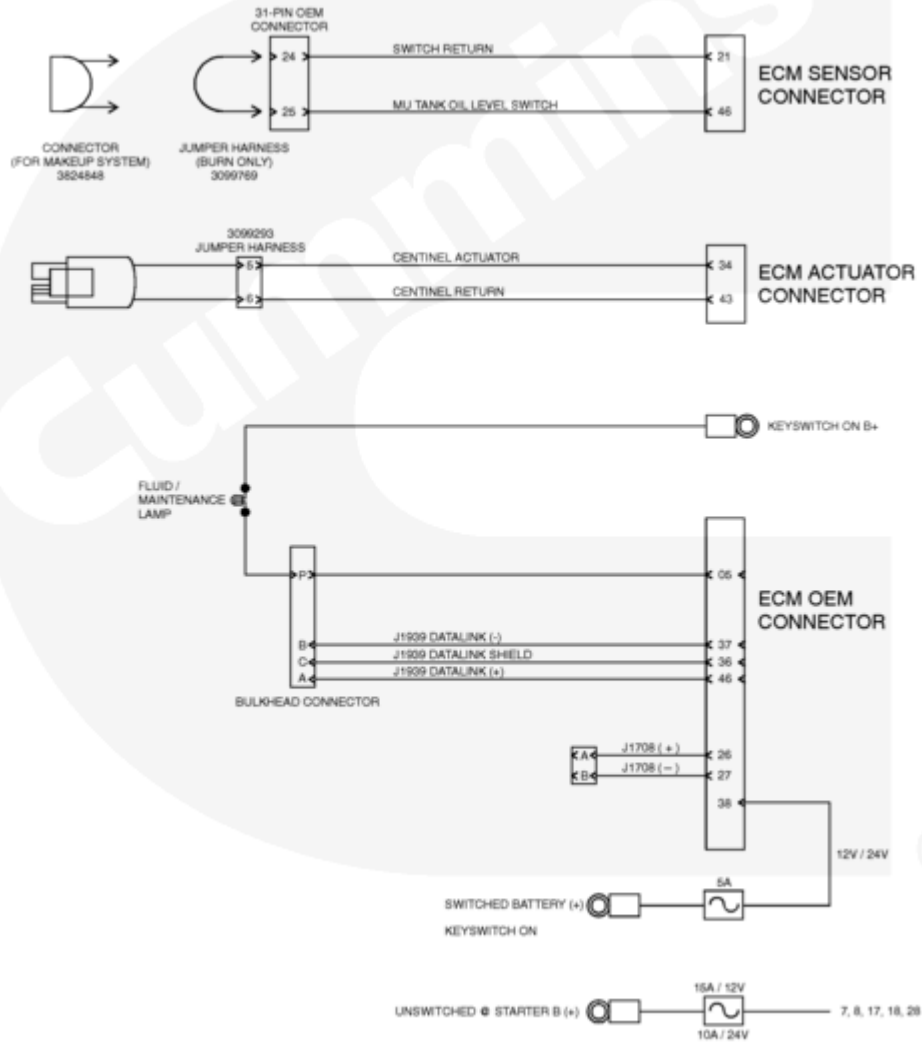


07800040

ISM

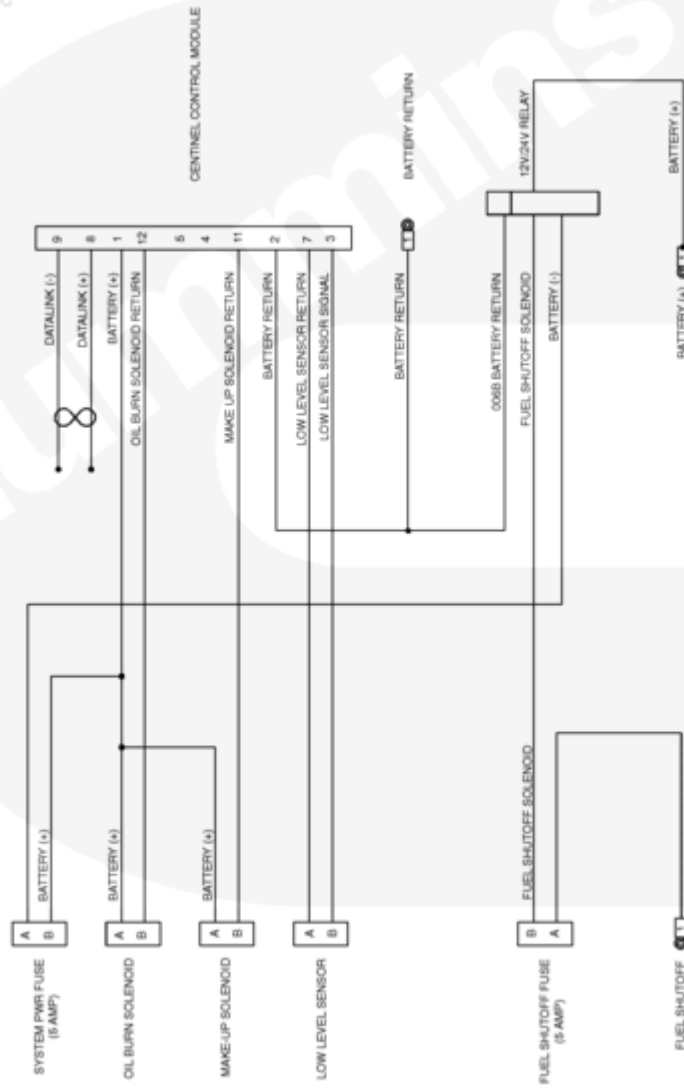


06800068

SELECT™, N14

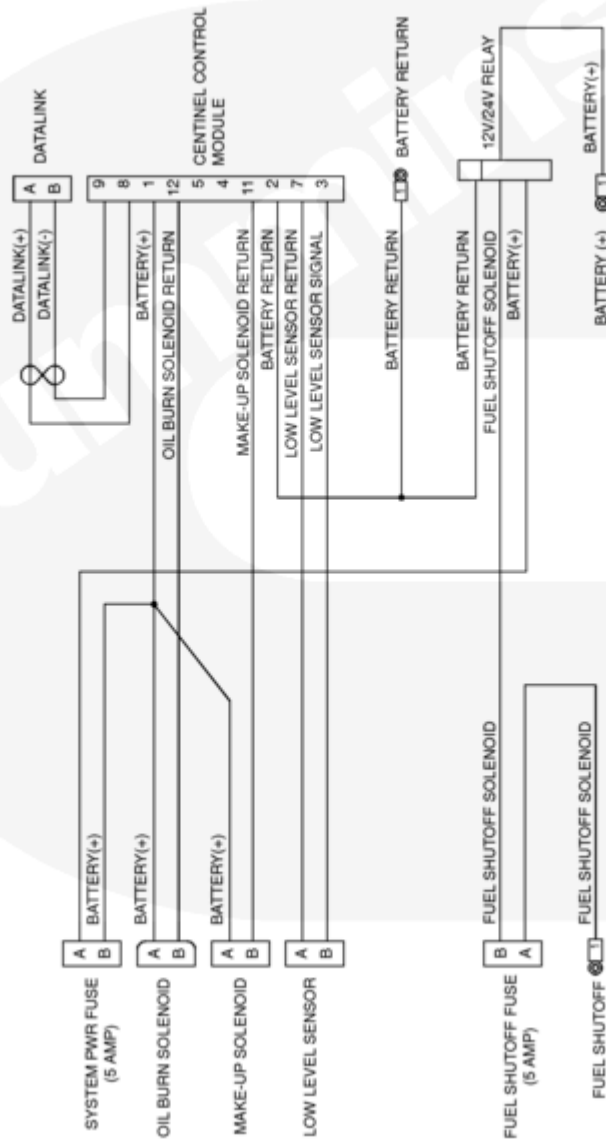


05800069

CELECT™ Plus, N14

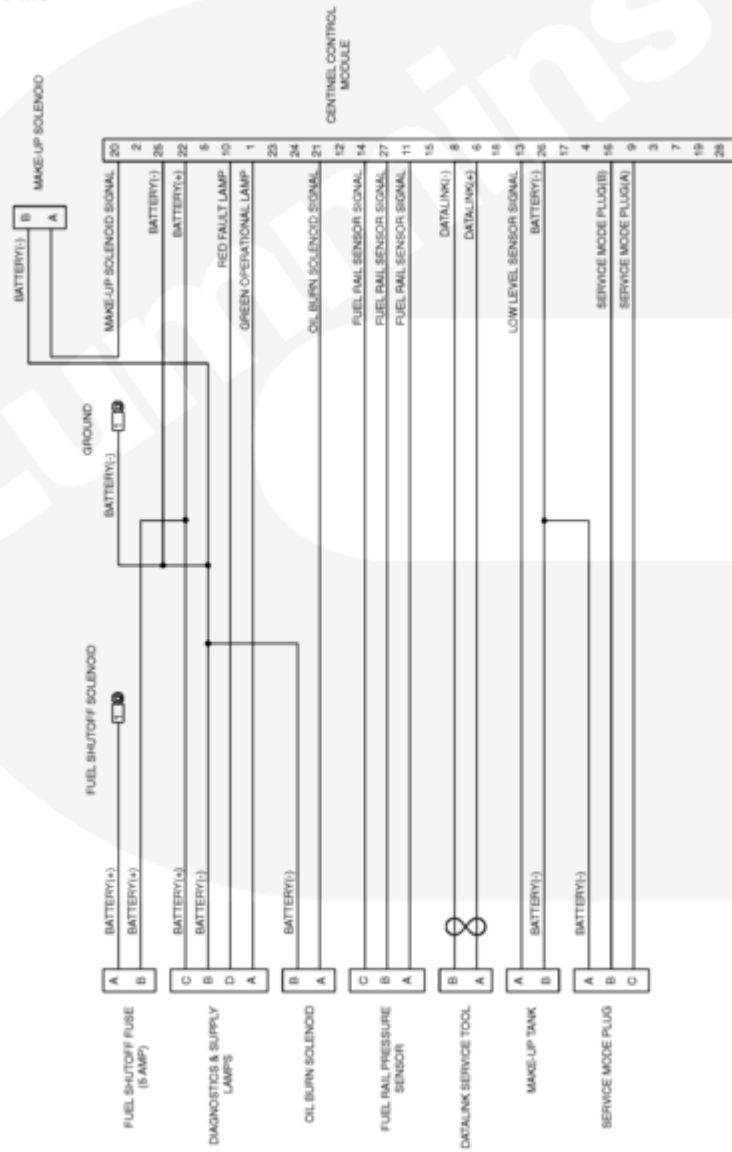


05800067

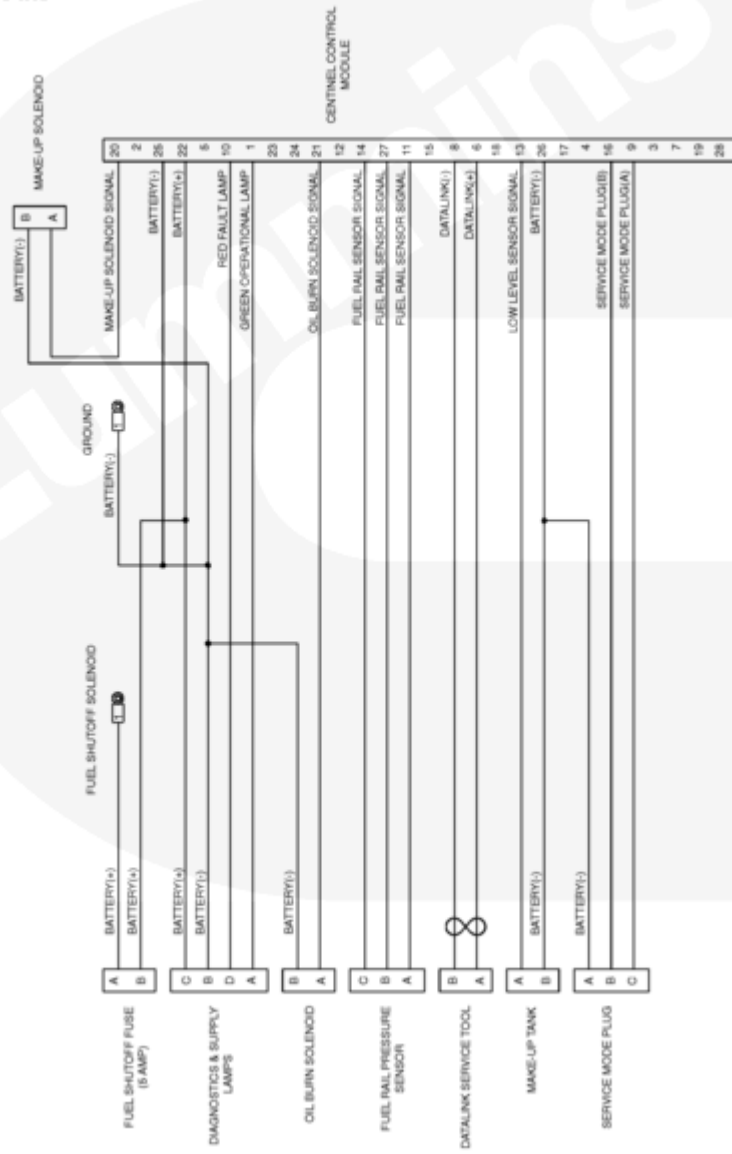

05800067

K38 and K50

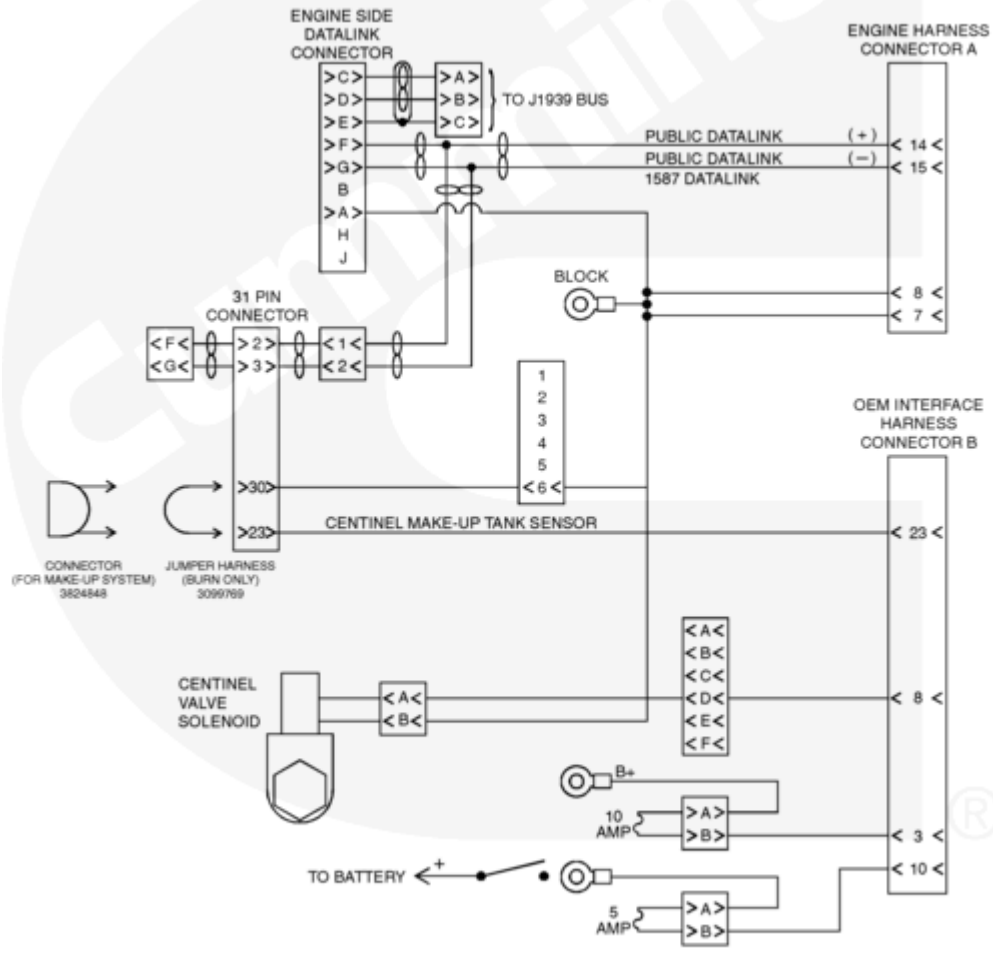

07800046

QSK45 and QSK60