

Trainings ▾

General Information

The following recommendations are to prepare your engine for winter storage. Not all recommendations will apply to your application. **Always** follow the manufacturer's recommendation on components **not** manufactured by Cummins Inc.

©Cummins Inc.


Fill the tank with good quality ASTM number 2D climatized diesel fuel.

Change the fuel filter. Refer to the fuel filter procedure in this manual.

Change the boat fuel-water separator element. Refer to the fuel-water separator element procedure in this manual.

Change the engine lubricating oil and filters. Refer to the lubricating oil and filters procedure in this manual.


Treat the fuel with diesel conditioner or algaecide to prevent the growth of algae in the fuel tank.

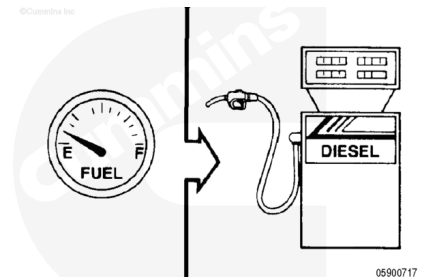

05900717

⚠ CAUTION ⚠

Do not run the engine with the sea water valve closed. This could damage the sea water pump and the engine. It is good practice to disable the engine or to place a tag at the helm(s) when the sea water valve is closed.

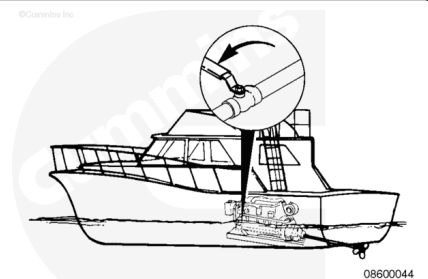


08600044

If the vessel is stored in the water, close the sea water valve on the vessel hull.


Drain the sea water system.

- Remove the drain plug on the marine gear cooler.


- Remove the zinc anodes from the heat exchanger and the aftercooler. Refer to the zinc anode procedure in this manual.
- Remove the drain plug from the air box side of the sea water aftercooler, if equipped.
- Remove the engine sea water hoses to drain sea water from the engine.

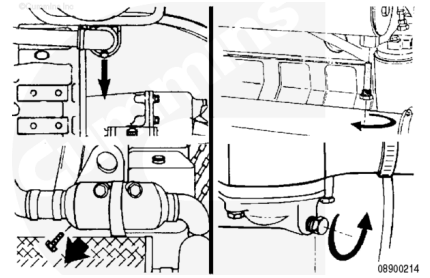

Remove the inlet and outlet hoses from the heat exchanger.

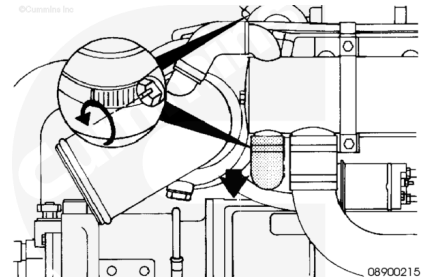


Remove the inlet and outlet hoses from the sea water pump.

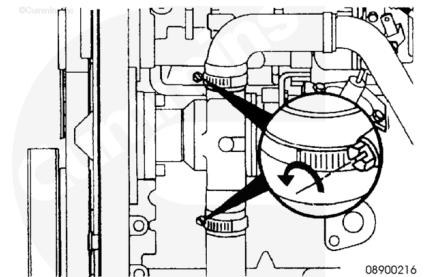

Note : There are two different types of pumps. Follow the correct procedure for the pump on this engine.


Remove and inspect the sea water pump impeller. Refer to the Sea Water Pump procedure in this manual.

If the sea water pump impeller is damaged or not reusable, do **not** install a new sea water pump impeller until the vessel is ready to be used.

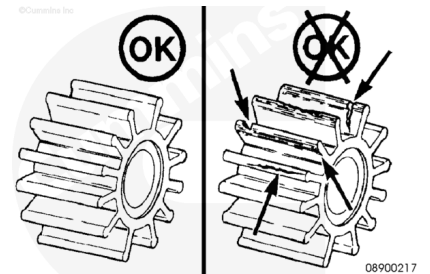

⚠ CAUTION ⚠


Do not expose the sea water pump impeller to sunlight, fluorescent lighting or any other source of ultra-violet light for an extended period of time. This will cause damage to the sea water pump impeller.

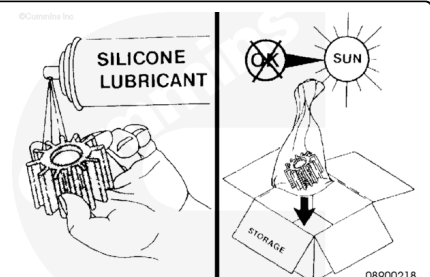

The sea water pump impeller **must** be lubricated with glycerin or a non-petroleum based lubricant such as silicon spray.


Store the sea water pump impeller for the season in a polyethylene bag and in a location that is void of sunlight, fluorescent light, or any other source of ultra-violet light.

Install the zinc anodes in the heat exchanger and aftercooler. Refer to the zinc anode procedure in this manual.

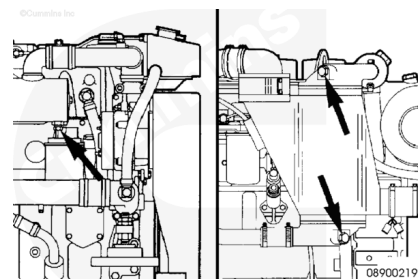


Loosen the heat exchanger sea water outlet clamps (1) and (2).

Rotate the sea water outlet connection to a vertical position (3).

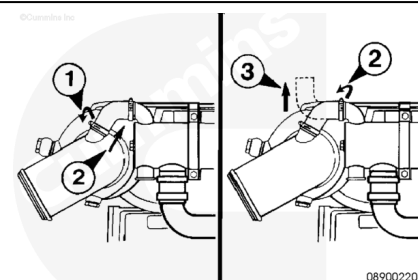

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

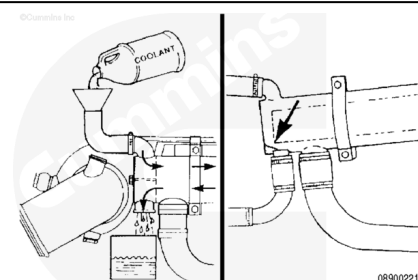

Place a container under the heat exchanger sea water inlet.


Pour coolant, a 50/50 mixture of antifreeze and water, through the heat exchanger.

Do not allow excess coolant to drain in to the bilge.


Rotate and connect the sea water outlet connection to the exhaust elbow (1).

Tighten the hose clamps (2).


Torque Value: 5 n•m [44 in-lb]

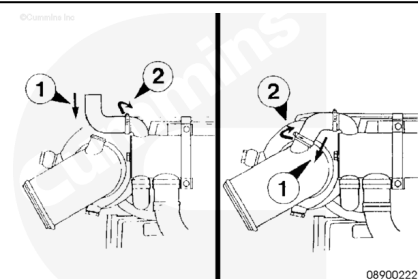

Empty the sea water strainer. Refer to the sea water strainer procedure in this manual.

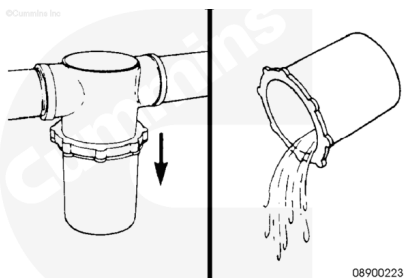

Perform the recommended maintenance procedures on the marine gear. Refer to the manufacturer owner's manual for recommendations and specifications.

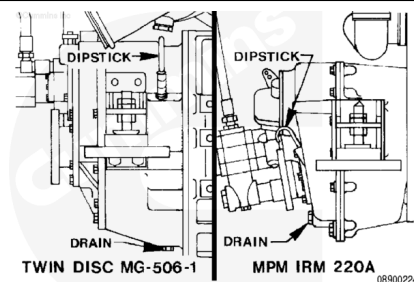

Disconnect and remove the battery. Follow the manufacturer's storage recommendations to store the battery.

