

Trainings ▾

Maintenance Check

If equipped, drain the catch bottle and properly dispose of contents

Inspect the crankcase breather tube outlet for the following conditions that may be blocking or restricting the crankcase breather tube.

Note : If equipped with a catch bottle at the end of the crankcase breather tube, removal of the catch bottle may be required to inspect the crankcase breather tube outlet.


- Sludge
- Debris
- Ice.

If any of the above conditions exist, the crankcase breather tube outlet **must** be cleaned.

Inspect the crankcase breather tube outlet more frequently when ambient temperatures are below freezing. Frequent ice build up in the crankcase breather tube may require one of the following actions.

- A crankcase breather tube heater option be installed.
- If a crankcase breather tube heater is already installed, troubleshoot the crankcase breather tube heater for not operating.


Contact a Cummins® Authorized Repair Location.

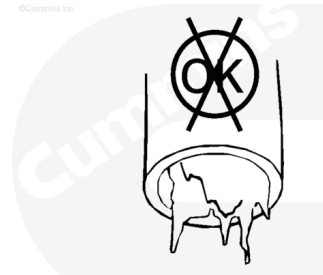

10200031

⚠ CAUTION ⚠

If a crankcase breather tube heater option is installed, the crankcase breather heater must be removed prior to submerging the crankcase breather tube in water and/or cleaning solution. Damage to the crankcase breather tube heater will result.

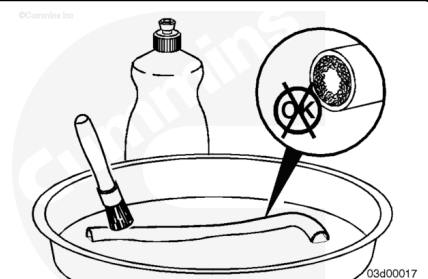

03d00017

Clean the crankcase breather tube outlet with detergent and warm water.

If equipped, clean the crankcase breather catch bottle. Use detergent and warm water.

If more than the crankcase breather tube outlet requires cleaning, removal of the crankcase breather tube may be required. If removal is required, contact a Cummins® Authorized Repair Location.

Visually inspect the crankcase breather tube for the following conditions.

- Cracks
- Material deterioration
- General damage.

If any of the above conditions are exist, replace the crankcase breather tube. Contact a Cummins® Authorized Repair Location.

If equipped, inspect the crankcase breather catch bottle for the following conditions.

- Cracks
- Holes
- General damage.

If any of the above conditions are found, replace the crankcase breather tube catch bottle. Contact a Cummins® Authorized Repair Location.

