

Trainings ▾

Drain

⚠ WARNING ⚠

Drain the water-fuel separator into a container and dispose of in accordance with local environmental regulations.

©Cummins Inc.

Note : Not draining fuel water separator for extended periods of time will trigger an engine protection derate. Derate will be removed after fuel water separator is drained and water in fuel faults are inactive.

Cummins Inc. requires a fuel-water separator or fuel filter be installed in the fuel supply system.

Shut off the engine.

Drain the water and sediment from the separator daily.


Drain valve opening and closing will vary by design.

Canister Type

Use your hand to open the drain valve.

Drain the filter sump until clear fuel is visible.


Use your hand to close the drain valve.

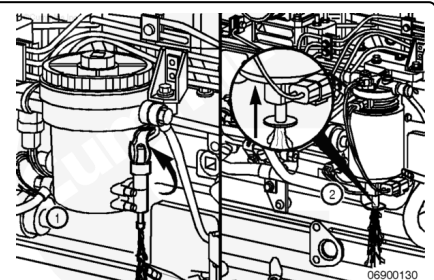

Spin-on Type

Use your hand to open the drain valve. Turn the valve **counterclockwise** approximately 3½ turns until the valve drops down 25.4mm [1 in] and draining occurs.

Drain the filter sump until clear fuel is visible.

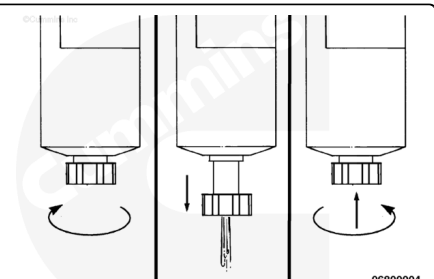

⚠ CAUTION ⚠

**When closing the drain valve, do not overtighten the valve.
Overtightening can damage the threads.**

To close the valve, lift the valve and turn **clockwise** until it is hand-tight.

Last Modified: 25-Aug-2022
