


Trainings ▾

Maintenance Check

⚠ WARNING ⚠

Do not remove a pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

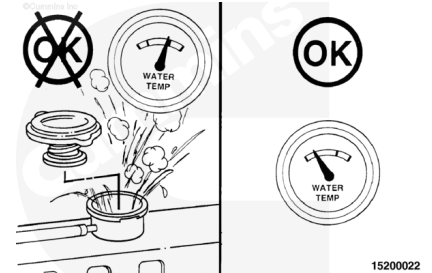

⚠ CAUTION ⚠

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system plugging and inadequate coolant flow, causing the engine to overheat.

The coolant level **must** be checked daily.

⚠ CAUTION ⚠

Do not add cold coolant to a hot engine. Engine castings can be damaged. Allow the engine to cool to below 50°C [122°F] before adding coolant.




Coolant added to the engine **must** be mixed with the correct proportions of antifreeze, supplemental coolant additive, and water to avoid engine damage.

Coolant recommendations and specification details on correct mixing of coolant can be found in Maintenance Specifications (Section V).

Fill the cooling system with coolant. Refer to the markings on the radiator or expansion tank for coolant levels or refer to the OEM manual.

Note : Some radiators have two fill necks, both of which **must** be filled when the cooling system is drained.

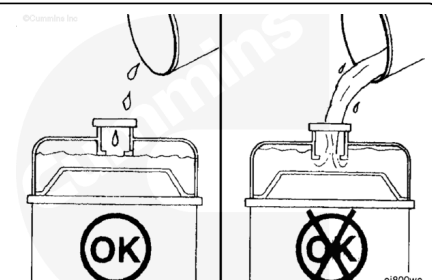

Last Modified: 20-Jan-2023