


## Trainings ▾

### Initial Check


There are two possible heavy-duty battery connections:

- Battery terminal and clamp (1)
- Threaded battery terminal and nut (2).

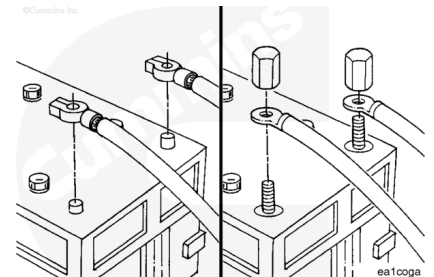

#### **⚠ WARNING ⚠**

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

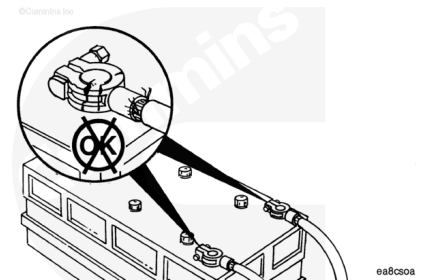


Remove and inspect the battery cables and connections for cracks or corrosion.


Replace broken terminals, connectors, or cables.

If the connections are corroded, use a battery brush or wire brush to clean the connections until shiny.

Make sure all debris is removed from the connecting surfaces.

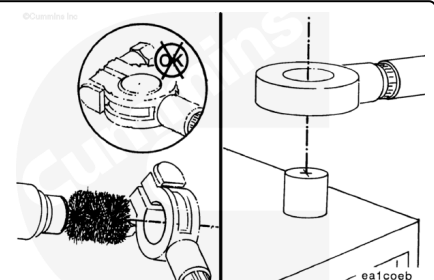

#### **⚠ WARNING ⚠**

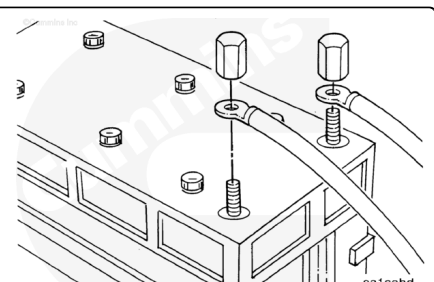

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

Install the cables and tighten the battery connections.

Coat the terminals with grease to prevent corrosion.