



Connector Replacement

Terminals are used for various connections including grounds and fuel shutoff valve supply.


Use wire crimp tool, Part Number 3822930, to cut and remove the ring terminal connector as shown.

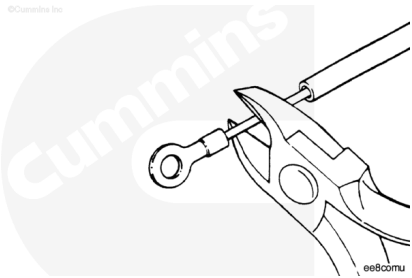

Use wire crimp tool, Part Number 3822930, to remove 6 mm [1/4 in.] of insulation from the harness wire.

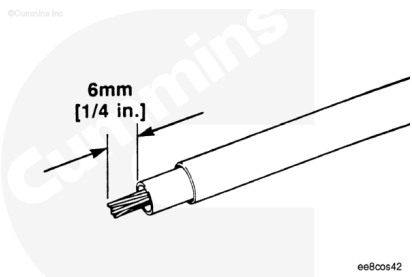


Install the proper-size ring terminal on the bare wire. The ring terminals that are included in the wiring repair kit, Part Number 3164572, are as follows:

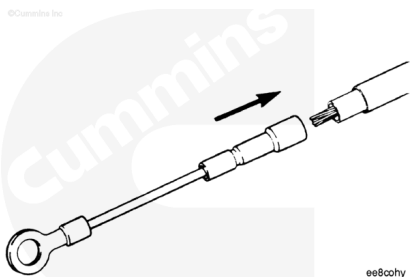

Ring Terminal Size	Part No.
No. 10	3823760
1/2 inch	3823761

Only use wire crimping pliers, Part Number 3822930, when repairing electrical terminals.

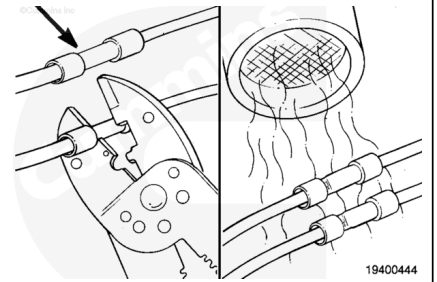

Crimp the repair wire on the bare wire.

Use a heat gun, Part Number 3822860, or open flame to heat the shrink tubing. The tubing will shrink and make the connection waterproof.