

Trainings ▾

Select Service Tools


The following Cummins Service Tools or equivalent are required to complete this procedure:

1. Wire Stripping Tool, Part Number 3400045, or equivalent.
2. Wire Crimping Tool, Part Number 3163109, or equivalent.
3. Heat shrink tube installer (butane), Part Number 5298996, or equivalent.

General Information

Butt splice connectors are used when repairing wiring harnesses or damaged wires.


This procedure **only** covers butt splice connectors provided by Cummins Inc. Installation procedures for other butt splice connectors may be different.

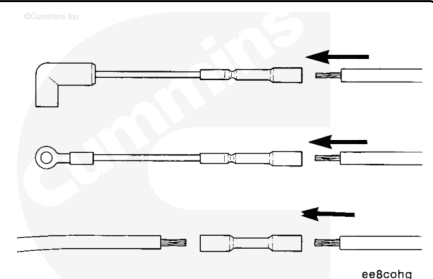

Repair

Crimp Splice

Strip 6 mm [$\frac{1}{4}$ in] of insulation from the end of the wires. Use Cummins® service tool, Part Number 3400045, wire stripping tool or equivalent.

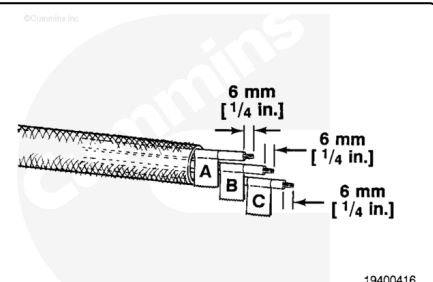


⚠ WARNING ⚠

To reduce the possibility of personal injury, wear goggles and protective clothing.

⚠ CAUTION ⚠

Connect the repair connector wires to the correct harness wires or electrical problems will occur.

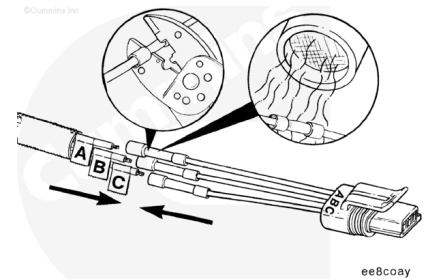

Install the wire end(s) into the end(s) of the crimp butt splice connector.

Crimp the butt splice connector. Use Cummins® service tool, Part Number 3163109, wire crimping tool or equivalent.


Heat the butt splice connector. Use Cummins® service tool, Part Number 5298996, heat shrink tube installer (butane) or equivalent.

Apply heat evenly over the entire butt splice connector.

Apply heat until the shrink tube portion of the butt splice connector has sealed the joint.


Solder Splice

Strip 6 mm [$\frac{1}{4}$ in.] of insulation from the end of the wires. Use Cummins® service tool, Part Number 3400045, wire stripping tool or equivalent.

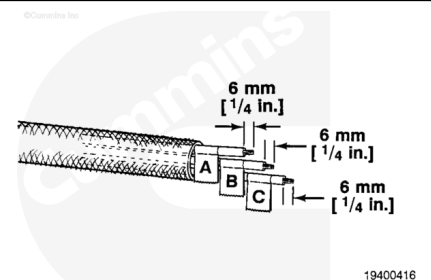

⚠ CAUTION ⚠

Connect the repair connector wires to the correct harness wires or electrical problems will occur.

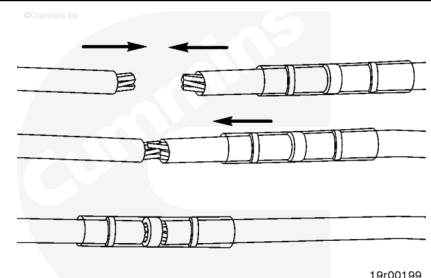

Slide the solder butt splice connector on the repair wire.


Engage the stripped end of the wires to be connected.

Slide the solder butt splice connector over the bare wires until the solder is centered over the bare wires.

Rotating the solder butt splice connector will assist with installation.

⚠ WARNING ⚠

To reduce the possibility of personal injury, wear goggles and protective clothing.

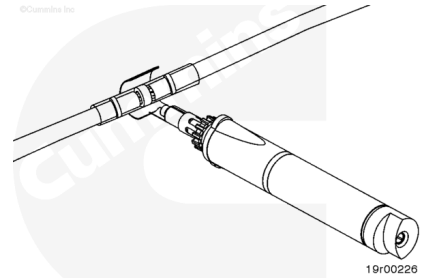

Heat the solder of the butt splice connector. Use Cummins® service tool, Part Number 5298996, heat shrink tube installer (butane) or equivalent.

Apply heat evenly over the entire butt splice connector.

Apply heat until the solder of the butt splice connector has flowed into the wire strands.

Verify the solder butt splice connector has been installed correctly.

1. Incorrect.

- Insufficient heat.
- Shrink tube not sealed.
- Solder not melted.

2. Incorrect.

- Insufficient heat on solder.
- Uneven solder distribution.

3. Correct.

- Shrink tube sealed.
- Colored seal bands sealed and flattened.
- Even solder distribution.

