


Trainings ▾

Pin Replacement

The connector pins can **not** be repaired or replaced. The connector **must** be replaced as a unit.


Refer to the Connector Replacement step in this procedure for replacement instructions.

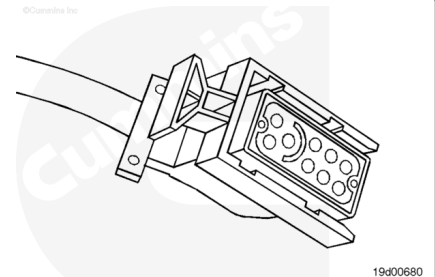


Connector Replacement

This connector is used to connect the VP44 fuel pump to the ECM.

The pins in this connector can **not** be repaired or replaced. The connector **must** be replaced as a unit.

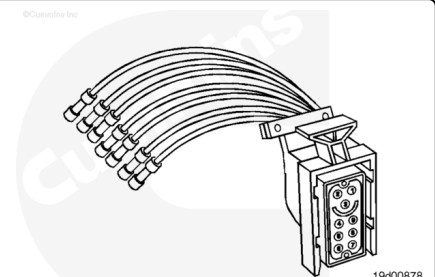

Measure 178 mm [7 in] back from the face of the connector and remove the wiring harness protective cover.

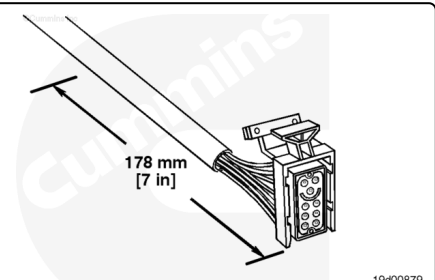


Before cutting the wires, measure and tag all of the wires.

Use wire crimping tool, Part Number 3822930, to cut the wires.

Cut wire A 165 mm [7 in] from the face of the connector.

Cut wire B 152 mm [6-½ in] from the face of the connector.

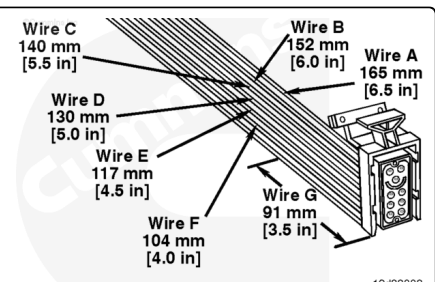

Cut wire C 140 mm [6 in] from the face of the connector.


Cut wire D 130 mm [5-½ in] from the face of the connector.

Cut wire E 117 mm [4-½ in] from the face of the connector.

Cut wire F 104 mm [4 in] from the face of the connector.

Cut wire G 91 mm [3-½ in] from the face of the connector.

Use the wire crimping tool to remove 6 mm [¼ in] of insulation from all electrical wires.

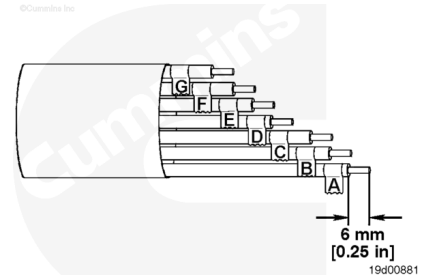


Before installing the new connector, perform a test fit to make sure the connector is keyed correctly.

Refer to the appropriate wiring repair kit in the service tools table in the front of Section 19 for the correct repair connector.

Refer to the wiring diagram in Section E for pin locations.

Install the pin repair wires and connector onto the bare wires of the harness and use the wire crimping tool to crimp each repair wire onto the harness.

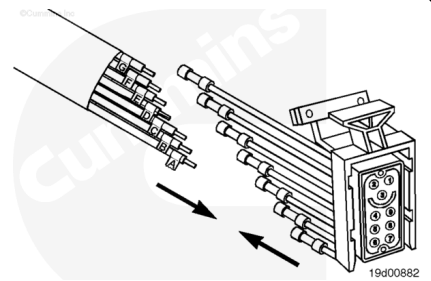

For added protection, wrap the wires with tape to complete the repair.

