

Trainings ▾

Pin Replacement

The connector pins can **not** be replaced. The connector **must** be replaced as a unit.

Refer to the Connector Replacement procedure for replacement instructions.

©Cummins Inc.


Connector Replacement

Before installing the new connector, perform a test fit to make sure the connector is keyed properly.


Refer to the appropriate wiring repair kit in the service tools table in the front of Section 19 for the correct repair connector.

Refer to the wiring diagram for pin locations.

Replace one contact wire at a time. If more than one wire needs replaced, attach a lettered tag to each wire removed.

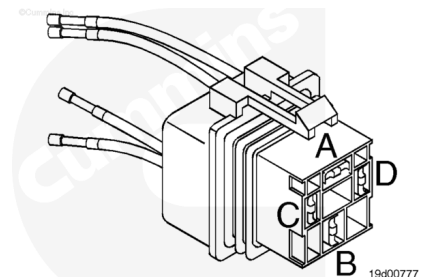

Measure 152 mm [6 in] from the face of the connector, and remove the wiring harness protective cover.

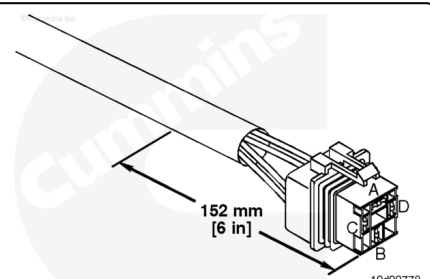

Before cutting the wires measure and tag them.


Use wire crimping tool, Part Number 3822930.

Cut wire A 130 mm [5 in] from the face of the connector.

Cut wire B 117 mm [4-½ in] from the face of the connector.

Cut wire C 104 mm [4 in] from the face of the connector.

Cut wire D 91 mm [3-½ in] from the face of the connector.

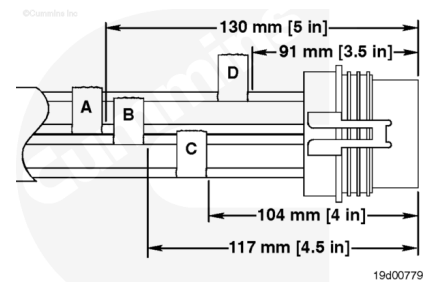


Use crimping tool, Part Number 3822930, to remove 6 mm [¼ inch] of insulation from the electrical wires.

Before installing the new connector, perform a test fit to make sure the connector is keyed correctly.

Refer to the appropriate wiring repair kit in the service tools table in the front of Section 19 for the correct repair connector.


Refer to the wiring diagram for pin locations.

Replace one contact wire at a time. If more than one wire needs replaced, attach a lettered tag to each wire removed.

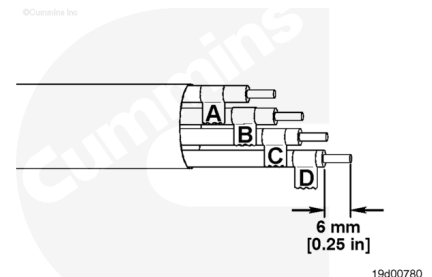


Install the terminal repair wires on the bare wires. Use wire crimping tool, Part Number 3822930, to crimp the terminals.

Use heat gun, Part Number 3822860, or an open flame to heat the shrink tubing. The tubing will shrink and make the connection waterproof.

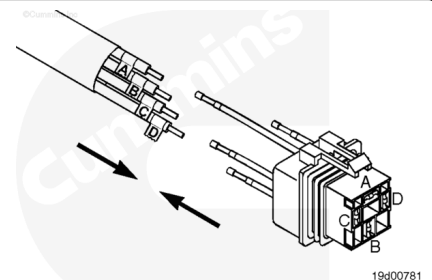


Wrap the wires with tape, for added protection, to complete the repair.

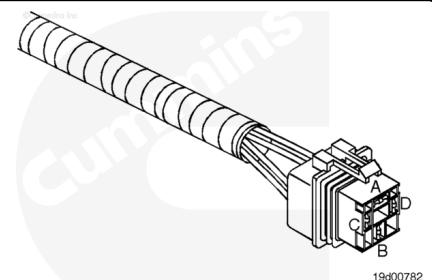

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934, other lubricants, such as lubricating oil or grease, in the connectors can cause electronic control unit damage, poor performance, or premature connector pin wear.

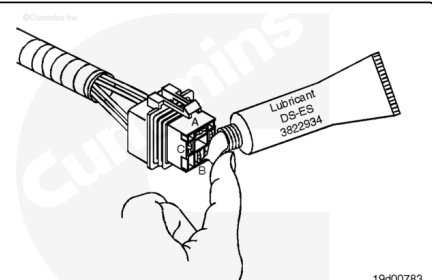

Apply a small amount of lubricant to the connector terminals.
Before installing, fill the entire connector cavity with lubricant.

Last Modified: 26-Mar-2012
