


Trainings ▾

Pin Replacement

The connector can have multiple pin configurations.

The connector pins can **not** be repaired or replaced. The connector **must** be replaced as a unit.

Reference the connector replacement step in this procedure for replacement instructions.

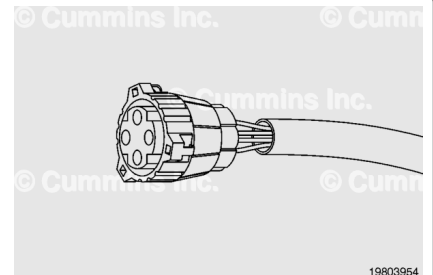


Connector Replacement


Reference the appropriate wiring repair kit for the correct repair connector.

Refer to the appropriate wiring diagram and engine application for pin locations.

Before installing the new connector, perform a test fit to make sure the connector is keyed correctly.

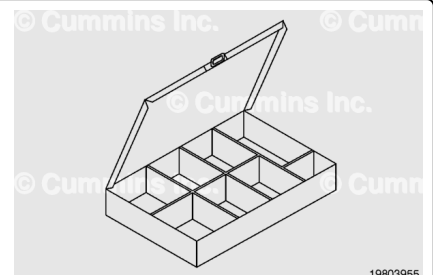


Measure 152 mm [6 in] from the face of the connector and remove the wiring harness protective cover.

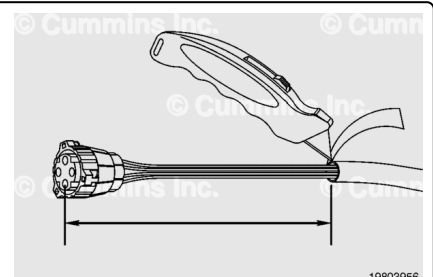


Before cutting the wires, measure and tag all wires.

Use wire crimping tool, Part Number 3822930, or equivalent, to cut wires 102 mm [4 in] from the face of the connector.

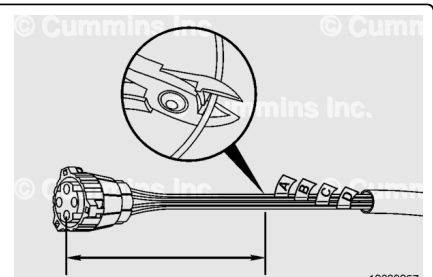


Use wire crimping tool, Part Number 3822930, or equivalent, to remove 6 mm [$\frac{1}{4}$ in] of wire insulation from the harness wire(s) cut in the previous step.

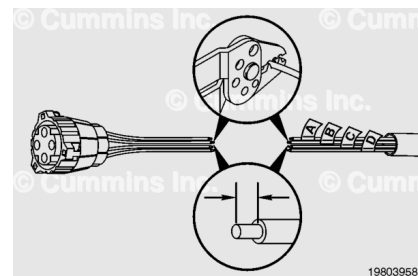


Install the wires of the harness into the heat shrinkable butt splices provided on connector.

Use wire crimping tool, Part Number 3822930, or equivalent, to crimp the wires into the heat shrinkable butt splices.

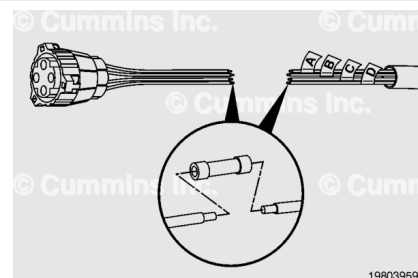

Use heat gun, Part Number 3822860, or equivalent, to heat the shrink tubing. The tubing will shrink and make the connection waterproof.

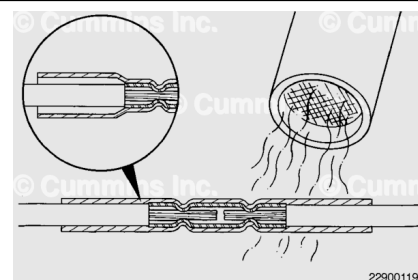

Wrap the wires with electrical tape for added protection, to complete the repair.

