

Trainings ▾


General Information

The following inspection procedures should be used for any component, connector, or harness connector to verify there is no pin damage.

To troubleshoot electrical circuit faults that are intermittent and are currently inactive. Refer to Procedure 019-362 in Section 19. (</qs3/pubsys2/xml/en/procedures/99/99-019-362.html>)

Inspect for Reuse


When disconnecting connectors during troubleshooting, **always** check for loose connectors (gently pull the wires at the back of the connector) and inspect the pins. Look for bent, corroded, and pushed back pins.

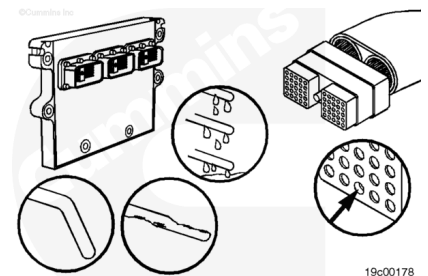

Moisture in Connector


Moisture in a connector can also cause system performance issues. Many times moisture is difficult to see in a connector. If moisture is suspected, the connector **must** be dried by applying contact cleaner, Part Number 3824510, to the connector. A heat gun can also be used on a low heat setting, but do **not** damage the connector or wires.

Note : Do not blow compressed air in the electronic control unit ports or connector. Compressed air can contain moisture due to condensation.

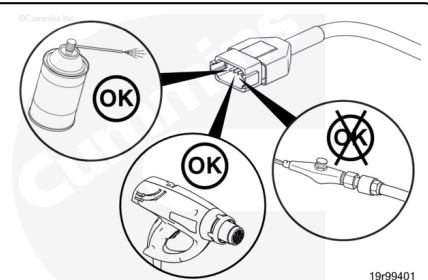


Bent or Expanded Pins

Inspect the male terminals of the connector. If any of the terminals are bent and will **not** easily mate with the other side of the connector, or if the male terminals are expanded, that is, bulged out or squashed becoming too large to mate with the other side of the connector, then the pin **must** be replaced. See the repair section for the specific connector in question.

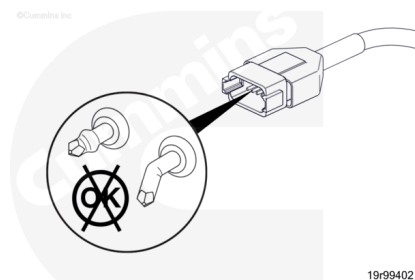


Corroded Pins

Inspect both the male and female terminals for corrosion, which can cause a poor electrical connection within the connector. If any corrosion is evident on the pins, then the corroded pins **must** be replaced. See the repair section for the specific connector in question.

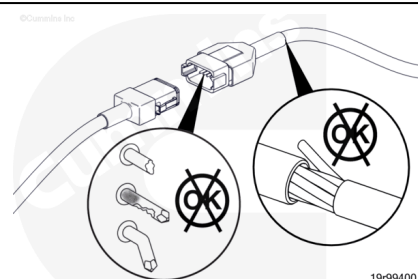

Pushed Back Pins

Inspect both the male and female terminals for pins that can **not** be making contact because they are pushed back in the connector. To repair, push the pin into the connector body from the back of the connector. Verify the terminal locks into place. If the terminal will **not** lock into place, then replace the terminal or the connector. See the repair section for the specific connector in question.

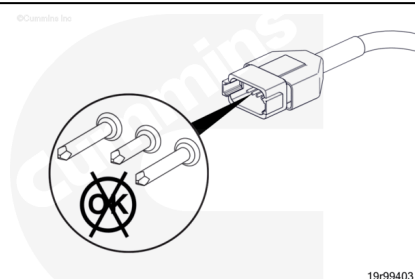

Drag Test

Use the correct mating terminal from the test lead kit, Part Number 5299367. Manually insert the new lead into each terminal in the connector. While sliding the terminal lead in and out, the terminal lead should fit securely with a significant amount of drag. If **not**, the terminal **must** be replaced. See the repair section for the specific connector in question.

