


Trainings ▾

General Information

⚠ CAUTION ⚠

Do not operate the engine at full throttle below peak torque rpm (refer to engine dataplate for peak torque rpm) for more than 30 seconds. Operating the engine at full throttle below peak torque will shorten engine life to overhaul, can cause serious engine damage, and is considered engine abuse.

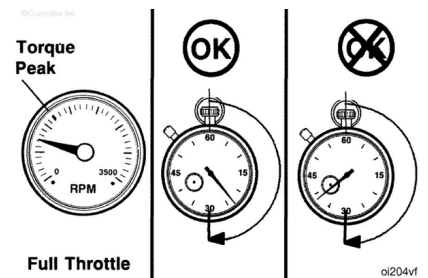


⚠ CAUTION ⚠

Do not operate the engine beyond the maximum engine speed. Operating the engine beyond the maximum engine speed can cause severe engine damage. Use proper operating techniques for the vehicle, vessel, or equipment to prevent engine overspeed. The maximum engine speed specification is listed in Maintenance Specifications (Section V).

Cummins® engines are designed to operate successfully at full throttle under transient conditions down to peak torque engine speed. This is consistent with recommended operating practices.


⚠ CAUTION ⚠

Do not idle the engine for excessively long periods. Long periods of idling, more than 10 minutes, can cause poor engine performance.

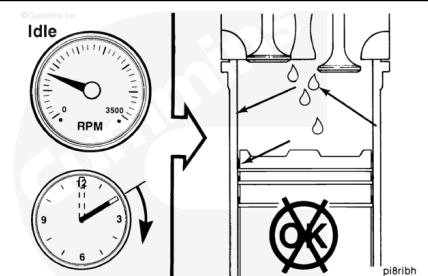

⚠ CAUTION ⚠

Do not idle the engine for excessively long periods. Long periods of idling, more than 10 minutes, can cause poor engine performance.

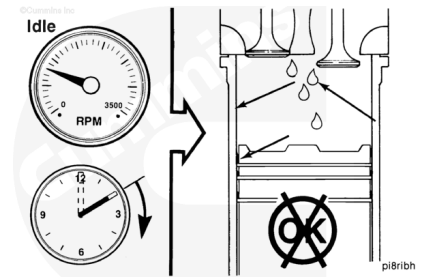


Circuit Breakers

Electronic Governor Operation


The electronically controlled marine engine is equipped with two circuit breakers located on the ECM side of the engine.

A 5-amp circuit breaker (1) is used for keyswitched power to the ECM and a 10-amp circuit breaker (2) is used for non-keyswitched power to the panel. The circuit breaker panel also houses a 40-pin OEM connector (3).

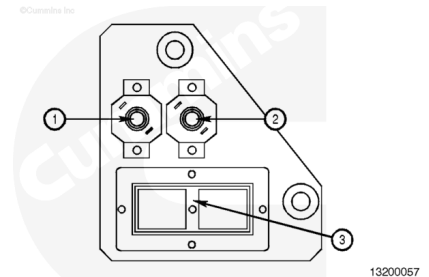

Mechanic Governor Operation

The marine engine is equipped with a 10 amp circuit breaker on the engine wiring system. The breaker is located on the rear of the cylinder head for some models and the rear of the cylinder block on other engine models.

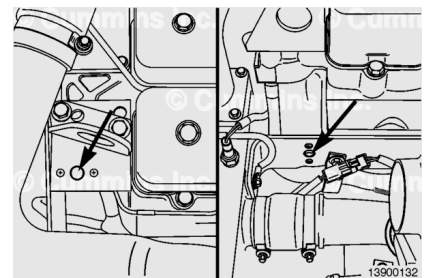


Circuit Breakers

Electronic Governor Operation

The electronically controlled marine engine is equipped with two circuit breakers located on the ECM side of the engine.

A 5-amp circuit breaker (1) is used for keyswitched power to the ECM and a 10-amp circuit breaker (2) is used for non-keyswitched power to the panel. The circuit breaker panel also houses a 40-pin OEM connector (3).

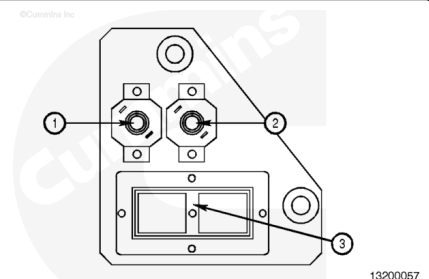

Mechanic Governor Operation

The marine engine is equipped with a 10 amp circuit breaker on the engine wiring system. The breaker is located on the rear of the cylinder head for some models and the rear of the cylinder block on other engine models.

