

Trainings ▾

General Information

Note : Damage to the engine resulting from freezing is **not** covered under the Cummins® warranty.

Procedures **must** be followed to protect the engine from freeze damage during a cold weather storage period. The procedure applies anytime freezing conditions are present or could occur.

Refer to Procedure 000-014

(/qs3/pubsys2/xml/en/procedures/99/99-000-014.html)


(Seasonal Storage) - in Section SS in appropriate Operation and Maintenance manual, for steps to protect the engine during these periods.

Industrial and Power Generation

Allow the engine to idle 3 to 5 minutes before shutting the engine off after a full-load operation. This process allows adequate cool down of pistons, cylinders, bearings, and turbocharger components.

Turn the ignition switch or keyswitch to the OFF position. If the engine does **not** shut down, refer to Troubleshooting Symptom (Section TS) in appropriate Operation and Maintenance manual.

For engines equipped with an engine control module (ECM), turn the keyswitch off for a minimum of 100 seconds before attempting to restart the engine or attempting to disconnect the continuous (unswitched) battery power supply. If 100 seconds have **not** passed, corruption to ECM information, fault codes and internal engine damage can occur.

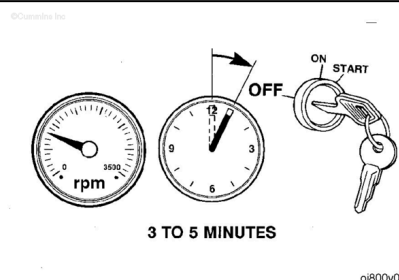

Marine Applications

For engines with shielded exhaust manifolds and turbochargers, allow the engines to idle for 10 to 12 minutes before shutting off after full load operation.

Allow the engine(s) to idle 3 to 5 minutes before shutting off after full load operation. This process allows the cool down of pistons, cylinders, bearings and turbocharger components.

Push the stop button to stop the engine(s). If the engine does **not** shut down, refer to Troubleshooting Symptom (Section TS) in appropriate Operation and Maintenance manual.

Turn the keyswitch to the OFF position.

For engines equipped with an engine control module (ECM), turn the keyswitch off for a minimum of 100 seconds before attempting to restart the engine or attempting to disconnect the continuous (unswitched) battery power supply. If 100 seconds have **not** passed, corruption to ECM information, fault codes and internal engine damage can occur.