

Trainings ▾

General Information

For engines with shielded exhaust manifold and turbochargers, allow the engine(s) to idle for 10 to 12 minutes before shutting off after full load operation.

Otherwise, allow the engine(s) to idle 3 to 5 minutes before shutting off after full load operation. This process allows the cool down of pistons, cylinders, bearings and turbocharger components.


If the engine does **not** shut down, refer to Troubleshooting Symptom (Section TS) in appropriate Operation and Maintenance manual.

Turn the keyswitch to the OFF position.


Push the STOP button to stop the engine(s), or if equipped with a keyswitch **only**, turn the keyswitch to the OFF position.

For engines equipped with an engine control module (ECM), turn the keyswitch off for a minimum of 100 seconds before attempting to restart the engine or attempting to disconnect the continuous (unswitched) battery power supply. If 100 seconds have **not** passed, corruption to ECM information, fault codes and internal engine damage can occur.


Note : The information below is written for engines equipped with an original equipment manufacturer (OEM) supplied control system. For engines equipped with the Cummins supplied controls system, refer to C Command Connect and Connect Premier Marine Panel System PS102 & PS103 Owners Manual, Bulletin 5411481, for additional information.

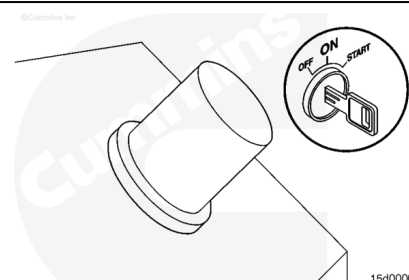

If equipped, push the engine stop switch to the OFF position.

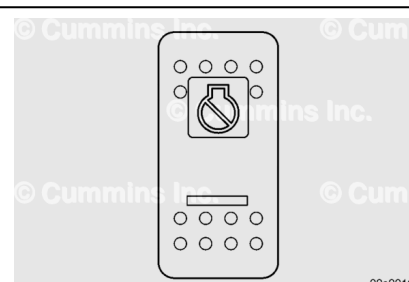


If equipped, a single quick press up (2) of the start / stop switch (1) will stop the engine.

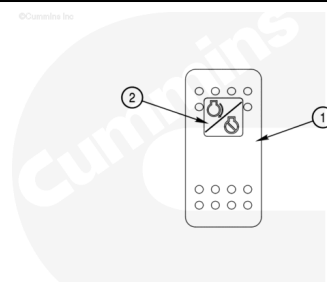

00v00097

If equipped, push the system enable switch to the OFF position.

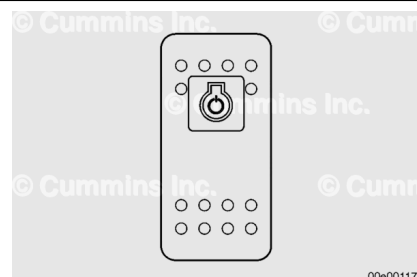

00e00117

Note : Damage to the engine resulting from freezing is not covered under the Cummins® warranty.

Procedures **must** be followed to protect the engine from freeze damage during a cold weather storage period. The procedure applies anytime freezing conditions are present or could occur.

Refer to Procedure 000-014

(</qs3/pubsys2/xml/en/procedures/99/99-000-014.html>)

(Seasonal Storage) - in Section SS in appropriate Operation and Maintenance manual, for steps to protect the engine during these periods.