


Trainings ▾


Normal

If equipped, monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System specifications and Cooling System specifications, in Maintenance Specifications (Section V) for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does **not** meet the specifications.

Continuous operation with engine coolant temperature above or below the engine coolant temperature specifications listed in Maintenance Specifications (Section V) can damage the engine.

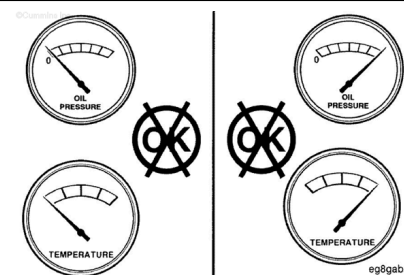

If an overheating condition starts to occur, reduce the power output of the engine by releasing the accelerator pedal or lever or shifting the transmission to a lower gear, or both, until the temperature returns to the normal operating range. If the engine temperature does **not** return to normal, shut off the engine, and refer to Troubleshooting Symptoms (Section TS), or contact a Cummins® Authorized Repair Location.

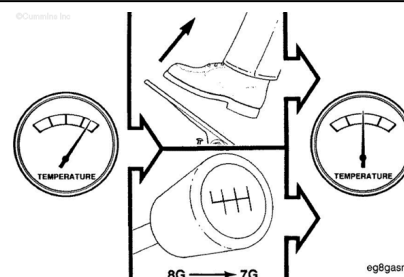

⚠ CAUTION ⚠

Do not idle for extended periods of time. Excessive idle time can cause poor engine performance.

Do **not** operate internal combustion engines at low idle speed for extended periods of time. This operating condition can lead to poor engine performance. The idle shutdown feature, available on most Cummins® engines, can be programmed to shut the engine down after a period of low idle speed operation with no driver activity. A flashing warning lamp will inform the driver of an impending shutdown. If an engine **must** idle for an extended period of time, operate at fast idle (1000 rpm or greater). The Power Take-Off (PTO) feature, available on most Cummins® engines, can be programmed to adjust engine speed with the use of OEM switches to pre-programmed set points.

Ambient Temperature

0 to -32°C [32 to -25°F]

Use 50-percent ethylene glycol antifreeze and 50-percent water for the engine coolant mixture.

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

-32 to -54°C [-25 to -65°F]

Use 60-percent ethylene glycol antifreeze and 40-percent water for the engine coolant mixture.

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

The cold weather operating aid is required for cold weather situations.

Winterfronts and Shutters

Winterfronts and shutters can be used on a vehicle or equipment to reduce air flow through the radiator core into the engine compartment. This equipment can reduce the time required to warm the engine and help maintain the engine coolant temperature. The engine coolant temperature specifications are in the Maintenance Specification (Section V).