


Trainings ▾


Normal

If equipped, monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System specifications and Cooling System specifications, in Maintenance Specifications (Section V) for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does **not** meet the specifications.

Continuous operation with engine coolant temperature above or below the engine coolant temperature specifications listed in Maintenance Specifications (Section V) can damage the engine.

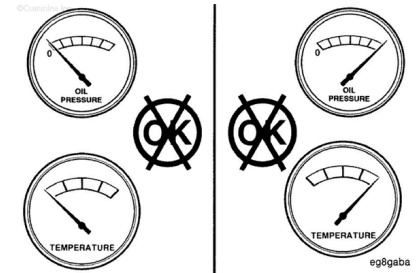

If an overheating condition starts to occur, reduce the power output of the engine by reducing the throttle setting until the temperature returns to normal operating range. If the engine temperature does **not** return to normal, further reduce the engine speed and contact a Cummins® Authorized Repair Location.

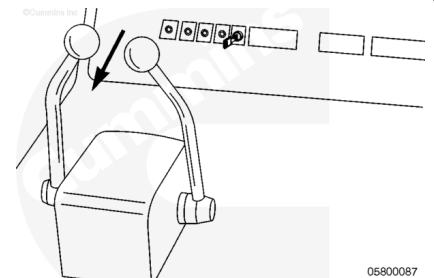

Ambient Temperature

0 to -32°C [32 to -25°F]

Use 50-percent glycol antifreeze and 50-percent water for the engine coolant mixture.

-32 to -54°C [-25 to -65°F]

Use 60-percent glycol antifreeze and 40-percent water for the engine coolant mixture.

The cold weather operating aid is required for cold weather situations.

Last Modified: 10-Jul-2023
