

## Trainings ▾

### General Information

Correct care of your engine will result in longer life, better performance, and more economical operation.

Follow the daily maintenance checks listed in Maintenance Guidelines (Section 2).

The new Cummins® engine associated with this manual does **not** require a "break-in" procedure. This section of the manual provides all of the necessary information required for proper engine operation.

©Cummins Inc.


U.S. legislation requires that stationary compression ignition internal combustion engines designated for emergency use are limited to emergency operations and required maintenance and testing.

©Cummins Inc.

Check the oil pressure indicators, temperature indicators, warning lights, and other gauges daily to verify operation.

Check the oil pressure, coolant temperature, and other engine parameters daily via the OEM front panel to verify operation. Check the panel regularly for any alarm messages. Take appropriate action to rectify the alarm condition, or contact your nearest Cummins® Authorized Repair Location.


©Cummins Inc.

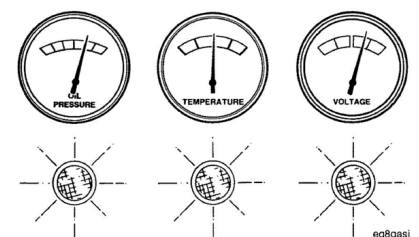

#### **⚠ WARNING ⚠**

**Do not operate a diesel engine where there are or can be combustible vapors. These vapors can be sucked through the air intake system and cause engine acceleration and over speeding that can result in a fire, an explosion, and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize the risk of over speeding where an engine, due to the application, is**

©Cummins Inc.

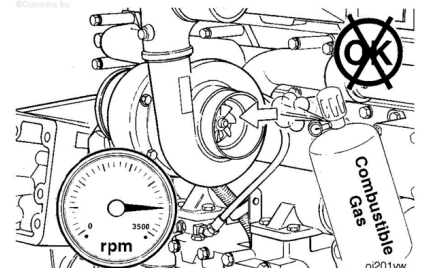

operating in a combustible environment, such as due to a fuel spill or gas leak. Remember, Cummins Inc. has no way of knowing the use you have for your engine. The equipment owner and operator are responsible for safe operation in a hostile environment. Consult a Cummins® Authorized Repair Location for further information.

**⚠ CAUTION ⚠**

**Do not expose the engine to corrosive chemicals. Corrosive chemicals can damage the engine.**

Cummins Inc. recommends the installation of an air intake shutoff device or a similar safety device to minimize the risk of overspeeding when an engine is operating in a combustible environment, such as due to a fuel spill or gas leak.