


Trainings ▾

General Information

Remove all the belts from the engine.


Cover the following parts of the engine:

- All pulley belt surfaces
- Exhaust and intake openings
- Electrical components
- Fuel inlet and drain connections
- Any exposed fittings, threads, and electrical wire terminals.

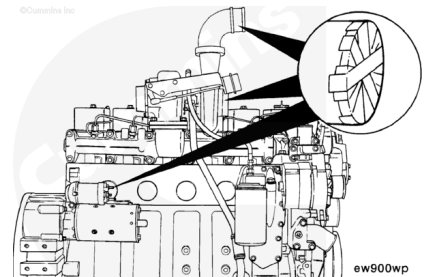

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious injury.

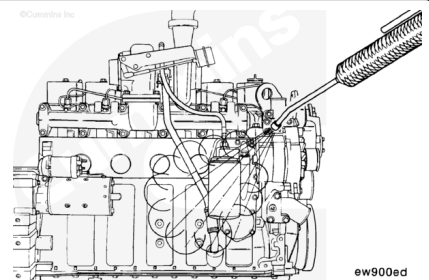


Use steam to clean the engine, and dry with compressed air.

Avoid prolonged, direct steam or water spray on electrical components.

Note : Make sure that all engine surfaces are clean and dry before painting the engine.


Protect the following components from the paint:

- All dataplates
- Valve and injector set marks
- Exhaust manifold
- Turbocharger turbine housing
- Flywheel
- Flywheel housing transmission mounting surface.

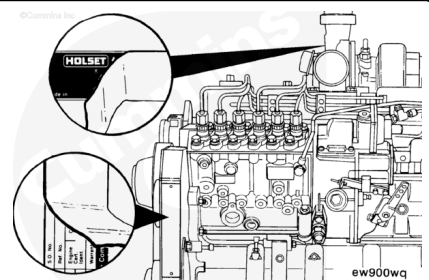

Paint the engine.

©Cummins Inc.

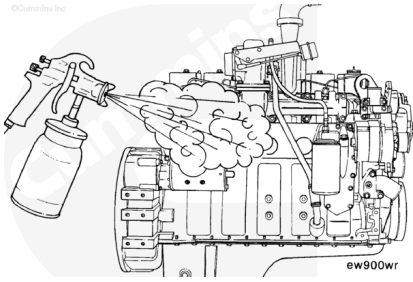

Last Modified: 15-Sep-2003
