

Trainings ▾


Install

⚠ CAUTION ⚠

The seal lip/bore and the sealing surface on the crankshaft must be free from all oil residue to prevent seal leaks.

To aid in installation, apply a mild soap (recommended 50/50 water to soap volumetric ratio) or P-80, Part Number 3824878, to the outside diameter of the seal case (A)


Note : A seal pilot (B) is provided with the new seal. The seal **must** be left on the seal pilot while installing the seal onto the nose of the crankshaft. This will make sure the lips of the seal do **not** get damaged during installation.

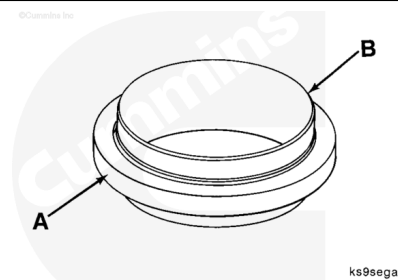

Place the new rear crankshaft seal, with the seal pilot, over the crankshaft nose and slide it by hand toward the flywheel housing.


Note : Make sure the seal is positioned square with the crankshaft.

Remove the seal pilot.

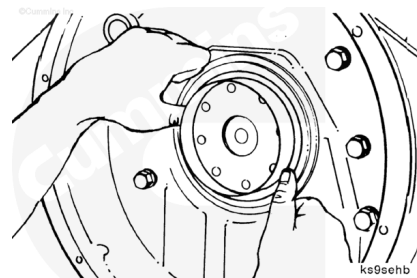

Each new lip style crankshaft seal comes with a disposable seal driver.

- Metal Installation Tool (1): This tool should be used for front gear train engines with a rear seal carrier. The installation tool will install the seal to the proper depth in the rear seal carrier bore of ~8 mm [~0.315 in]. (Note: this is different than the plant installation depth of ~4 mm [~0.157 in])
- Plastic Installation Tool (2): This tool should be used for rear gear train engines. The small chamfer on the inner diameter **must** be used to contact the rear crankshaft seal. The installation tool will make sure the seal is **not**

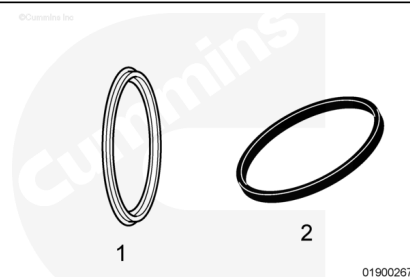

installed deeper than 2 mm [0.079 in] into the flywheel housing bore.

Note : For rear gear train engines, the rear crankshaft seals for the wet flywheel housing applications do not come with a disposable seal driver. Service tool, Part Number 3824078, must be used to install the rear crankshaft seal for the wet flywheel housing. This is the same service tool used for installing the rear crankshaft seal and wear sleeve assembly. Reference Procedure 001-067 in Section 1. For front gear train engines, this service tool can be used in place of the disposable seal driver that comes with the crankshaft seal.

Note : It may be necessary to lightly tap the rear crankshaft seal with a plastic hammer without the disposable seal driver to help get the seal started.

Use the appropriate disposable seal driver that comes with each new rear crankshaft seal to install to the correct depth in the housing or carrier.

Use a plastic hammer to drive the seal into the housing until the alignment tool stops against the housing.

Hit the tool at 12, 3, 6, and 9 o'clock positions to drive the seal evenly and to prevent bending the seal carrier.

After the lip seal installation, the repair can continue. Be careful to **not** bump the part or operate the engine within the first two hours after the seal installation. This allows time for the soapy water or P-80, Part Number 3824878, that was used on the outer diameter of the seal to dry and set.

