


Trainings ▾

Remove


Lip Seal

Note : Lip style rear crankshaft seals can be removed using screws and a slide hammer. This procedure will not be followed on engines with a unitized seal.

Drill two holes, 180-degrees apart, into the rigid portion of the seal.

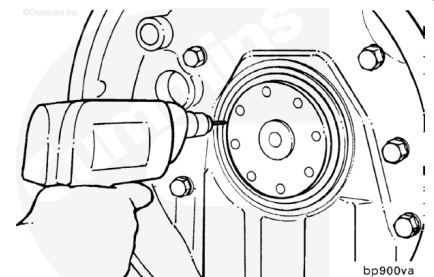

Install two coarse thread sheet metal screws into the holes just drilled. Use a slide hammer, Part Number 3823822, to remove the rear crankshaft seal.

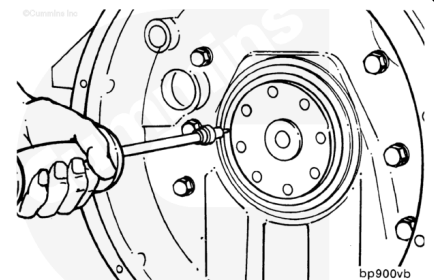

Unitized Seal

For engines with unitized seals, use service tool Part Number 3164660.

Table 2. Rear Crankshaft Seal Replacer Kit, Part Number 3164660

Item Number	Part Number	Description	Quantity
1	3164666	Replacer screw assembly	1
2	3164664	Crankshaft seal replacer	1
3	3164174	Socket head capscrew, M12 x 1.25x 25 mm	2


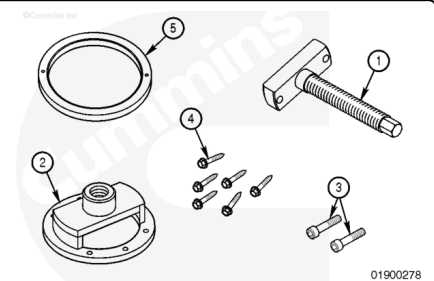


Table 2. Rear Crankshaft Seal Replacer Kit, Part Number 3164660

4	3164217	Sheet metal screw, Number 10x25.4 mm [1 in] long	25 (7 shown)
5	-	Disposable plastic driver (purchased with rear crankshaft seal kit)	1

With the rear crankshaft seal installed onto the crankshaft flange as described earlier in this procedure, mount the replacer screw assembly (1) onto the rear of the crankshaft. Install the two M12 x 1.25 x 60-mm socket head capscrews (3).

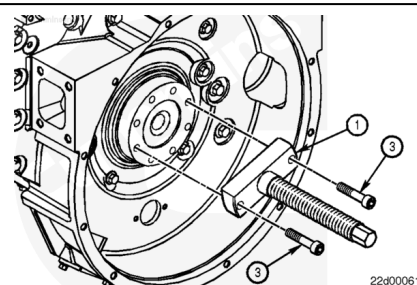


⚠ CAUTION ⚠

Do not use an impact wrench or air tools. Doing so can damage the tool.


Lubricate the replacer screw with anti-seize compound or a suitable grease.

Hold the replacer screw and install the crankshaft seal replacer (2) onto the replacer screw assembly. Advance the crankshaft seal replacer toward the seal by rotating it **clockwise** until the attached disposable driver is positioned against the rear crankshaft seal. Then insert small screws into the crankshaft seal replacer tool.

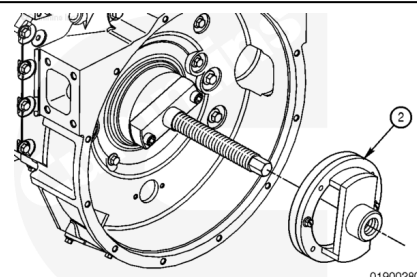

⚠ CAUTION ⚠

Do not overtighten the replacer screw assembly after the crankshaft seal replacer contacts the flywheel housing. Doing so can damage the tool.

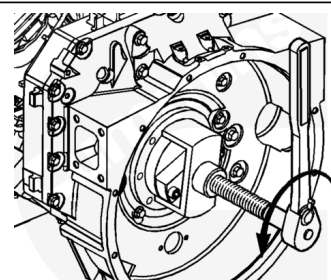

While holding the crankshaft seal replacer, rotate the replacer screw **counterclockwise** until the disposable driver attached to the crankshaft seal replacer makes contact with the flywheel housing.

Remove the service tools.

Last Modified: 13-May-2016
