


Trainings ▾

Install

⚠ CAUTION ⚠

Make sure to only apply sealant to the areas specified.
Failure to do so may block oil passages to the accessory drive and/or cause a loss of oil pressure. This will result in severe engine damage.

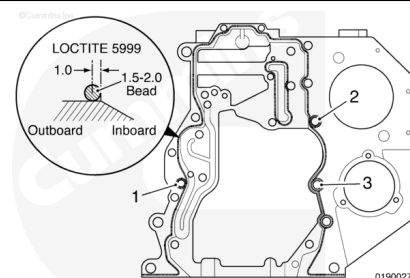

Apply a 1.5 to 2.0 mm [0.06 to 0.08 in] wide bead of sealant, Part Number 3164070, to the block side of the gear housing in the path illustrated and install the rear gear housing capscrews and housing.

Note : Make sure to apply a bead of sealant around the mounting capscrew holes shown, locations 1, 2 and 3.

Be sure there is a bead of sealant at the intersection joint of the cylinder block, oil pan, and gear housing.

Note : Install the gear housing within 10 minutes of applying sealant or the sealant will not seal correctly. Once installed, allow the to dry for 30 minutes before running the engine.

Tighten the capscrews as shown.

Torque Value:

M12

1. 50 n•m [37 ft-lb]

Torque Value:


M10

1. 47 n•m [35 ft-lb]

Torque Value:

M8

1. 24 n•m [212 in-lb]

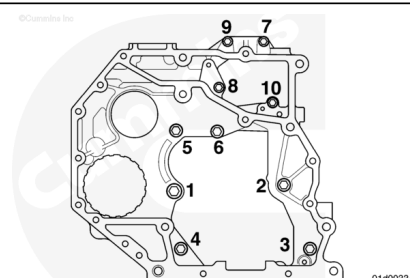

Note : If a rear gear housing and/or timing pin assembly is installed, the timing pin must be accurately located. Refer to Procedure 001-

049 (/qs3/pubsys2/xml/en/procedures/40/40-001-049.html)

Last Modified: 03-Aug-2016
