

Trainings ▾

Install

Front Gear Train

Note : The B Series engines have two configurations for the crankshaft pulleys and vibration dampers. Determine which configuration is used and use the appropriate steps in this procedure.


©Cummins Inc.

One Piece Pulley/Vibration Damper

Install the crankshaft vibration damper.

Install and tighten the crankshaft pulley/vibration damper capscrews.

Torque Value: 125 n•m [92 ft-lb]

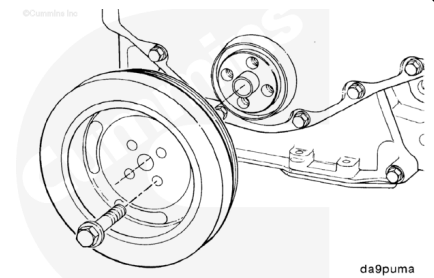

Two-Piece Pulley/Vibration Damper

Install the vibration damper.


Install and tighten the vibration damper capscrews.

Torque Value: 200 n•m [148 ft-lb]

Install the crankshaft pulley.

Install and tighten the crankshaft pulley capscrews.

Torque Value: 77 n•m [57 ft-lb]

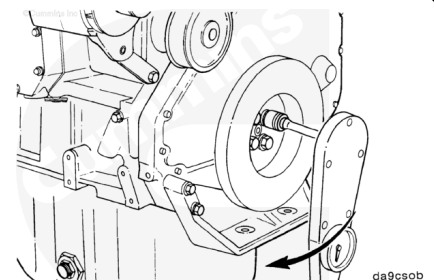

Rear Gear Train


Lubricate bolts with clean engine oil.

Install the vibration damper.

For rear gear train engines, tighten the six vibration damper capscrews in a criss-cross pattern.

Torque Value:

1. 50 n•m [37 ft-lb]
2. Rotate 90 degrees

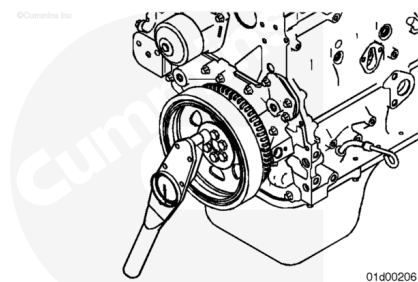

Last Modified: 26-Apr-2017
