


Trainings ▾

General Information

Note : This procedure is for front gear train engines only.

For front gear train engines, a rear crankshaft seal carrier is mounted to the rear of the cylinder block to house the rear crankshaft seal. For rear gear train engines, the rear crankshaft seal is installed in the flywheel housing.

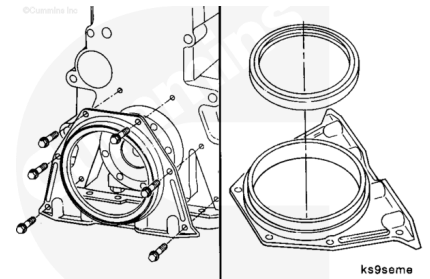

Remove

Remove the capscrews from the rear cover.

Remove the cover from the crankshaft flange.

Support the rear seal carrier on a flat work surface with wooden blocks. Use a suitable punch and hammer to drive the old seal out of the rear seal carrier.

