

Trainings ▾

Remove


B4.5 RGT Engines

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

⚠ CAUTION ⚠


If removing the cylinder head with the injectors installed, be careful not to damage the tips of the injector. Do not set the cylinder head down on the combustion face with the injectors installed. Damage to the injector tips will result.

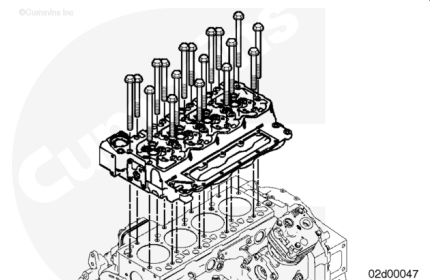

Remove the cylinder head capscrews and cylinder head.


B3.9, B5.9, and B4.5 Engines

Remove the cylinder head capscrews.

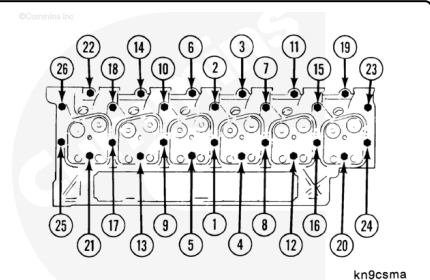

⚠ CAUTION ⚠

If removing the cylinder head with the injectors installed, be careful not to damage the tips of the injector. Do not set the cylinder head down on the combustion face with the injectors installed. Damage to the injector tips will result.

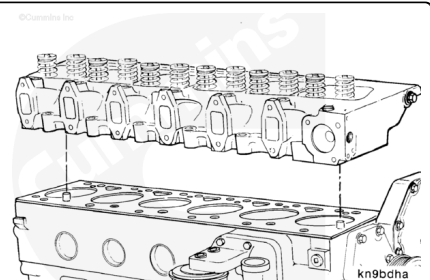

⚠ WARNING ⚠

The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

⚠ CAUTION ⚠

Do not lay the cylinder head on the combustion deck. This can cause damage to the cylinder head deck.

Remove the cylinder head from the cylinder block. Be sure the head is removed in a direct upward direction.

Cylinder Head Weight		
Cylinder Number	Kg	lb
4	36	79
6	51.3	113