


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

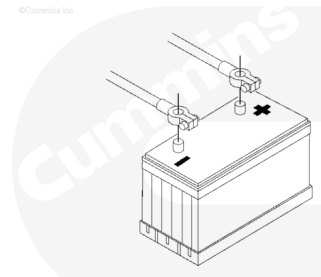

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

- Prior to removing any components, clean around the mounting fasteners and sealing joints with compressed air to remove any loose debris.

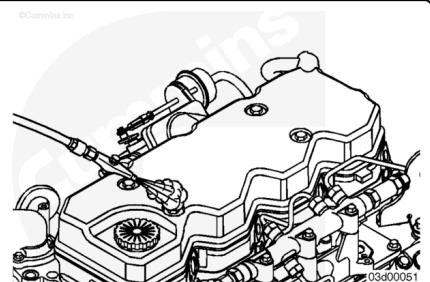


Remove

B4.5 RGT Engines

Disconnect the breather tube connection at the back of the rocker lever cover.

Two capscrews directly mount the breather tube connection to the rocker lever cover. Remove the capscrew(s) to disconnect the breather tube connection from the rocker lever cover.

Note : Some breather tube connections use internal Torx capscrews to secure the breather tube connection to the rocker lever cover.

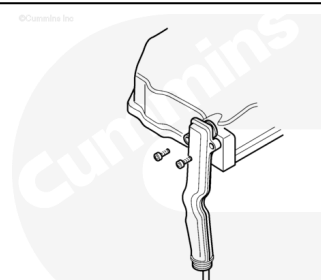


Note : Do not remove the rocker lever gasket on engines in which the rocker lever cover gasket is fit into a groove at the base of the rocker lever cover. The gasket is reusable. Once the gasket is removed from the rocker lever cover it must be replaced.

Remove the mounting nuts and isolators from the rocker lever cover.


Note : It may be necessary to gently pry the breather tube connection from the back of the rocker lever cover while removing.

Remove the rocker lever cover.

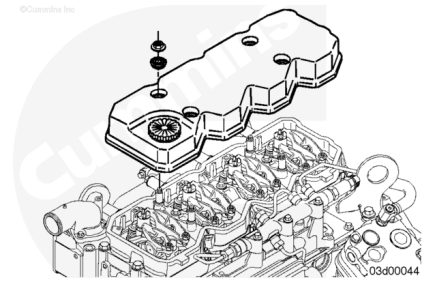

B3.9, B5.9, and B4.5 Engines

Remove the capscrews, capscrew seals, rocker lever covers and rocker lever cover gaskets.

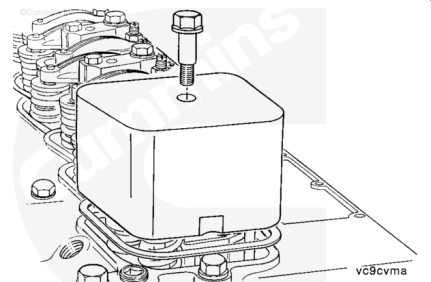


Clean and Inspect for Reuse

B4.5 RGT Engines

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

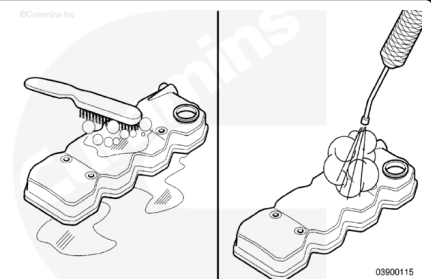

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Note : When cleaning the rocker lever cover, if the rocker lever gasket is still installed in the base of the rocker lever cover, do not submerge the rocker lever cover in solvent. Limit the amount of exposure the gasket has to solvent. The gasket is reusable. Once the gasket is removed from the rocker lever cover it **must** be replaced.


Clean the rocker lever cover with solvent. Dry with compressed air.

Note : Check the gasket while it is installed in the valve cover. Once the gasket is removed from the cover it **must** be replaced.

Check the gasket for cracks on the sealing surface.


Replace the gasket if damage is present.

Replace the gasket if it is removed from the groove in the rocker lever cover.

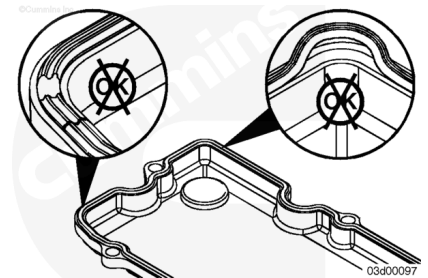

Inspect the rubber isolators for cracks.


Replace if cracked or broken.

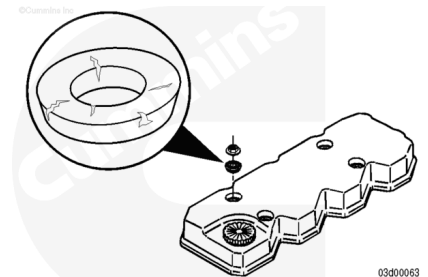

⚠ CAUTION ⚠


On engines equipped with an internal breather baffle (1), do not remove the baffle. Removal of the internal breather baffle mounting fasteners may damage the rocker lever cover (2).

It is **not** necessary to remove the baffle. There is no mesh or screening located internal to the breather baffle.

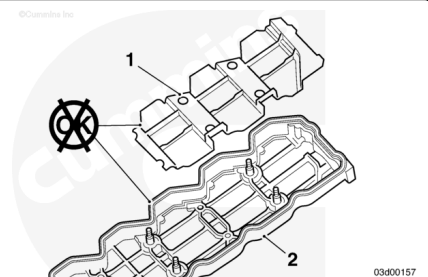

Inspect the rocker lever cover for cracks or other damage.

Replace the rocker lever cover if any damage is found.

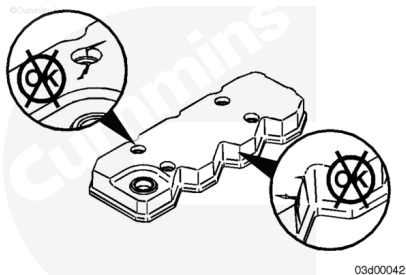

03d00042

B3.9, B5.9, and B4.5 Engines

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the rocker lever cover(s) with a strong solution of detergent in hot water.


Dry with compressed air.



03d00084

Inspect the capscrew seals, rocker lever covers and rocker lever cover gaskets for damage.

Replace any damaged components.

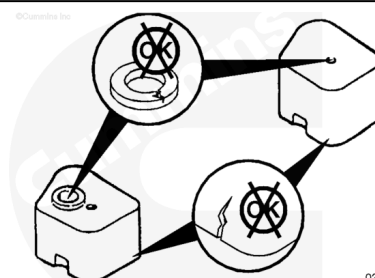

03900085


Assemble

B4.5 RGT Engines

Note : If the gasket has been removed from the rocker lever cover, a new gasket must be used.

If replacing the rocker lever gasket, the following installation procedure must be used when installing the press-in gasket.

1. Press the molded gasket into the corners of the rocker lever cover
2. Press the remaining gasket into the rocker lever cover.

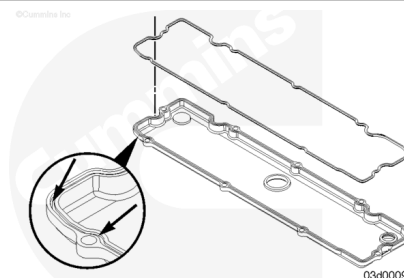

03d00098

Install


B4.5 RGT Engines

Install the rocker lever cover over the mounting capscrews.


Install the isolators and mounting nuts.

Tighten the mounting nuts.

Torque Value: 24 n•m [18 ft-lb]

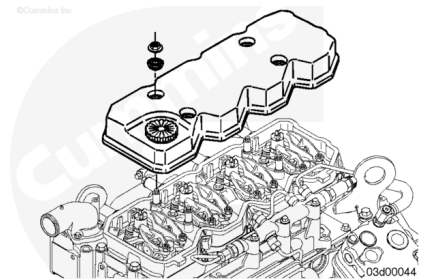

Prior to connecting the breather connection tube to the rocker lever cover, apply clean engine oil to the o-ring located on the breather tube connection.

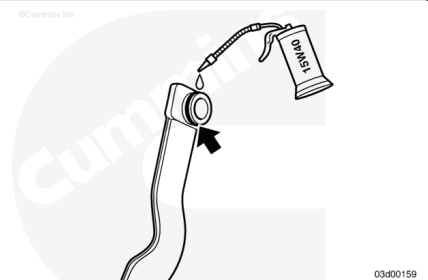


Connect the breather tube connection to the rocker lever cover.

Two capscrews directly mount the breather tube connection to the rocker lever cover. Install the capscrew(s) to connect the breather tube connection to the rocker lever cover.

Tighten the Capscrew(s).

Torque Value: 10 n•m [89 in-lb]

Note : Some breather tube connections use internal Torx capscrews to secure the breather tube connection to the rocker lever cover.

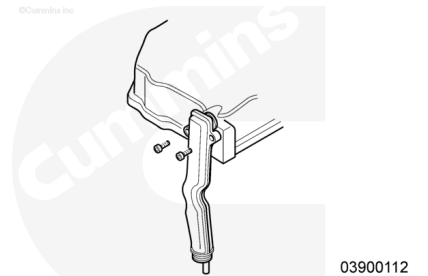


B3.9, B5.9, and B4.5 Engines

Install rocker lever cover(s).

Tighten the capscrews.

Torque Value: 24 mm [18 ft-lb]

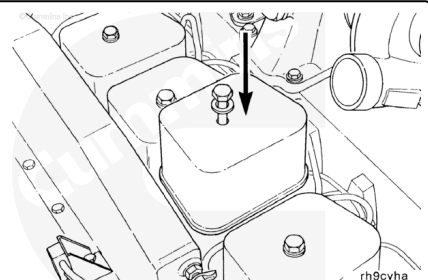


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

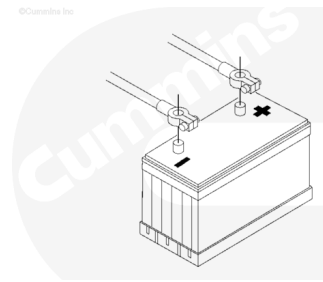

13900050