


Trainings ▾

Install

Install the tappet cover gasket onto the tappet cover. The tappet cover gasket **must** be installed as shown in the illustration.

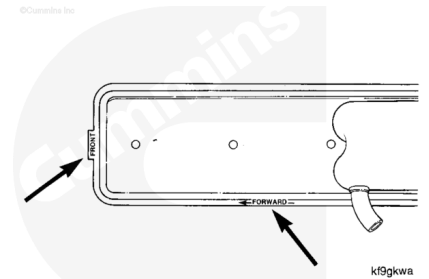

Install the tappet cover, gasket, sealing washers and mounting capscrews onto the engine block.

Note : Some of the tappet cover mounting capscrews also secure the fuel drain. It may be necessary to install the remaining mounting capscrews when the fuel drain is installed.

Tighten the tappet cover mounting capscrews.

Torque Value: 24 n•m [18 ft-lb]

