


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

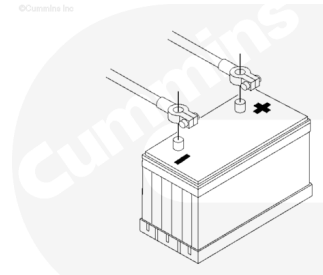

Remove


Distributor-Type Fuel Injection Pumps

Remove the fuel tube from the manifold fitting and the pump.

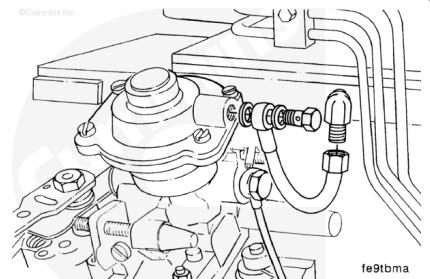

In-Line Pumps


Remove the AFC tube.

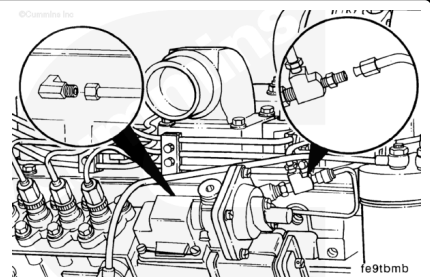

Inspect for Reuse

In-Line Pump

Inspect the rubber sealing washers, and replace as necessary.

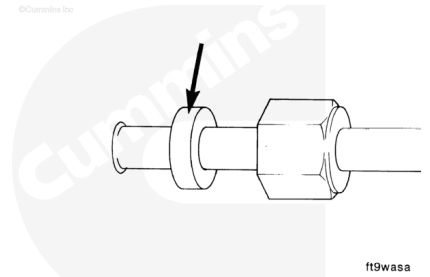


Install

Distributor-Type Pump

Note : Use new sealing washers when installing the tube.

Assemble in the reverse order of removal.


Torque Value: 9 n•m [80 in-lb]

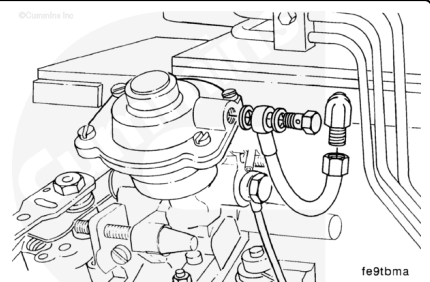

In-Line Pump

Install the AFC tube in the reverse order of removal.


Torque Value: 24 n•m [18 ft-lb]

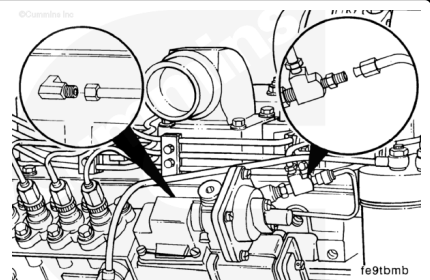

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

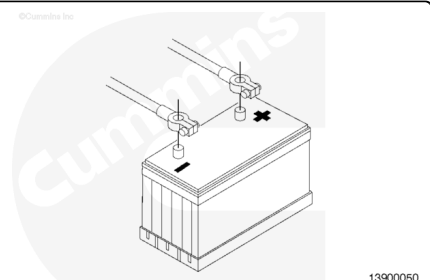

- Connect the batteries
- Operate the engine and check for leaks.

Last Modified: 31-Mar-2006
