


Trainings ▾

Drain

⚠ WARNING ⚠


Drain the fuel-water separator into a container, and dispose of contents in accordance with local environmental regulations.

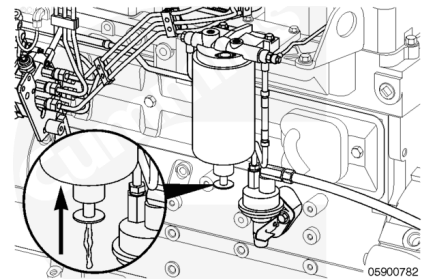

If equipped, use the filter drain valve to drain fuel out of the filter for approximately 5 seconds. This will eliminate fuel from running over the top of the filter upon removal.


Remove

Clean the area around the fuel filter head.

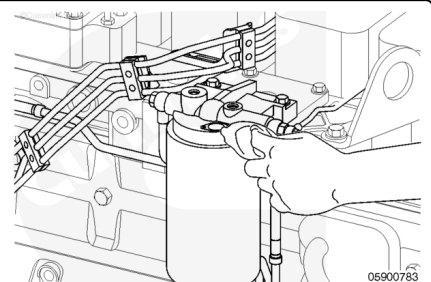

⚠ WARNING ⚠


Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

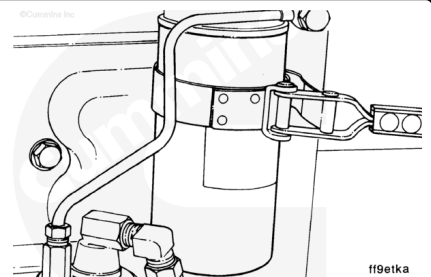

Remove the fuel filter.

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

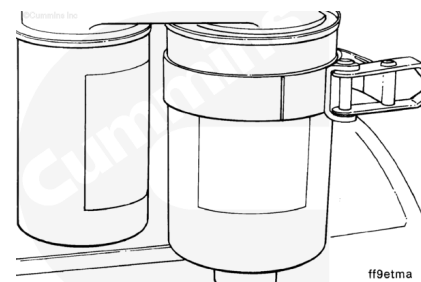

Remove the two filters from the dual-filter adapter (if equipped).