


Trainings ▾


Remove

Distributor-Type Pump


Remove the capscrews from the hold-down clamps, and complete the following steps:

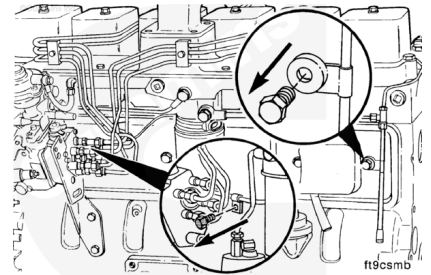

Remove the banjo fitting capscrews and washers.

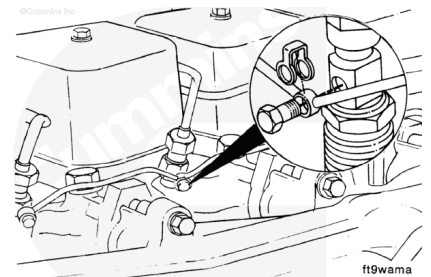


Disconnect the fuel drain line fittings.

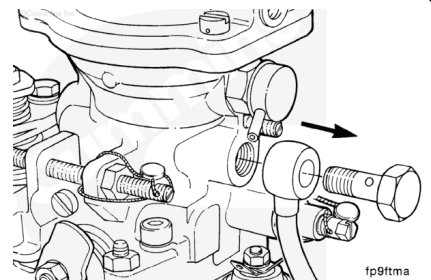

In-Line Pump

Remove the banjo capscrews and copper sealing washers at the fuel filter head.

Remove the fuel line support bracket capscrew from the intake manifold.

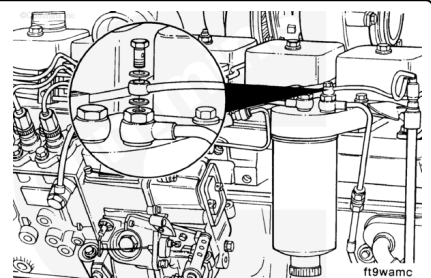

Remove the banjo capscrews and copper sealing washers from the injectors.

