

Trainings ▾


Install

Distributor-Type Pumps


Install the fuel lines to the fuel injection pump.

Note : Use two wrenches to prevent the delivery valve holder from turning.

Torque Value: 24 n•m [18 ft-lb]

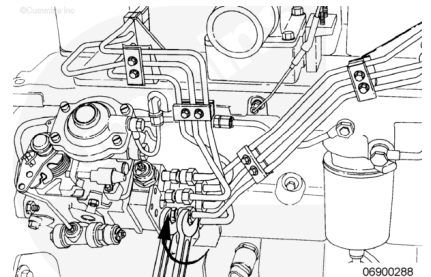


Install the fuel line clamp capscrews to the intake cover.

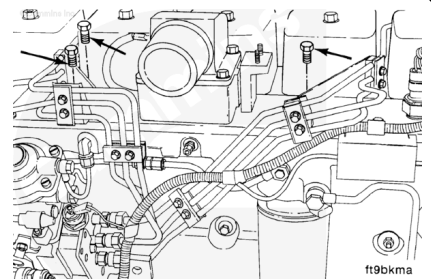


Connect the high-pressure fuel lines to the injectors.

Torque Value: 38 n•m [28 ft-lb]

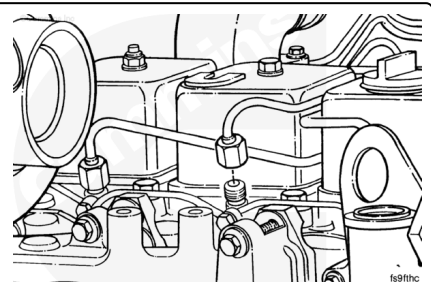


In-Line Pump

Install fuel line fittings (1), support bracket capscrews (2), vibration capscrew isolator (3), and isolators (4).

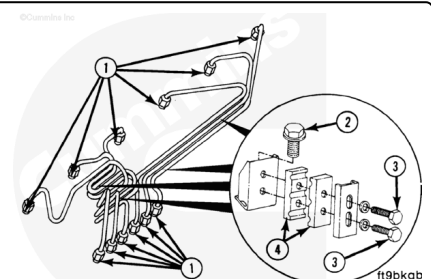


Connect the high-pressure fuel lines to the injectors.

Torque Value: 38 n•m [28 ft-lb]

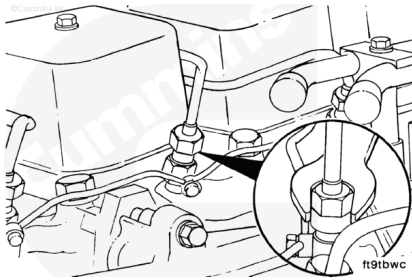

Connect the fuel line(s) to the fuel injection pump.

Torque Value: 24 n•m [18 ft-lb]

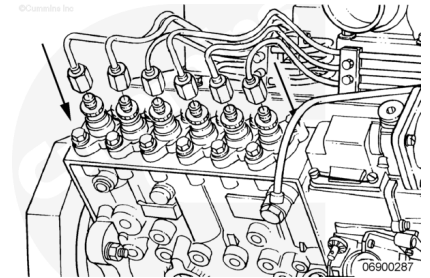

Install the fuel line clamp capscrews to the intake cover.

