

Trainings ▾

General Information

B4.5 RGT Engines

Note : This procedure applies to B4.5 RGT engines only.

If fuel flow is present at the fuel drain manifold exit in the rear of the head, then a leak exists between the fuel connector and the injector. Under normal conditions only a few drops of fuel should be present.


Preparatory Steps

B4.5 RGT Engines

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

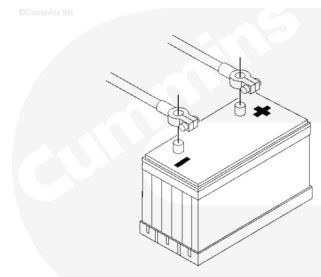

13900050

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

- Remove the injector supply lines from the fuel injection pump to the fuel connectors. Refer to Procedure 006-051



ck800wa

Remove


B4.5 RGT Engines

Remove the fuel connector retaining nut.

Install the fuel connector remover, Part Number 3164025.

Note : When removing the fuel connector from the cylinder head, care **must** be taken to make sure the connector o-ring is not damaged.

Remove the fuel connector from the cylinder head.

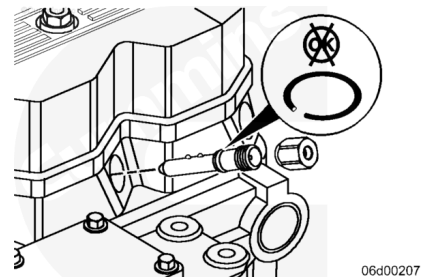

Clean and Inspect for Reuse


B4.5 RGT Engines

A new high-pressure connector **must** be installed if a new injector is being installed.

Inspect the fuel connector. Look for burrs or deformation around the inlet and outlet sides of the connector.

Check the edge filter for signs of plugging or material contamination. Do **not** reuse a high-pressure fuel connector if debris is present.


Check the o-ring for tearing or deterioration.

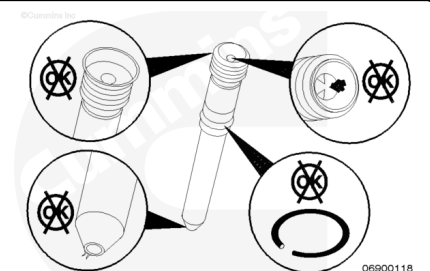

Inspect the outlet sealing surface of the high-pressure connector for wear, an uneven seating surface, or signs of leakage.

When a high-pressure fuel leak is present, small lines or cuts in the connector will be eroded into the seating surface.

The high-pressure connector and injector **must** be replaced when this failure is observed.

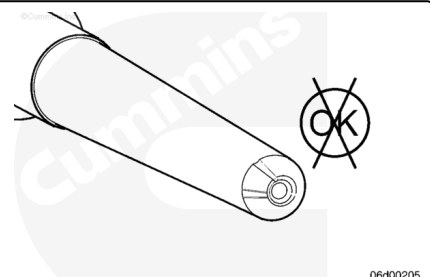

Install

B4.5 RGT Engines

A new fuel connector **must** be used when replacing the injector.


Lubricate the fuel connector o-ring and the threads on the fuel connector retaining nut.

Carefully insert the fuel connector, aligning the guide ball with the slot in the cylinder head at the 12-o'clock position.

Note : Use even axial force when installing to prevent the possibility of damage. Make sure **not** to tear the o-ring as the connector is being installed.

Note : If the injector was removed along with the high-pressure connector, the installation steps outlined in Procedure 006-026 (</qs3/pubsys2/xml/en/procedures/40/40-006-026-tr.html>) **must** be followed.

Tighten the fuel connector retaining nut.

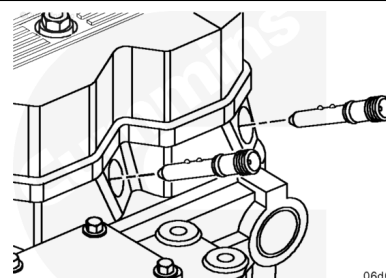

06d00204


Fuel Connector (cylinder head-mounted)	50 n.m	[37 ft-lb]
---	--------	------------

Finishing Steps

B4.5 RGT Engines

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

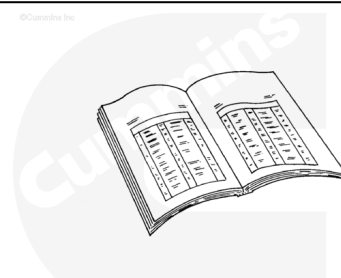


ck800wa

- Install the injector supply lines from the fuel injection pump to the fuel connectors. Refer to Procedure 006-051 (</qs3/pubsys2/xml/en/procedures/40/40-006-051-tr.html>).

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the batteries
- Operate the engine and check for leaks.

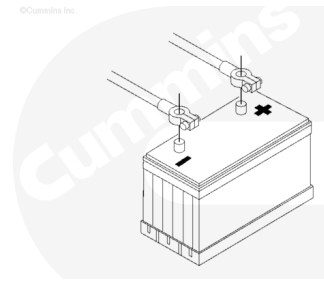

13900050