


Trainings ▾

General Information

The lubricating oil cooler is mounted between the lubricating oil cooler cover and the cylinder block. Since neither the lubricating oil cooler or lubricating oil cooler cover can be removed without removing and installing the other, this procedure covers the removal and installation of both components.

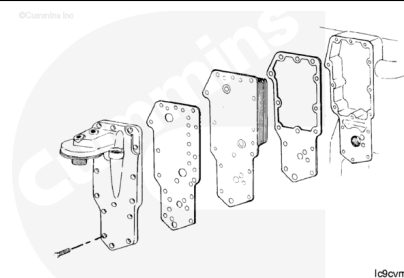


Install

Note : Be sure to remove the shipping plugs from the oil cooler element.

Note : When installing a new lubricating oil cooler be sure to use the correct part number. Replace with the same part number or use the engine serial number and QuickServe™ OnLine to ensure the use of the correct part.

Note : To make sure of the use of compatible gasket combinations, it is essential that the technical confirms both the oil cooler and filter head gaskets correctly mate with all fluid passages on the cylinder block, oil cooler element (both sides), and the filter head surfaces. This must be done by placing the gaskets on each of these surfaces, in turn, to confirm compatibility prior to final assembly.


Assemble the lubricating oil cooler cover, capscrews, gaskets, and oil cooler.

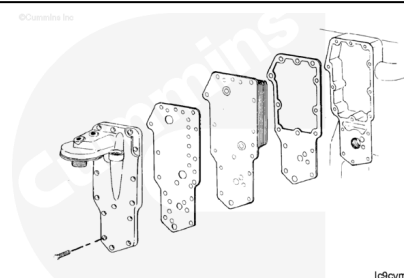

If the engine uses a lubricating oil cooler cover in which the lubricating oil filter is mounted low, use the torque sequence shown.

Note : Snug capscrew numbers six and eight, then tighten in the sequence shown.

First Stage Torque Value	17 Nm	150 in-lb
Second Stage Torque Value	28 Nm	248 in-lb

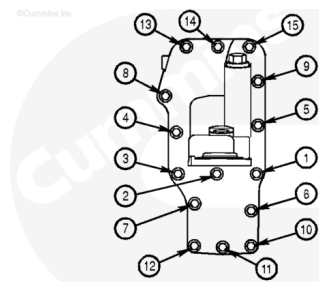


07900123

If the engine uses a lubricating oil cooler cover in which the lubricating oil filter is mounted high, use the torque sequence shown.

Note : Snug capscrew numbers six and eight, then tighten in the sequence shown.

First Stage Torque Value	17 Nm	150 in-lb
Second Stage Torque Value	28 Nm	248 in-lb

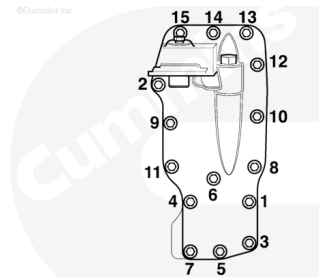

07900207