


Trainings ▾

Remove

Clean the area around the lubricating oil filter head.

Use the oil filter wrench, Part Number 3400158, to remove the filter.

Clean the sealing surface of the filter head.

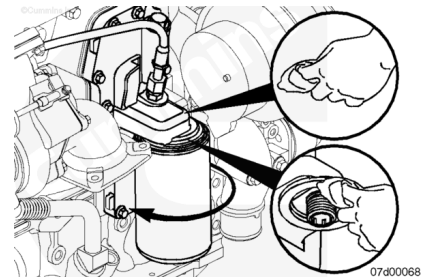

Install


⚠ CAUTION ⚠

The lack of lubrication during the delay until the filter is pumped full of oil at start-up can damage the engine.

Use clean 15W-40 oil to coat the gasket surface of the filter.

Fill the filter with clean 15W-40 oil.

Note : Be careful that no debris is poured into the filter.
If using an oil supply with a metallic or plastic seal under the cap, be careful to peel the seal back.
Puncturing the seal with a knife or sharp object can create debris in the oil container.

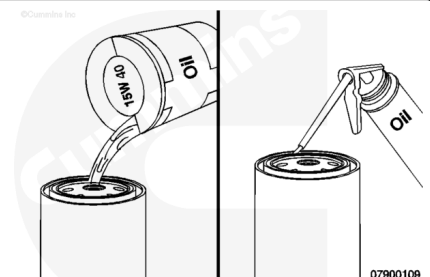


⚠ CAUTION ⚠

Mechanical overtightening of the filter can distort the threads or damage the filter element seal.

Install the filter on the oil filter head. Tighten the filter until the gasket contacts the filter head surface.


Tighten 3/4 turn to 1 turn after gasket makes contact with the filter head.

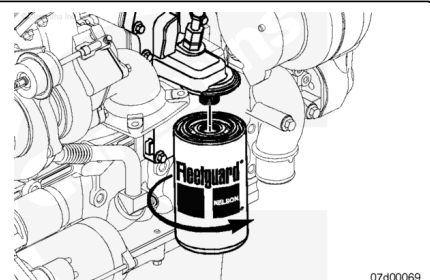

Finishing Steps

⚠ CAUTION ⚠

If the engine does not produce oil pressure in 15 seconds after starting the engine, shut off the engine to avoid component damage.

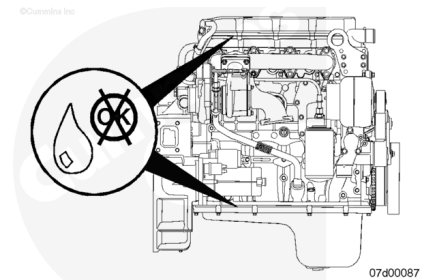

Operate the engine and check for leaks.

Shut down the engine and check the oil level. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/40/40-007-037.html>).