

Trainings ▾


Remove

Rear Gear Train


Note : Rear gear train engines use a suspended oil pan that consists of the oil pan, mounting flange, and a flexible gasket.

Remove the oil pan mounting capscrews, oil pan, mounting flange, and flexible gasket.

The lubricating oil pan flange can be damaged if a prybar or screwdriver is used to break the formed-in-place gasket seal. Use a utility knife or the edge of a putty knife to cut the seal and loosen the pan.

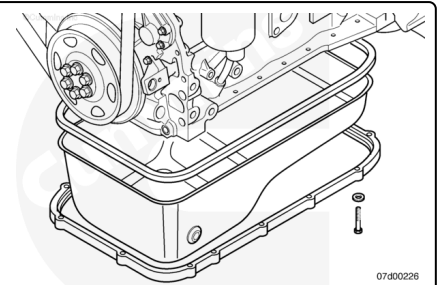


Remove the suction tube, if necessary. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html>)

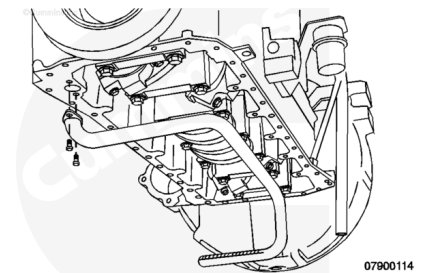

Front Gear Train

Remove the lubricating oil pan and gasket.

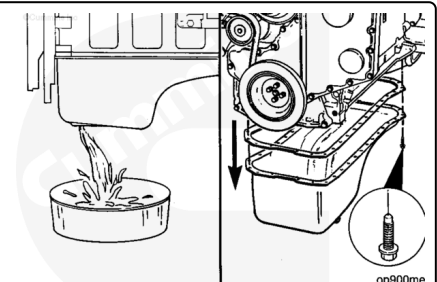


Remove the lubricating oil suction tube, if necessary. Refer to Procedure 007-035 in Section 7.

(</qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html>)

Note : For front gear train engines, the suction tube **must** be removed in order to remove the bedplate.

©Cummins Inc.

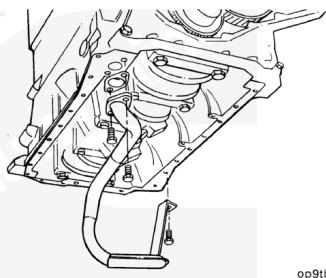


op9tbmb

Remove the bedplate, if equipped.

Remove the capscrews securing the bedplate.

A knife may be required to cut the sealant between the bedplate and the block.

©Cummins Inc.

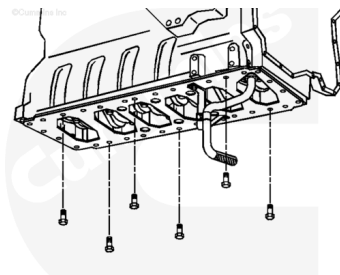

07900179