

Trainings ▾


Remove

Front Gear Train

Note : Depending on the type of cylinder block, there are two types of coolant heaters used. A bolted coolant heater and a threaded coolant heater. Both are located adjacent to the lubricating oil cooler.


For bolted coolant heaters, loosen the block heater retaining nut.

Remove the coolant heater from the block.

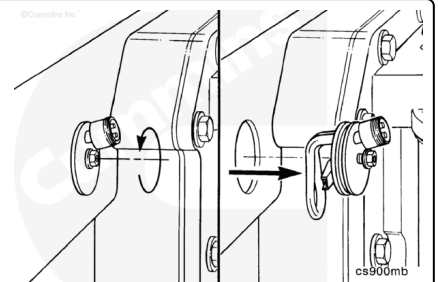

For threaded coolant heaters, unthread the coolant heater from the block.

Remove the coolant heater from the block.

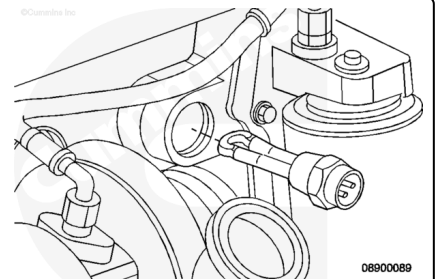


Rear Gear Train

Note : Depending on the type of cylinder block, there are two types of coolant heaters used. A flange mounted coolant heater and a threaded coolant heater.


For flange mount coolant heaters, remove the two retaining capscrews.

Remove the coolant heater from the block.

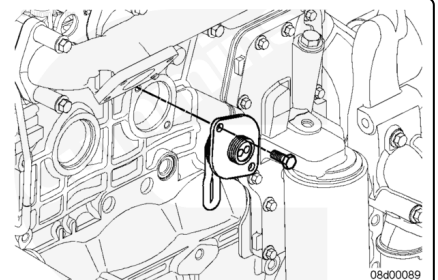

For threaded coolant heaters, unthread the coolant heater from the block.

Remove the coolant heater from the block.

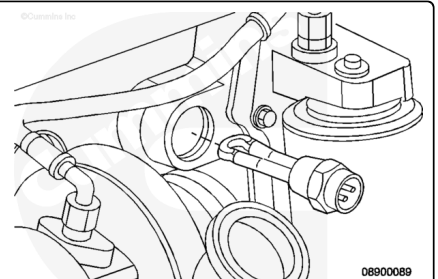

Last Modified: 24-Apr-2006
