


Trainings ▾

Install

Front Gear Train

⚠ CAUTION ⚠

Always use the correct thermostat, and never operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path of least resistance for the coolant is through the bypass to the pump inlet. An incorrect thermostat can cause the engine to overheat or run too cold.

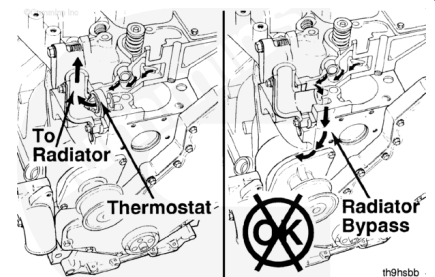


Position the thermostat as shown in the illustration.

Package the lifting bracket and thermostat gasket to the thermostat and thermostat housing.

Make sure the gasket is aligned with the capscrew holes. Install the capscrews and finger tighten.


The notched end of the rubber thermostat seal points away from the cylinder head.

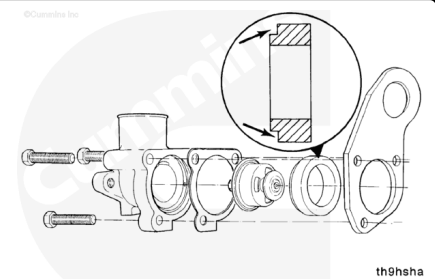

Install the removed parts in the reverse order of removal.

Install the thermostat, thermostat seal, thermostat housing, gasket, lifting bracket, and three capscrews.

Torque Value: 24 n·m [18 ft·lb]

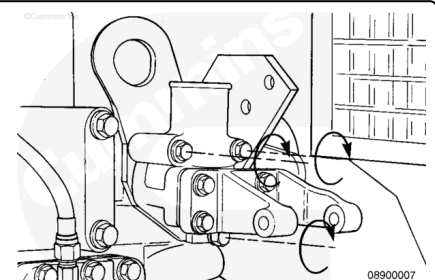

Rear Gear Train


⚠ CAUTION ⚠

Always use the correct thermostat and do not operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path

of least resistance for the coolant is through the bypass to the pump inlet. An incorrect thermostat can cause the engine to overheat or run too cold.

Install the thermostat into the thermostat housing.

Note : Make sure a new thermostat seal is installed on the outer lip of the thermostat flange every time the thermostat is reinstalled.

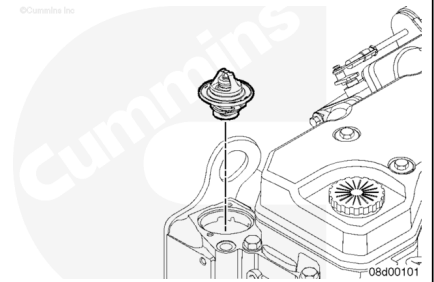

Install the water outlet connection and mounting capscrews.

Tighten the capscrews.

Torque Value: 10 n•m [89 in-lb]

