


Trainings ▾

Install

Do **not** use Loctite™ or any other thread locking compounds. Make sure capscrew head surface and threads are clean and free of debris.


Use new capscrew if any damage is found.

Lubricate the threads and underside of the capscrew head with clean 15W-40 engine lubricating oil.

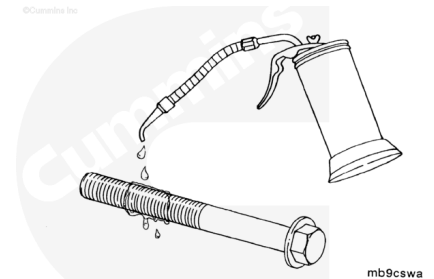

Note : Make sure to install the electric fan clutch mounting bracket in the same orientation and location as removed. The mounting bracket can be installed in different orientations for different fan drive arrangements.

Install the electric fan clutch support bracket, wiring harness pigtail P-clip and mounting capscrews.

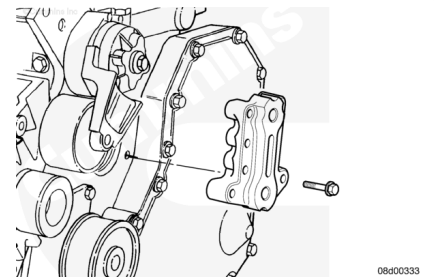

Torque Value: 33 n•m [24 ft-lb]

Note : The electric fan clutch mounting capscrew has an external Torx™ head.

Install the electric fan clutch, washer and mounting capscrew.

Prior to tightening the capscrew, rotate the fan clutch so that the wires coming out of the back of the fan clutch are captured by the P-clip. Bend the P-clip over by hand to secure the wires.

Note : Make sure that wires are not being pulled at the fan clutch.

Tighten the fan clutch mounting capscrew.

Torque Value:

1. 102 n•m [75 ft-lb]
2. Rotate 60 degrees

