


Trainings ▾

Install

Install the new sealing ring into the pump groove.

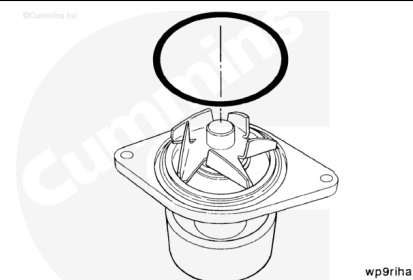

Install the water pump (with seal) and mounting capscrews.

Torque Value:

9.8 Grade

1. 24 n•m [212 in-lb]

Torque Value:

10.9 Grade

1. 30 n•m [22 ft-lb]

