

Trainings ▾

Initial Check

Rear Gear Train

Note : If oil supply to the accessory drive is **not** required and the gasket does **not** have oil passages, this check is **not** required. If the accessory drive uses o-rings for seals, this check is **not** required.


Prior to installing the accessory drive, identify which gasket is going to be installed so that, if necessary, the gasket can be properly oriented.

There are two types of accessory drive gasket:

1. Three round oil supply passages and one elongated oil supply passage
2. Four round oil supply passages.

It is preferred that, when installing the accessory drive, the gasket with the four round oil supply passages be used. The gasket can be installed in any orientation.

If only the gasket with the one elongated oil supply passage is available, install the gasket so that the elongated oil supply passage is **not** over the oil supply hole in the gear housing.

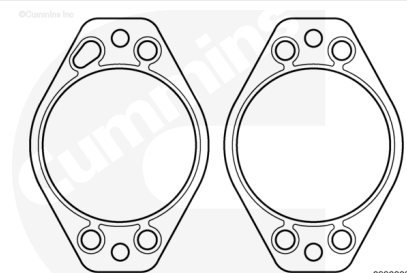


Install

⚠ CAUTION ⚠

Failure to line up the oil supply hole to the accessory drive properly will result in accessory drive damage.

Install the accessory drive and new gasket.

Note : If required, when installing the accessory drive and gasket, make sure the oil supply hole in the gear housing is lined up with the holes in the accessory

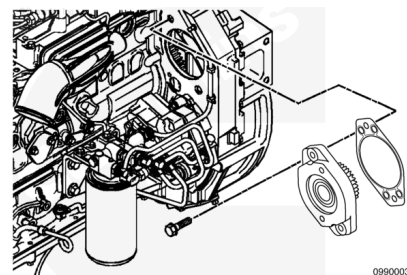

drive and gasket. The accessory drive is marked for “Top” and “Bottom”.

Install and tighten the two capscrews securing the accessory drive to the rear gear housing.

Torque Value: 62 n•m [46 ft-lb]

Last Modified: 31-Mar-2006
