

Trainings ▾

Install


Prior to installing the accessory drive cover, identify which style of gasket is going to be installed so that, if necessary, the gasket can be properly oriented.

There are two types of accessory drive cover gaskets:

1. Three round oil supply passages and one elongated oil supply passage
2. Four round oil supply passages.

It is preferred that, when installing the accessory drive, the gasket with the four round oil supply passages be used. The gasket can be installed in any orientation.

If only the gasket with the one elongated oil supply passage is available, install the gasket so that the elongated oil supply passage is **not** over the oil supply hole in the gear housing.

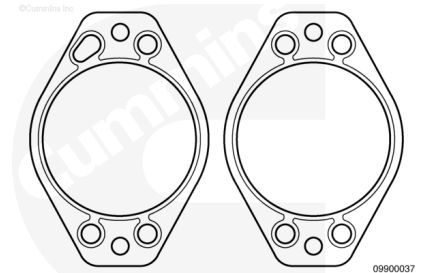

Install the accessory drive cover, gasket and mounting capscrews. Tighten the mounting capscrews.

Torque Value: 50 n•m [40 ft-lb]

