


Trainings ▾


Install

Install a new gasket, and apply anti-seize compound to the mounting studs.

Note : Use **only** lead-free anti-seize compound compatible with oxygen sensors.

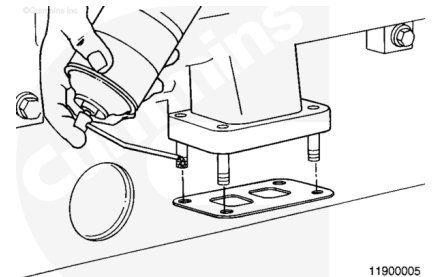


Install a new gasket, and apply anti-seize compound to the mounting studs.

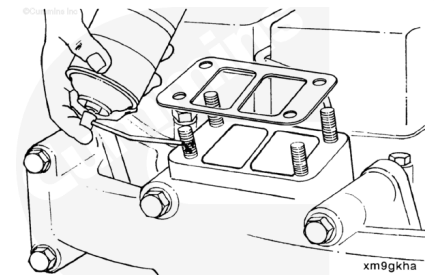


Install the turbocharger.

Torque Value: 45 n•m [33 ft-lb]

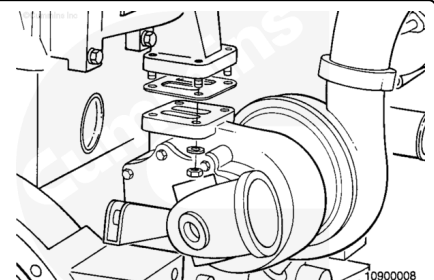


Install the turbocharger.

Torque Value: 45 n•m [33 ft-lb]

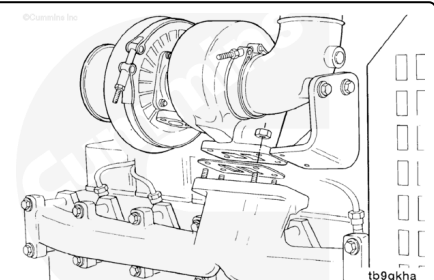


Use a new gasket and connect the oil drain tube.

Torque Value: 24 n•m [18 ft-lb]

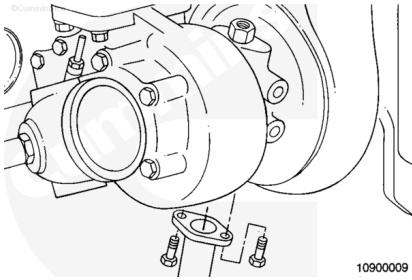

Install the turbocharger coolant lines.


Note : Keep coolant line horizontal when tightening.

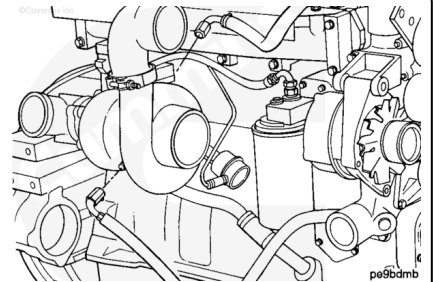

Note : New turbochargers must be prelubricated before startup.


Pour 50 to 60 cc [2 to 3 oz] of clean engine oil into the oil supply fitting.

Rotate the turbine wheel to allow the oil to enter the bearing housing.

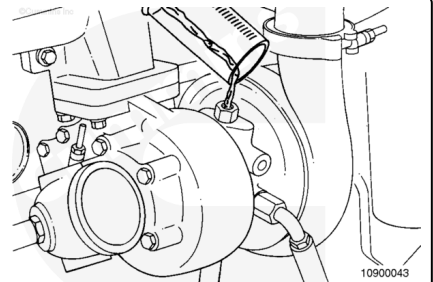


Connect the oil supply line.


Torque Value: 35 n·m [26 ft-lb]

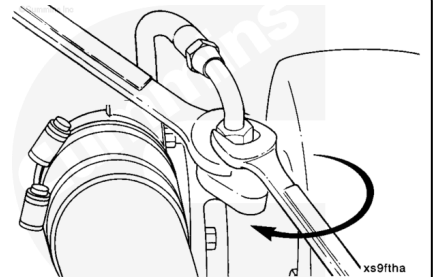

If required, loosen the compressor housing v-band clamp and position the housing to align with the turbocharger air outlet tube.

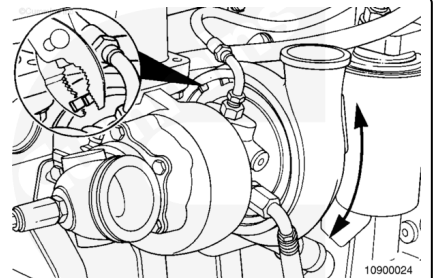

Install the wastegate actuator capsule actuator hose.

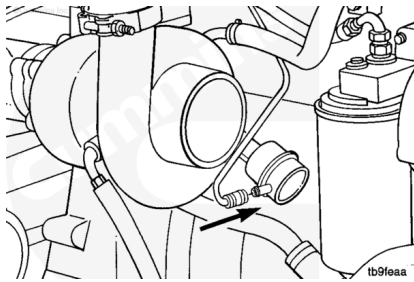

Install charged air cooler hose.

Install the air inlet and exhaust piping.

Torque Value: 8 n•m [71 in-lb]

Fill the cooling system. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/40/40-008-018-tr.html>)

Operate the engine. Check for leaks.

