


Trainings ▾

Install

⚠ CAUTION ⚠

Maintain a minimum distance of 10 mm [0.39 in] between the oil supply line and the turbine housing or exhaust manifold, and 5 mm [0.20 in] between the oil supply line and other components to prevent oil line high temperature damage and chafing.

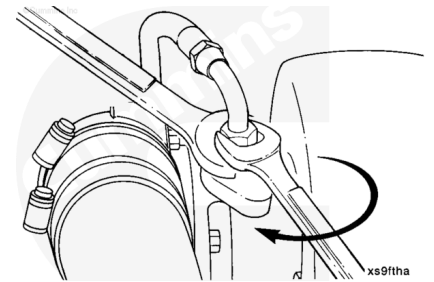

Apply a thin film of oil to the o-ring seals.

Fill the turbocharger oil inlet with clean oil.

Install the oil supply line at both the filter head and the turbocharger bearing housing.

Tighten the oil supply line to final torque.

Torque Value: 24 n•m [212 in-lb]