


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

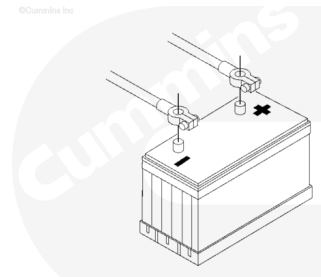

13900050


- Remove the air intake piping. Refer to Procedure 010-024 (</qs3/pubsys2/xml/en/procedures/40/40-010-024-tr.html>).



ck800wa

Remove

Remove the v-band clamp, the elbow piece of the air intake connection adapter, and the seal.

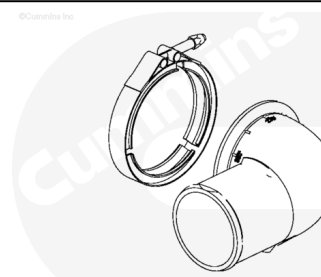


10d00133

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

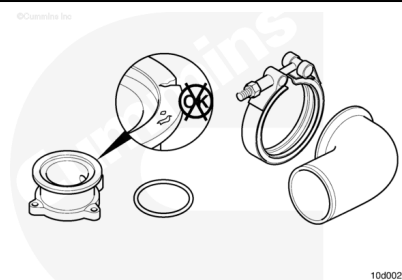

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the air intake connection adapter with solvent and dry with compressed air.

Inspect the air intake connection adapter, seal, and clamps for damage, cuts, cracks, holes, or worn sections.


Replace components if necessary.

Install

Install the seal, air intake connection adapter elbow, and V-band clamp.


Tighten the V-band clamp.

Torque Value: 8 n·m [71 in-lb]

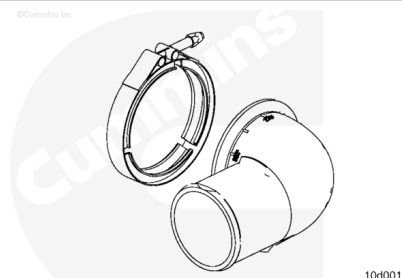

Finishing Steps

- Install the charge air piping. Refer to Procedure 010-024 (</qs3/pubsys2/xml/en/procedures/40/40-010-024-tr.html>).

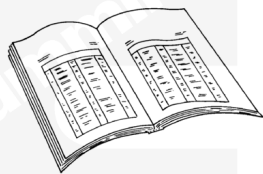


ck800wa

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate engine and check for leaks.

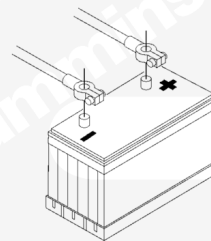

13900060