


Trainings ▾

Initial Check


Shut off the engine.

Open the draincock on the wet tank to release compressed air from the system.

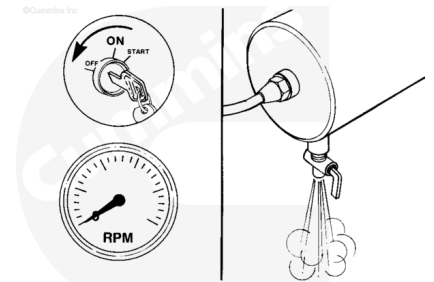

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

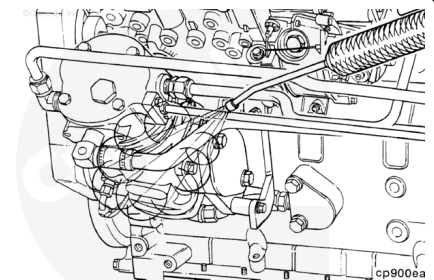


⚠ WARNING ⚠

Compressed air used for cleaning purposes should not exceed 207 kPa [30 psi]. Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Use steam to clean the compressor.


Use compressed air to dry.

Remove the air inlet and outlet connections from the air compressor.

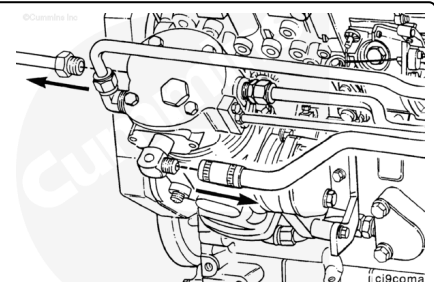


Measure the total carbon deposit thickness inside the air discharge line as shown.

Note : The carbon deposit thickness must not exceed 1.6 mm [0.0630 in].

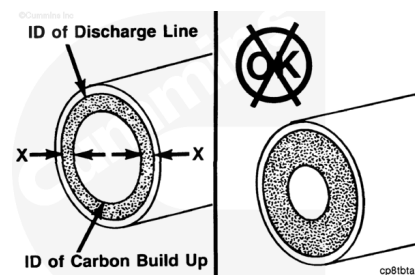

⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the manufacturer's specifications.

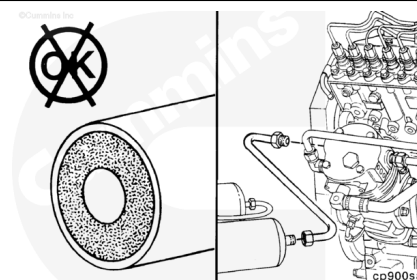

Note : If the total carbon deposit thickness exceeds specification:

- Remove and clean, or replace, the air discharge line. Refer to manufacturer's material specifications
- Remove and inspect unloader components and cylinder head.