


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

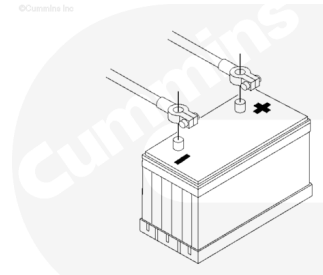

Remove

Remove the coolant lines from the air compressor (does **not** apply to air cooled compressors).

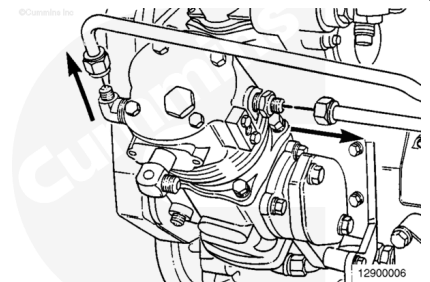


Install

⚠ CAUTION ⚠

If rubber grommets are used on the coolant lines, be sure they are installed carefully to prevent cuts or tears to the grommets which will cause leaks.

Install the coolant lines.

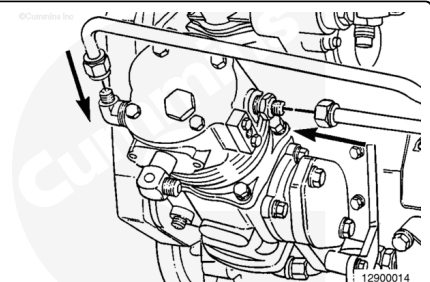


Torque Value: 24 n•m [18 ft-lb]

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate engine and check for leaks.

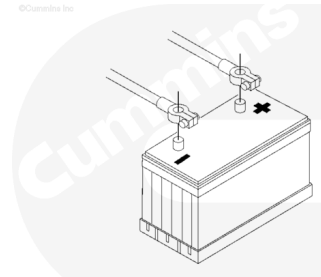

13900050